


Mid-Size Sure Stand Seeder Models SS108/SS110/SS112 SSP108/SSP110/SSP112 Operator's Manual

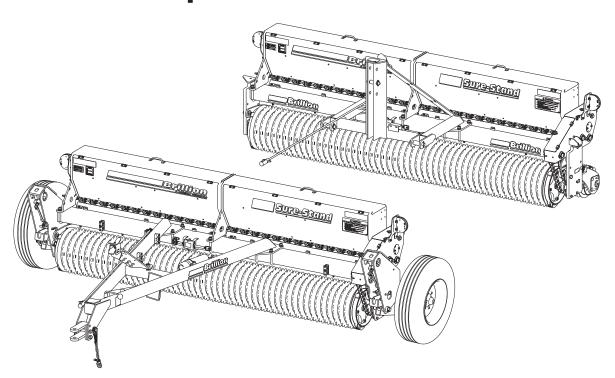

LANDOLL COMPANY, LLC

1900 North Street Marysville, Kansas 66508 (785) 562-5381

800-428-5655 ~ WWW.LANDOLL.COM

Instructions for Ordering Parts

** Repair parts must be ordered through an Authorized Dealer **

DEALER INSTRUCTIONS FOR ORDERING PARTS FROM LANDOLL PARTS DISTRIBUTION CENTER

Phone #: 800-423-4320 or 785-562-5381 Fax #: 888-527-3909

Order online: dealer.landoll.com

DATA PLATE

The Data Plate, which lists the model and serial number of the equipment, is located on the right side of the Sure Stand Seeder.

SERIAL NUMBER NOMENCLATURE

The following information will help decode the Landoll serial number.

ASD2100100 = xxmyysssss

xx	= model series (i.e. "AS" for all AG Seeders)
m	= month of manufacture (ex. "D" means April. The letter I is not used.)
уу	= last digits of the year manufactured (ex. "21" means 2021)
sssss	= Sequential number used to track warranty and service information.



Figure: Data Plate

Manuals for High Capacity Sure Stand Seeder, Models SS108/SS110/SS112 and SSP108/SSP110/SSP112

Manual Number	Manual Type
9K713	Operator's Manual
9K712	Parts Manual

DANGER

DO NOT operate or perform any maintenance tasks on this equipment until you have completed the following:

- 1. Receive proper training to operate this equipment safely.
- 2. Read and understand the operator's manual.
- 3. Be thoroughly trained on inspection and repair procedures.

Failure to comply with this warning may result in serious injury or possibly death.

Table of Contents

1	Safety Information	
	Introduction	1-1
	Description of Unit	1-1
	Using this Manual	1-1
	Owner Assistance	1-1
	Warranty Registration	1-1
	Safety	1-2
	Understanding Safety Statements	1-2
	High Power Magnet	1-2
	Transporting Safety	1-3
	Safety Instructions for Towing Vehicles	
	Attaching, Detaching and Storage	
	Maintenance Safety	
	Protective Equipment	
	Prepare for Emergencies	
	Tire Safety	
	Chemical Safety	
	Safety Chain	
	Decals	1-5
2	Assembly	
_	3-PT Hitch Seeder Assembly (After 08/2025)	2-2
	3-PT Hitch Seeder Assembly (Before 08/2025)	
	Pull Type Seeder Assembly (After 08/2025)	
	Pull Type Seeder Assembly (Before 08/2025)	
	Tire and Wheel Installation	
	Hydraulic Installation	
	Purge the Hydraulic Lift System	
	Warning Lamp Installation, 8FT (Aft. 08/2025)	
	Warning Lamp Installation, 10FT and 12FT (Aft. 08/2025)	
	Warning Lamp Installation, 8FT and 10FT (Bef. 08/2025)	
	Warning Lamp Installation, 12FT (Bef. 08/2025)	
	Electric Clutch Kit - Optional	
	Brillion Elite Mini Monitor - Optional	
	Brillion Elite Mini Monitor Electrical Schematic	
	Brillion Elite Mini Monitor - Ground Speed Sensor	
	Brillion Elite Mini Monitor - Front Seed Box Seed Shaft Sensor	
	Brillion Elite Mini Monitor - Bin Level Sensor	2-25
	Brillion Elite Mini Monitor Tractor Installation - Optional	2-26
	Acre Meter Kit - Optional	
	Console w/Clutch Control Installation - Optional	
	Console w/Clutch Control Seed Shaft Sensor - Optional	

9K713-2509 i

	Console w/Clutch Control Tractor Installation - Optional	2-32
	Scraper Kit, Tube Mounted - Optional	2-34
	S-Tine Tire Track Remover Kit - Optional	2-38
	Coil Tine Track Remover - Optional	2-42
3	Operation	
	Tractor Preparation	3-2
	Tractor Preparation for Attaching 3-PT Seeder	
	Attaching/Detaching 3-PT Hitch Seeder	
	Tractor Preparation for Attaching Pull Type Seeder	
	Attaching/Detaching Pull Type Seeder	
	General Operation	
	Hydraulic Lift System	
	Transmission Electric Clutch - Optional	
	Brillion Elite Mini Monitor - Optional	
	Console w/Clutch Control - Optional	
	Seed Box Seed Rate Adjustment	3-9
	Transmission Drive Bolt	
	Calibration for Unlisted Seeds	3-11
	Speed-Up Kit - Optional	3-13
	Electronic Acre Meter Kit - Optional	3-14
	Loup Acre Meter (After 06/01/2025)	3-14
	Loup Acre Meter (05/15/2012 TO 06/01/2025)	3-16
	Loup Acre Meter (Before 05/15/2012)	3-17
	Acre Meter Settings	3-18
	Transporting the Seeder	3-21
4	Brillion Elite Mini Monitor	
	Overview	4-1
	Main Screen Layout	4-1
	Speed & Icon Selection	
	Field & Total Acres	4-1
	Alarms	4-1
	Settings Menu - Speed Settings	4-2
	Speed Source	
	Speed Source Displays	4-3
	Speed Source Icon Features	4-3
	Pulses Per Revolution	4-3
	Wheel Pulses Per 400FT	4-3
	Radar Pulses Per 400FT	4-3
	Speed (Simulated Speed)	4-3
	Speed Calibration	4-4
	Implement Switch	4-4
	Implement Switch Setup	4-4

ii 9K713-2509

	Settings Menu - Clutch Setting	4
	Settings Menu - Install Setup	5
	Learn New System	5
	Remove A Sensor4-	5
	Add A Sensor	5
	Settings Menu - Shaft Settings	6
	Seed Shaft Settings	6
	Settings Menu - Diagnostics	6
	Settings Menu - GPS Settings 4-	6
	GPS Status4-	6
	GPS Baudrate4-	6
	GPS Speed Correction	6
	Settings Menu - Display Settings	7
	Brightness4-	7
	Volume	7
	Units	7
	Clock (Date & Time)	7
	System Update	7
	Update App4-	7
	Factory Reset	7
	Service And Technical Support4-	7
	Солостина объемной образование объемной объемнои объемной объемной объемной объемной объемной объемной объемнои	
5	Maintenance	
5	Maintenance	1
5	Maintenance General Torque Specifications	
5	Maintenance General Torque Specifications	2
5	Maintenance5-General Torque Specifications5-Hydraulic Fitting Torque Specifications5-Fasteners5-	2 3
5	Maintenance General Torque Specifications	2 3 3
5	Maintenance5-General Torque Specifications5-Hydraulic Fitting Torque Specifications5-Fasteners5-Tires5-	2 3 3
5	Maintenance5-General Torque Specifications5-Hydraulic Fitting Torque Specifications5-Fasteners5-Tires5-Wheel Hub Bearing Maintenance5-Lubrication Maintenance5-	2 3 3 3
5	Maintenance5-General Torque Specifications5-Hydraulic Fitting Torque Specifications5-Fasteners5-Tires5-Wheel Hub Bearing Maintenance5-	2 3 3 3 5
5	Maintenance5-General Torque Specifications5-Hydraulic Fitting Torque Specifications5-Fasteners5-Tires5-Wheel Hub Bearing Maintenance5-Lubrication Maintenance5-Hydraulic Maintenance5-	2 3 3 5 5
5	Maintenance5-General Torque Specifications5-Hydraulic Fitting Torque Specifications5-Fasteners5-Tires5-Wheel Hub Bearing Maintenance5-Lubrication Maintenance5-Hydraulic Maintenance5-Front and Rear Roller Adjustment5-	2 3 3 5 5 6
5	Maintenance5-General Torque Specifications5-Hydraulic Fitting Torque Specifications5-Fasteners5-Tires5-Wheel Hub Bearing Maintenance5-Lubrication Maintenance5-Hydraulic Maintenance5-Front and Rear Roller Adjustment5-Chain Tension5-	23335567
5	Maintenance5-General Torque Specifications5-Hydraulic Fitting Torque Specifications5-Fasteners5-Tires5-Wheel Hub Bearing Maintenance5-Lubrication Maintenance5-Hydraulic Maintenance5-Front and Rear Roller Adjustment5-Chain Tension5-Seed Meter Adjustment5-	2333355678
5	Maintenance5-General Torque Specifications5-Hydraulic Fitting Torque Specifications5-Fasteners5-Tires5-Wheel Hub Bearing Maintenance5-Lubrication Maintenance5-Hydraulic Maintenance5-Front and Rear Roller Adjustment5-Chain Tension5-Seed Meter Adjustment5-Warning Lamps5-	23333556788
5	Maintenance5-General Torque Specifications5-Hydraulic Fitting Torque Specifications5-Fasteners5-Tires5-Wheel Hub Bearing Maintenance5-Lubrication Maintenance5-Hydraulic Maintenance5-Front and Rear Roller Adjustment5-Chain Tension5-Seed Meter Adjustment5-Warning Lamps5-Scraper Adjustment5-	233335567889
5	MaintenanceGeneral Torque Specifications5-Hydraulic Fitting Torque Specifications5-Fasteners5-Tires5-Wheel Hub Bearing Maintenance5-Lubrication Maintenance5-Hydraulic Maintenance5-Front and Rear Roller Adjustment5-Chain Tension5-Seed Meter Adjustment5-Warning Lamps5-Scraper Adjustment5-Electric Clutch - Optional5-	2333355678899

9K713-2509 iii

Table provided for gene			
NOTES:			

iv 9K713-2509

Safety Information

Introduction

The implement described in this manual has been designed with care and built by skilled workers using quality materials and processes. Proper assembly, maintenance and safe operation will allow this machine to provide you with satisfactory use for seasons to come.

DANGER

Read this entire manual before attempting to assemble, adjust or operate this machine. Failure to comply with this warning can result in personal injury or death, damage to the machine or its components and inferior operation.

Description of Unit

The Brillion Sure Stand Agriculture Seeder provides precision seed metering and accurate seed depth placement, offering optimum germination. The SS1 Series Seeder offers more capacity by utilizing a Mid-Size Seed Box with Micro-Meters, spaced 4-1/4" for an even better distribution of small seed varieties. Micro-Meters can be adjusted to permit precise metering with an infinite range of settings. Units are available in 3-PT Hitch and Drawbar.

Using this Manual

This manual will familiarize you with safety, assembly, operation, adjustment, and maintenance. Read this manual and follow the recommendations to help ensure safe and efficient operation.

- The information in this manual is current at time of printing. Some parts may change to assure top performance.
- Location reference: Right and Left designations in this manual are determined by facing the direction the machine will travel during field operation, unless otherwise stated.

Owner Assistance

If customer service or repairs are needed, contact your Brillion dealer. Implement parts should only be replaced with Brillion parts. Have the Serial Number and complete Model Number available when ordering parts from your Brillion dealer. If items covered in this manual are not understood, contact your local Brillion dealer.

Warranty Registration

To be eligible for Warranty, registration must be on file at Landoll Company, LLC. It is the responsibility of the dealer to register the machine within 10 days of purchase or lease on the Dealer Portal. Check with the dealer to verify the machine has been registered.

NOTE: IMPROPER ASSEMBLY, MODIFICATION, OR MAINTENANCE OF YOUR LANDOLL MACHINE CAN VOID YOUR WARRANTY.

Enter your product information below for quick reference. Refer to the Data Plate as shown. **See Figure 1-1.**

MODEL NUMBER

SERIAL NUMBER

DATE OF PURCHASE



Figure 1-1: Data Plate

Safety

NOTE

Investigation has shown that nearly 1/3 of all farm accidents are caused by careless use of machinery. Insist that all people working with you or for you abide by all safety instructions.

Understanding Safety Statements

You will find various types of safety information on the following pages and on the machine decals (signs) attached to the implement. This section explains their meaning.

NOTICE

Special notice - read and thoroughly understand.

! CAUTION

Proceed with caution. Failure to heed caution may cause injury to person or damage product.

WARNING

Proceed with caution. Failure to heed warning <u>will</u> cause injury to person or damage product.

DANGER

Proceed with extreme caution. Failure to heed notice will cause injury or death to person and/or damage product.

NOTE

You should read and understand the information contained in this manual and on the machine decals before you attempt to operate or maintain this equipment.

- Examine safety decals and be sure you have the correct safety decals for the machine. See Figure 1-3.
- Order replacement decals through your Brillion dealer
- Keep these signs clean so they can be observed readily. It is important to keep these decals cleaned more frequently than the machine. Wash with soap and water or a cleaning solution as required.
- Replace decals that become damaged or lost. Also, be sure that any new machine components installed during repair include decals which are assigned to them by the manufacturer.

 When applying decals to the machine, be sure to clean the surface to remove any dirt or residue.
 Where possible, sign placement should protect the sign from abrasion, damage, or obstruction from mud, dirt. oil etc.

DANGER

- Do not allow anyone to ride on tractor or machine. Riders could be struck by foreign objects or thrown from the machine.
- Never allow children to operate equipment.
- Keep bystanders away from machine during operation.

High Power Magnet

The Brillion Elite Mini Monitor uses very powerful Neodymium Magnets. Read all the warnings before operating the machine.

! WARNING

- Neodymium Magnets are brittle; they can be broken or can splinter in a collision. One should wear gloves and protective glasses when handling these magnets, because splinters and/or spacers could disengage and fly from the magnets.
- Normal Neodymium Magnets will lose their magnetic properties if heated above 175°F (80° C).
- 3. The strong magnetic fields of Neodymium Magnets can damage items such as televisions, computer monitors, credit cards, bank cards, computers, diskettes and other data carriers, video tapes, mechanical watches, hearing aides, loud speakers and VCRs. Pace-Makers may be damaged or switch to "Test Mode" in the presence of a strong magnetic force, if a Pace-Maker or other electrical body implant is in use, Keep a Minimum of 3 Feet Distance.
- 4. Children should not be allowed to handle Neodymium Magnets as they can be dangerous. Small magnets pose a choking hazard and should never be swallowed or inserted into any part of the body.
- Under no circumstances should you try to cut, saw or drill the Neodymium Magnet! Not only would the magnet break, but the resulting dust from the magnet is very flammable. Neodymium Magnets should never be burned, as burning them will create toxic fumes.

1-2 9K713-2509

Transporting Safety

IMPORTANT

It is the responsibility of the owner/operator to comply with all state and local laws.

- When transporting the machine on a road or highway, use adequate warning symbols, reflectors, lights and slow moving vehicle sign as required. Slow moving tractors and towed implements can create a hazard when driven on public roads. They are difficult to see, especially at night.
- Do not tow an implement that, when fully loaded, weighs more than 1.5 times the weight of the towing vehicle.
- Carry reflectors or flags to mark tractor and implement in case of breakdown on the road.
- Do not transport at speeds over 20 MPH under good conditions. Never travel at a speed which does not allow adequate control of steering and stopping. Reduce speed if towed load is not equipped with brakes
- Avoid sudden stops or turns because the weight of the machine may cause the operator to lose control of the tractor.
- Use caution when towing behind articulated steering tractors; fast or sharp turns may cause the machine to shift sideways.
- Keep clear of overhead power lines and other obstructions when transporting. Know transport height and width of your machine. See "Specifications" on Pages 6-1 through 6-3.

Safety Instructions for Towing Vehicles

The maximum travel speed is the lesser of

- · The limit of the road conditions;
- · The maximum specified ground speed;
 - for towing operations as indicated in this manual or SIS;
 - of the towed vehicle as indicated in its operator's manual, SIS, or information sign;
- The maximum ground speed of the towed equipment combination shall be limited to the lowest specified ground speed of any of the towed machines. This speed is the ground speed limitation.

EXAMPLE: If the tractor is capable of 25 mph, the first implement has a SIS for 19 mph, and the last implement's operator's manual states its specified ground speed is 15 mph, the towed equipment combination ground speed limitation is 15 mph.

Attaching, Detaching and Storage

- Do not stand between the tractor and machine when attaching or detaching machine unless both are not moving.
- Before applying pressure to the hydraulic system, be sure all connections are tight and that hydraulic hoses are not damaged.
- Completely raise machine and install transport locks. If desired to store lowered and on unpaved surface, place hardwood blocks under roller to keep off ground.
- Block implement so it will not roll when unhitched from the tractor.
- Relieve pressure in hydraulic lines before uncoupling hydraulic hoses from tractor.
- Use the Safety Chain to help control drawn machinery should it separate from the tractor drawbar.

NOTE

To relieve hydraulic pressure: Depending on tractor hydraulic system, some can be relieved by actuating control lever after engine is stopped. If tractor has electric over hydraulic controls, it may be necessary to move the control lever to the float position. **Refer to Tractor's Operator's Manual.**

Wear protective gloves and safety glasses and goggles when working with hydraulic systems.

Maintenance Safety

- Block the machine so it will not roll when working on or under it to prevent injury.
- · Transport Locks installed.
- Do not make adjustments or lubricate machine while it is in motion.
- Make sure all moving parts have stopped and all system pressure is relieved.
- Understand the procedure before doing the work. Use proper tools and equipment.

Protective Equipment

- Wear protective clothing and equipment appropriate for the job. Avoid loose fitting clothing.
- Because prolonged exposure to loud noise can cause hearing impairment or hearing loss, wear suitable hearing protection, such as earmuffs or earplugs.

Prepare for Emergencies

- Keep a First Aid Kit and Fire Extinguisher handy
- Keep emergency numbers for doctor, ambulance, hospital and fire department near phone.

Tire Safety

Tire changing can be dangerous and should be performed by trained personnel using correct tools and equipment.

- When inflating tires, use a clip-on chuck and extension hose long enough to allow you to stand to one side, not in front of or over the tire assembly. Use a safety cage if available.
- When removing and installing wheels, use wheelhandling equipment adequate for weight involved.

Chemical Safety

Agricultural chemicals can be dangerous. Improper use can seriously injure persons, animals, plants, soil & property.

- Read chemical manufacturer's instructions and store or dispose of unused chemicals as specified. Handle chemicals with care & avoid inhaling smoke from any type of chemical fire.
- Store or dispose of unused chemicals as specified by the chemical manufacturer.

High Pressure Fluid Safety

Escaping fluid under pressure can be nearly invisible and have enough force to penetrate the skin causing serious injury. Use a piece of cardboard, rather than hands, to search for suspected leaks.

- Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result.
- Avoid the hazard by relieving pressure before disconnecting hydraulic lines.

NOTE

To relieve hydraulic pressure: Depending on tractor hydraulic system, some can be relieved by actuating control lever after engine is stopped. If tractor has electric over hydraulic controls, it may be necessary to move the control lever to the float position. **Refer to Tractor's Operator's Manual.**

Wear protective gloves and safety glasses and goggles when working with hydraulic systems.

Safety Chain

- 1. Use the Safety Chain to help control drawn machinery should it separate from the Tractor Drawbar.
- 2. Use a chain with a strength rating equal to or greater than the gross weight of towed machinery, which is 10,100 pounds minimum in accordance with ASAE S338.2 specifications. If two or more machines are pulled in tandem, a larger chain may be required. Chain capacity must be greater than the total weight of all towed implements.

A second chain should be used between each implement.

- 3. Attach the chain to the Tractor Drawbar Support or specified anchor location. Never attach the chain to an intermediate support. Allow only enough slack in the chain to permit turning. The distance from Hitch Pin to attachment point or intermediate support point should not exceed 9 inches. See Figure 1-2. If the distance from the Drawbar Pin to either the front or rear chain attachment point exceeds 9 inches, intermediate chain support is required. See Tractor Operator's Manual.
- 4. Replace chain if any links or end fittings are broken, stretched or damaged.
- 5. Do not use a Safety Chain for towing.


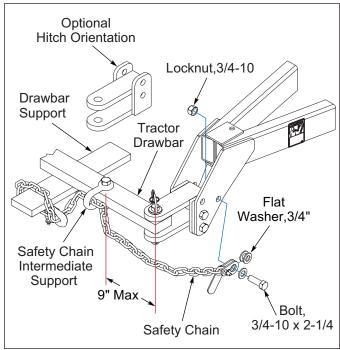


Figure 1-2: Safety Chain

1-4 9K713-2509

Decals

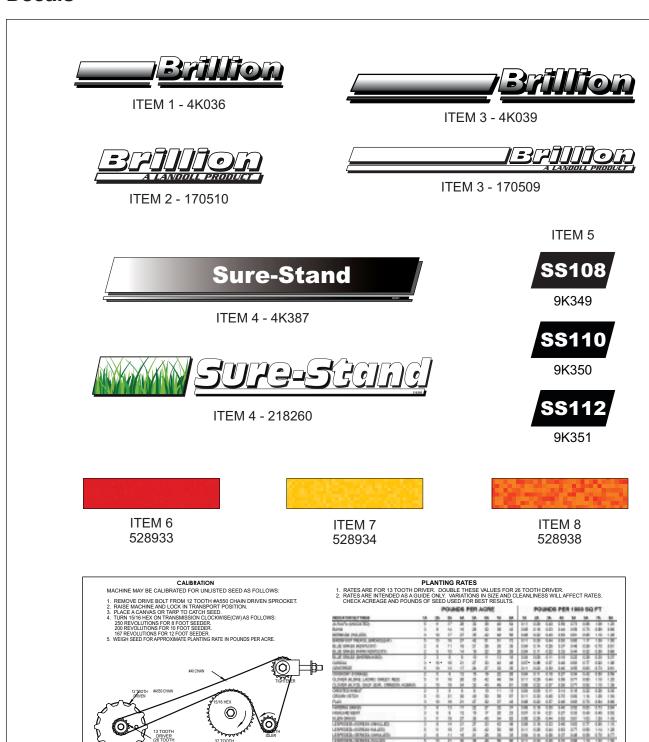

ITEM 9 - 9K348

* WILL CRACK SOME SEEDS AT THESE SETTINGS. NOT RECOMMENDED: LENTILS, SORGHUM, SUDAN GRASS

9K348 FOR SS108, SS110, SS112 SEEDEF

Figure 1-3: Decals (1 of 2)



ITEM 10 8J309



ITEM 13 3K706



ITEM 15 2K123



ITEM 11 9J301



ITEM 16 9J429



ITEM 12 70260977 (AFT. 08/2025) 2P151 (BEF. 08/2025) 247464 - DECAL



ITEM 14 9J302



ITEM 17 - 235621



ITEM 18 - 9K740



ITEM 19 - 192069



ITEM 20 1-573-010006

Figure 1-4: Decals (2 of 2)

1-6 9K713-2509

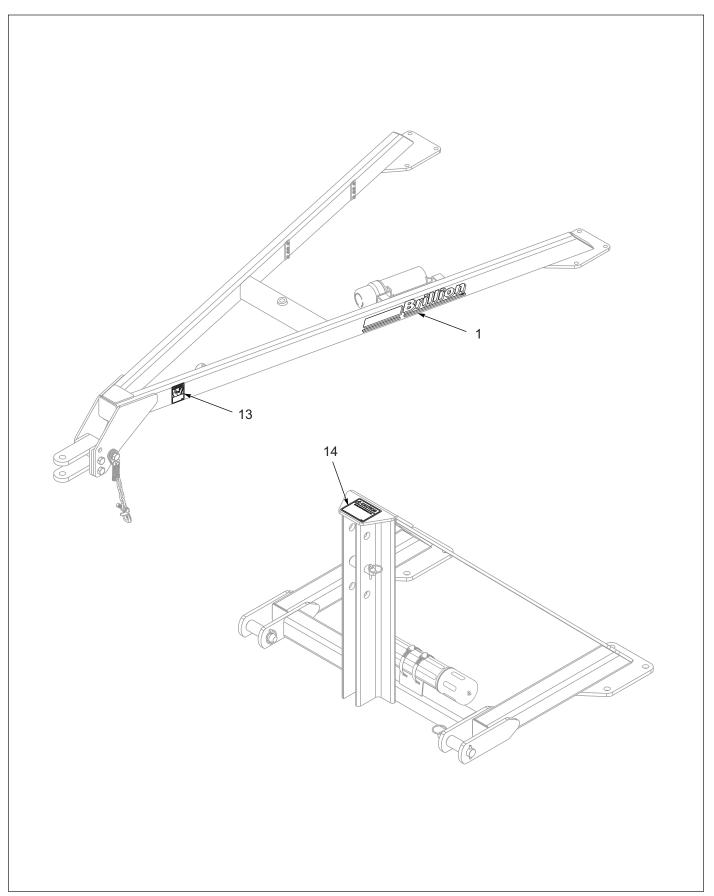


Figure 1-5: Decal Placement - Hitch Decals

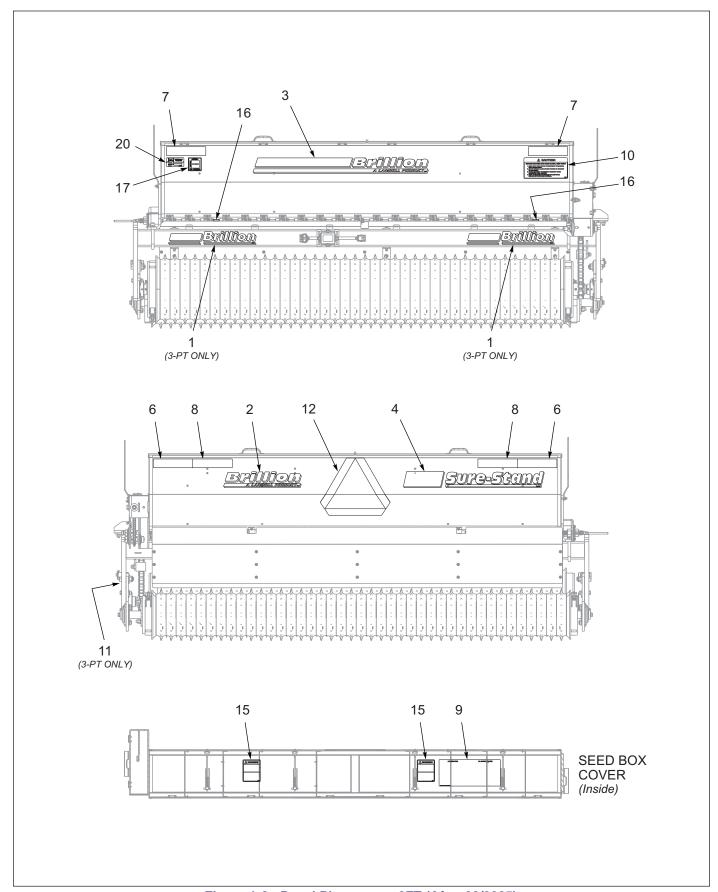


Figure 1-6: Decal Placement - 8FT (After 08/2025)

1-8 9K713-2509

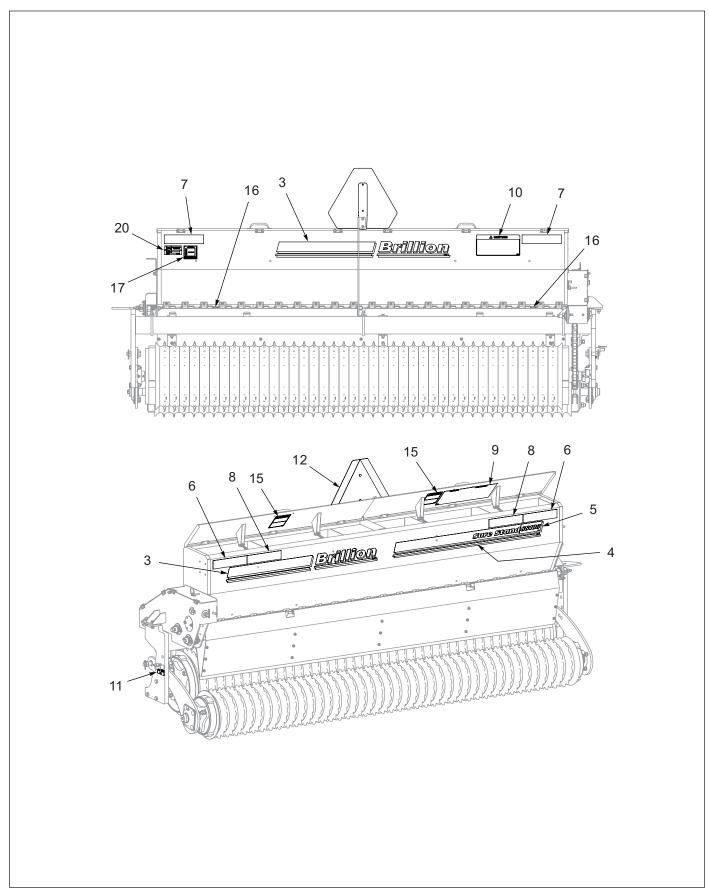


Figure 1-7: Decal Placement - 8FT (Before 08/2025)

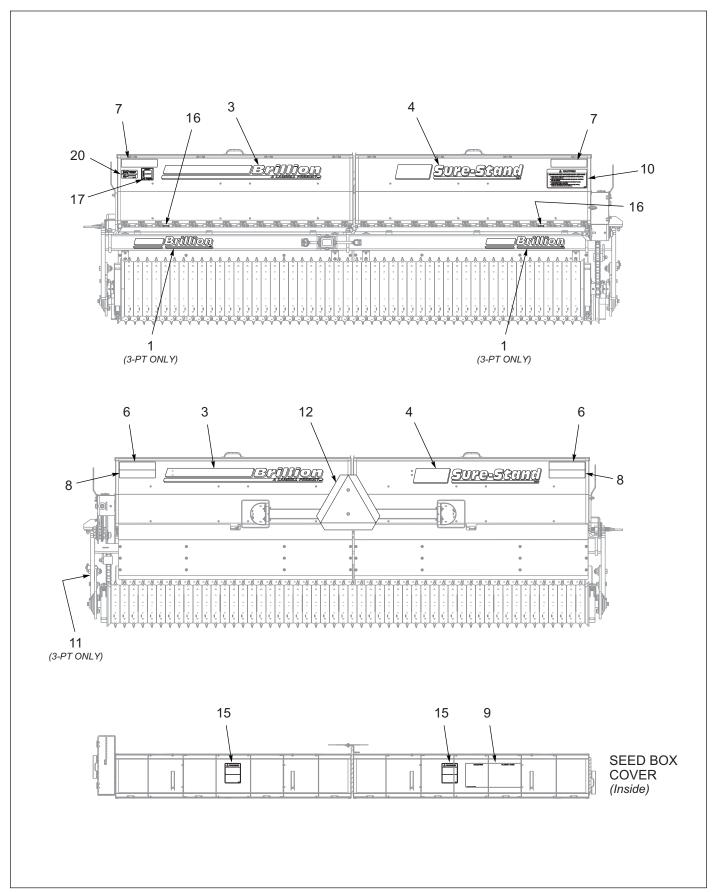


Figure 1-8: Decal Placement - 10FT (After 08/2025)

1-10 9K713-2509

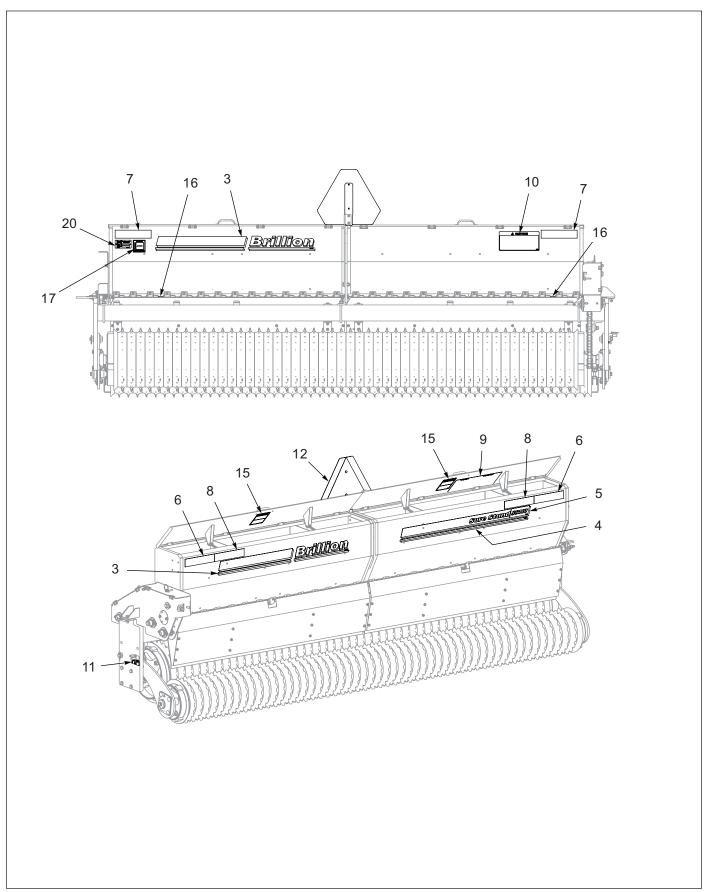


Figure 1-9: Decal Placement - 10FT (Before 08/2025)

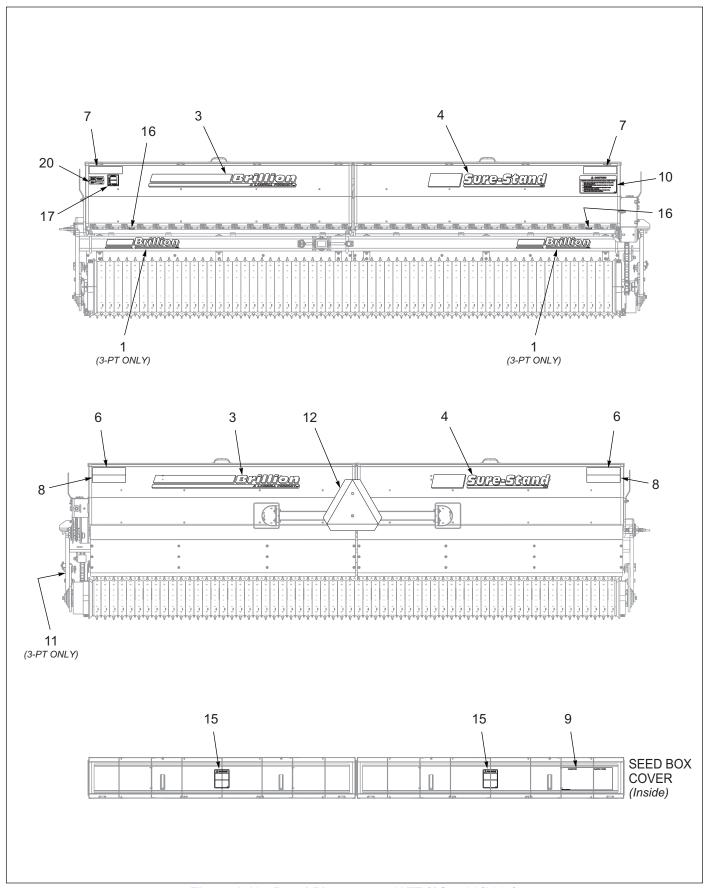


Figure 1-10: Decal Placement - 12FT (After 08/2025)

1-12 9K713-2509

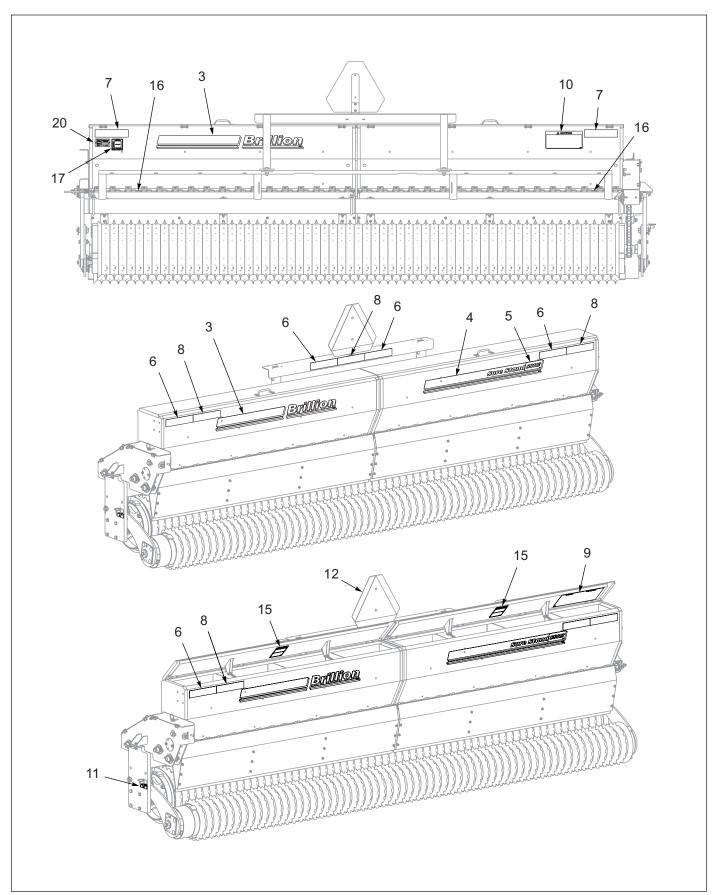


Figure 1-11: Decal Placement - 12FT (Before 08/2025)

SAFETY INFORMATION

Table provided for general use.			
NOTES:			

1-14 9K713-2509

Assembly

! CAUTION

Do not work on or under this machine unless securely blocked and supported by a hoist or tractor or by other sufficient means.

! WARNING

Do not attempt to lift heavy parts manually. Use a hoist or a fork lift to move these parts into position.

NOTE

Refer to the repair parts manual 9K712 for identification of parts and for the approximate relationship of the parts in assembly.

To ensure alignment of assemblies, leave the nuts loose until completion of final assembly. Use Lock Washers or Flat Washers as specified. Spread all cotter pins.

After completion of final assembly, tighten all nuts evenly to prevent misalignment, distortion or binding. Tighten all screws and nuts to the recommended torques.

IMPORTANT

- If a pre-assembled parts or fastener is temporarily removed, remember where they go. It is best to keep parts separated.
- Check that all working parts move freely, bolts are tight and cotter pins are spread.
- Park the seeder in a work area that has a level surface and make sure it is blocked securely so that it cannot roll.
- Refer to the Torque Table for proper torque valves.
 Note the different torque requirements for Bolts with Locknuts. See Page 5-1.

"Left" and "Right" refer to directions seen as if standing behind the machine and facing in the direction of forward travel.

IMPORTANT

All harnesses must be firmly attached to machine frame members, so they don't sag or become torn loose by field debris. Use the tie wraps provided.

Check to be sure the harnesses at center of machine is slack enough so as not to be stretched or interfered with while rotating frame from transport to field working position and vice versa.

3-PT Hitch Seeder Assembly (After 08/2025)

When shipped, seeder comes assembled except for Lights and 3-PT Hitch.

- Support Seeder Assembly with a hoist or by similar means capable of supporting its weight without tipping.
- 2. Center 3-PT Hitch Assembly in relationship with the Seed Box Center Bracket. Attach 3-PT Hitch to Seeder Frame Tube with 5/8-11 U-Bolts, Lock Washers and Nuts. **See Figure 2-8.**
- 3. Install Manual Holder to 3-PT Hitch with Hose Clamps.



Do not disengage pin unless seeder is fully attached to a tractor. Seeder may be rear-heavy and tip backward on frame.

- 4. Be sure Parking Pin is locking Rear Roller down and raise the Seeder. **See Figure 2-6.**
- 5. On the right side of the Seeder Frame, in a similar position as the Parking Pin, remove the 5/8-11 Shipping Bolt that also locks the Rear Roller down. See Figure 2-7.

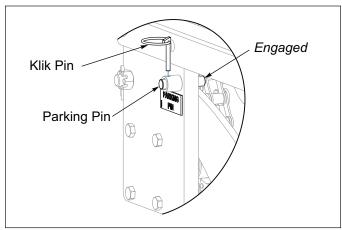


Figure 2-1: Parking Pin Engaged

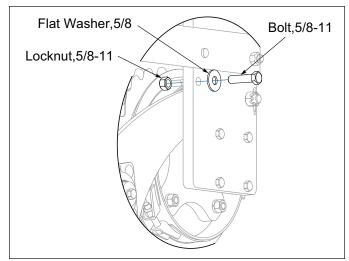


Figure 2-2: Shipping Bolt

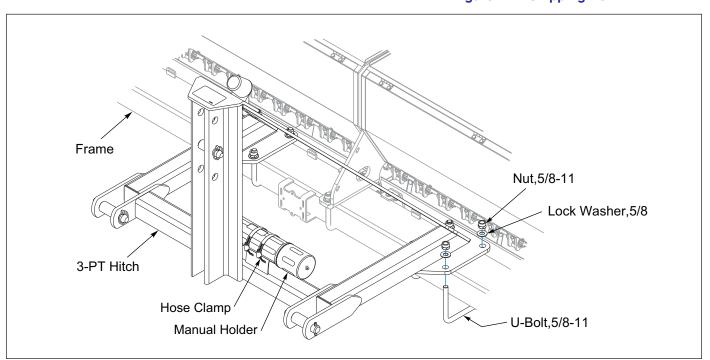


Figure 2-3: Attach 3-PT Hitch

2-2 9K713-2509

3-PT Hitch Seeder Assembly (Before 08/2025)

When shipped, seeder comes assembled except for Lights and 3-PT Hitch.

- Support Seeder Assembly with a hoist or by similar means capable of supporting its weight without tipping.
- Center 3-PT Hitch Assembly in relationship with the Seed Box Center Bracket. Attach 3-PT Hitch to Seeder Frame Tube with 5/8-11 U-Bolts, Lock Washers, and Nuts. See Figure 2-8.
- 3. Install Manual Holder to 3-PT Hitch with Hose Clamps.
- 4. **8FT Seeders:** Install SMV Mount to Seed Box Frame with 1/2-13 U-Bolt, Lock Washers, and Nuts. **See Figure 2-4.**

10FT Seeders: Install SMV Mount to Seed Box Center Bracket with 1/2-13 x 1-1/2 Bolts and Locknuts. **See Figure 2-5.**

! CAUTION

Do not disengage pin unless seeder is fully attached to a tractor. Seeder may be rear-heavy and tip backward on frame.

- 5. Be sure Parking Pin is locking Rear Roller down and raise the Seeder. **See Figure 2-6.**
- 6. On the right side of the Seeder Frame, in a similar position as the Parking Pin, remove the 5/8-11 Shipping Bolt that also locks the Rear Roller down. **See Figure 2-7.**

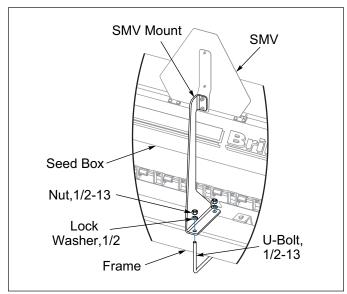


Figure 2-4: SMV Mount, 8FT (Before 08/2025)

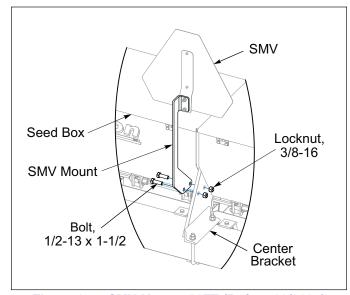


Figure 2-5: SMV Mount, 10FT (Before 08/2025)

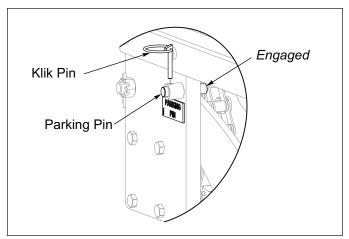


Figure 2-6: Parking Pin Engaged

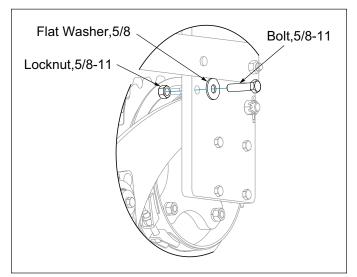


Figure 2-7: Shipping Bolt

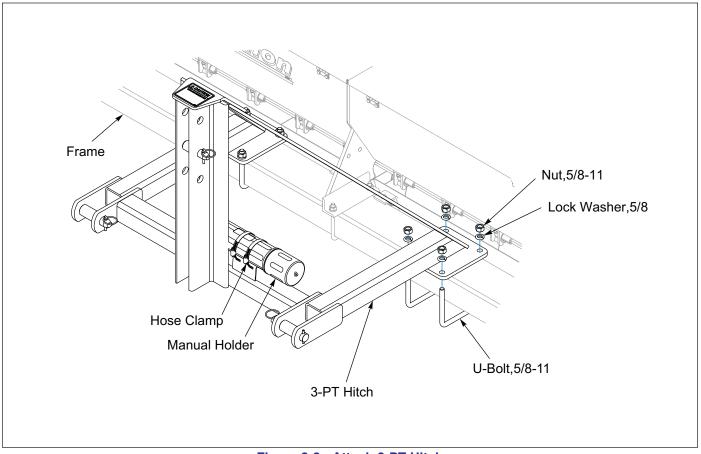


Figure 2-8: Attach 3-PT Hitch

2-4 9K713-2509

Pull Type Seeder Assembly (After 08/2025)

When shipped, Seeder comes assembled except for Hub and Spindle Assemblies, Tire and Wheels Assemblies and Drawbar.

- Untie the two rolled up Drawbar Hydraulic Hoses near the center of the Frame Tube. Ensure the hoses are not interfering with where the Drawbar is to be attached.
- 2. Center Drawbar in relationship with the Seed Box Center Bracket. Attach Drawbar to Seeder Frame Tube with 5/8-11 U-Bolts, Flat Washers and Locknuts. **See Figure 2-10.**
- Attach the Hose Holder to the Drawbar with 3/4-10 x
 Bolts and Flange Locknuts.
- 4. Install Manual Holder to Drawbar with 1/4-20 x 1 Bolts. Flat Washers and Nuts.
- 5. Apply anti-seize to Spindles and insert a Hub and Spindle Assembly into each Wheel Arm. Secure with 1/2-13 x 3 Bolts and Locknuts. **See Figure 2-12.**

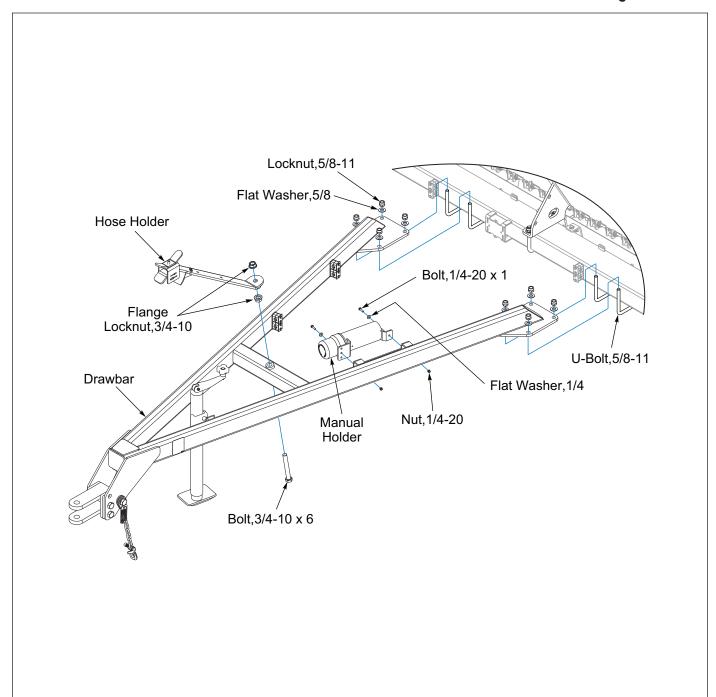


Figure 2-9: Drawbar Installation (After 08/2025)

Pull Type Seeder Assembly (Before 08/2025)

When shipped, Seeder comes assembled except for Lights, Hub and Spindle Assemblies, Tire and Wheels Assemblies and Drawbar.

- Untie the two rolled up Drawbar Hydraulic Hoses near the center of the Frame Tube. Ensure the hoses are not interfering with where the Drawbar is to be attached.
- Center Drawbar in relationship with the Seed Box Center Bracket. Attach Drawbar to Seeder Frame Tube with 5/8-11 U-Bolts, Lock Washers and Nuts. See Figure 2-10.

- 3. Attach the Hose Holder to the Drawbar with 5/8-11 x 1-1/2 Bolt. Lock Washer and Nut.
- 4. Install Manual Holder to Drawbar with Hose Clamps.
- 5. **8FT Seeders:** Install SMV Mount to Seed Box Frame with 1/2-13 U-Bolt, Lock Washers and Nuts. **See** Figure 2-4.
 - **10FT Seeders:** Install SMV Mount to Seed Box Center Bracket with 1/2-13 x 1-1/2 Bolts and Locknuts. **See Figure 2-5.**
- 6. Apply anti-seize to Spindles and insert a Hub and Spindle Assembly into each Wheel Arm. Secure with 1/2-13 x 3 Bolts and Locknuts. **See Figure 2-12.**

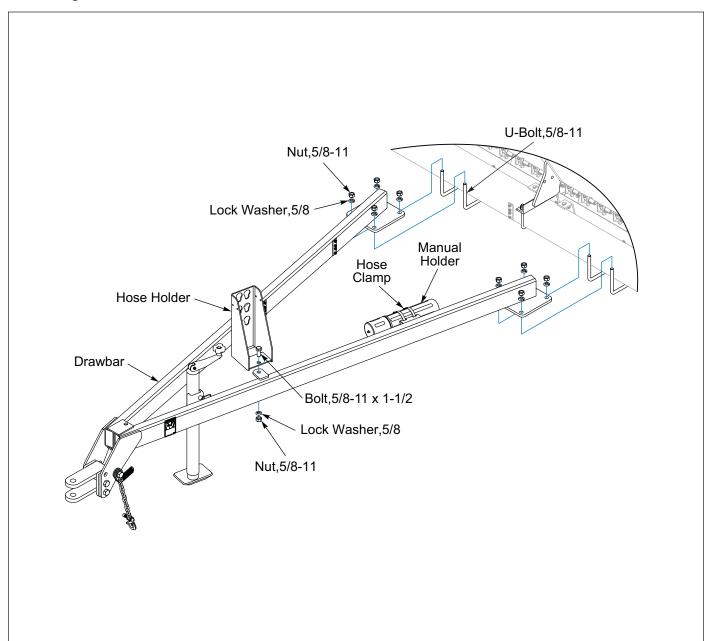


Figure 2-10: Drawbar Installation (Before 08/2025)

2-6 9K713-2509

Tire and Wheel Installation

/!\ WARNING

Use a torque wrench to assure proper torque. Insufficient torque can cause stud breakage and damage the wheel pilots. Over torque can stress the Bolts and strip the threads.

NOTE

The tire/wheel assembly is mounted with the valve stem facing outward from Hub and Spindle.

IMPORTANT

Torque will drop after the first 10 hours of operation. Check the Wheel Bolts for proper torque after this interval and re-tighten them

- The Seeder uses. 9.5L-15, 8 Ply Rating Tires and should be inflated to 44 PSI.
- Install a Tire and Wheel Assembly onto each Hub with 1/2-20 x 1 Wheel Bolts and tighten the Wheel Bolts to 50 Ft-Lbs. using the sequence in Figure 2-11. Then tighten to a full torque of 80-85 Ft-Lbs.

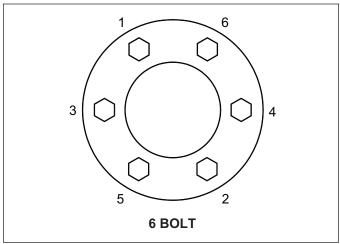


Figure 2-11: Tightening Sequence

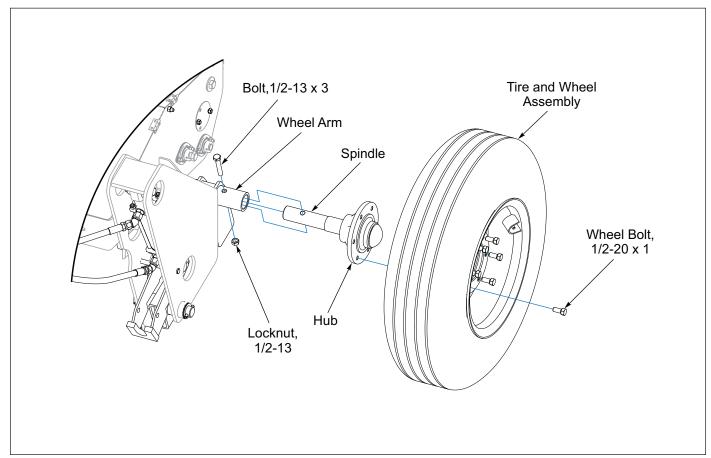


Figure 2-12: Tire and Wheel Installation

Hydraulic Installation

! WARNING

Escaping fluid under pressure can be nearly invisible and have enough force to penetrate the skin causing serious injury. Using a piece of cardboard, rather than your hands, to search for suspected leaks. (See Figure 2-13.) Wear protective gloves and safety glasses or goggles when working with hydraulic systems.

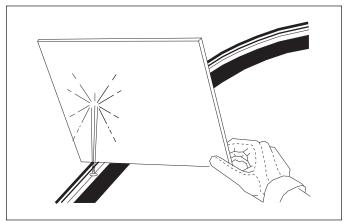


Figure 2-13: Leak Detection

Tightening Procedure for JIC 37 degree Swivel Female Nuts.

- Check Fitting Flare and seat for defects.
- 2. Lubricate the connection.
- 3. Install Hydraulic Hoses without twists.
- 4. Hand Tighten until connections bottoms.
- 5. Using (2) Wrenches to prevent twisting, rotate the Swivel Nut two Wrench Flats (1/3 turn).
- 6. For reassembly, follow the same procedure but tighten only one Wrench Flat (1/16 turn).

Tightening Procedure for Swivel O-Ring Fittings.

- Lubricate O-Ring and install the Fitting until the Metal Washer which backs up the O-Ring contacts the face of the boss.
- Orient the Fitting by turning counterclockwise up to 1 turn.
- 3. Tighten the Locknut using 50-60 Ft-Lbs of torque. See "Hydraulic Fitting Torque Specifications" on Page 5-2.

Hydraulic Assembly

. Restrictors installed in Cylinder Ports, connect 45
Degree Fitting so they are free to swivel. Connect top
Hydraulic Hose to the Cylinder Base and bottom
Hydraulic Hoses to the Cylinder Rod End. Position the
Hydraulic Hoses so that the Cylinder Base End points
downward and the Cylinder Rod End points upward.
Merge Hydraulic Hoses together and Tie Wrap them
together about 12 inches from the Hose End. See
Figures 2-14 and 2-16. Be sure that the Hoses
cannot sag and make contact with the Front Roller
Wheels.

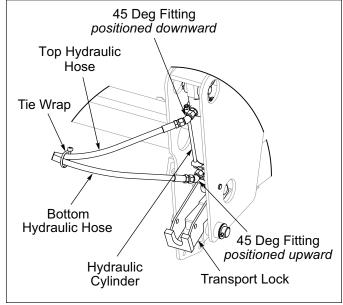


Figure 2-14: Cylinder Fittings Positioning

2. Route the Drawbar Hydraulic Hoses along Drawbar toward the Tractor. Secure Hoses to Drawbar with Hose Clamp Pairs, Top Plate and 1/4-20 x 1-1/2 Bolt. See Figure 2-16.

2-8 9K713-2509

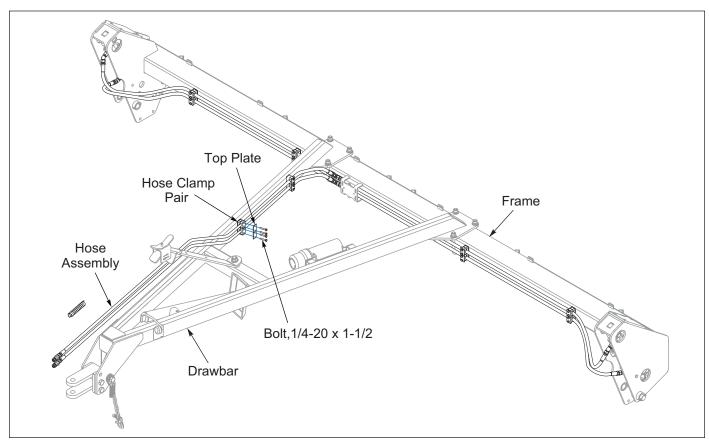


Figure 2-15: Drawbar Hydraulic Hoses (After 08/2025)

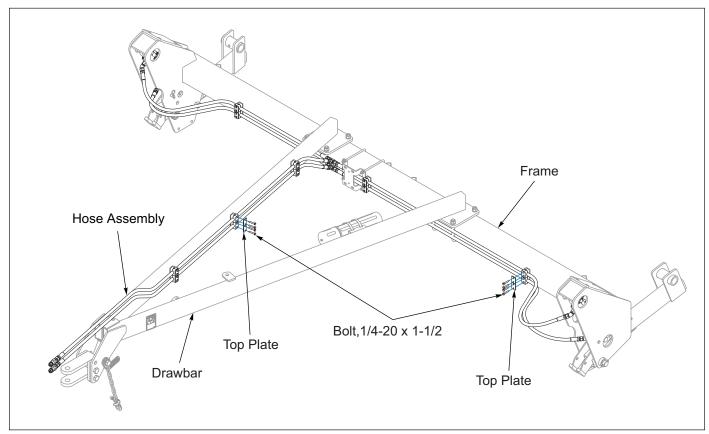


Figure 2-16: Drawbar Hydraulic Hoses (Before 08/2025)

ASSEMBLY

Table provided for general use.	
NOTES:	

2-10 9K713-2509

Purge the Hydraulic Lift System

The Hydraulic system is not filled with oil and should be purged of air before transporting and field operations.

Lift Circuit approximate oil requirement: 0.4 gallons.

- 1. Carefully Hitch the Seeder to the Tractor and connect the Hydraulic Lift Hoses.
- 2. Check to make sure the tractor hydraulic reservoir is full of the manufacturer's recommended oil.
- 3. Slowly raise the machine until both Lift Cylinders are fully extended. Lower and raise the Seeder to verify that both Cylinders are working throughout the stroke. Fully extend the Lift Cylinders and continue to hold the lever until both Cylinder Rod movement stops. Raise/Lower Seeder 5 times to purge air from the system.
- 4. Do Not loosen any Hydraulic Hoses or Fittings.
- 5. Recheck Tractor Reservoir to make sure it is within operating limits.
- 6. Raise the Seeder and install Transport Locks. **See** Figure 2-17.
- 7. Remove from the RH and LH Frame End Plate the 5/8-11 Shipping Bolts that locks the Rear Roller Arms Down. **See Figure 2-18.**

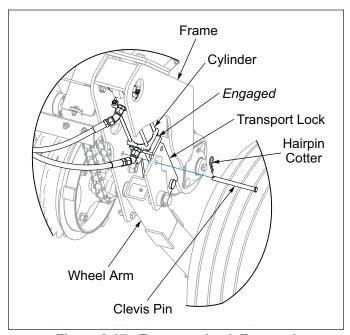


Figure 2-17: Transport Lock Engaged

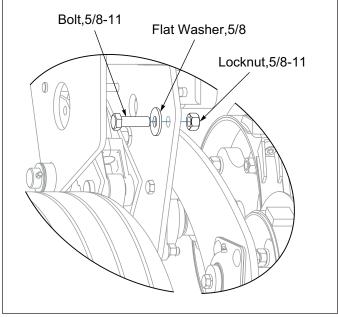


Figure 2-18: Shipping Bolt

Warning Lamp Installation, 8FT (Aft. 08/2025)

8FT Seeder comes partially assembled with Lamp Harness, Light Brackets, Flasher Control Module, and SMV Sign installed on Frame.

After 08/2025, the Flasher Control Module Bracket is welded to the frame. **See Figure 2-19.**

NOTE

8FT Drawbar Model is shown, 8FT 3-PT models similar.

- Attach an Amber Lamp to the upper portion of each Light Bracket with 1/4-20 x 1-1/4 Bolts and Locknuts. See Figure 2-24.
- 2. Attach a Red Lamp below each Amber Lamp with 1/4-20 x 1-1/4 Bolts and Locknuts. Ensure Red Lamp lenses faces rearward.

IMPORTANT

Cords are marked Yellow Tape for Left and Green Tape for Right.

- 3. Ensure the Lamp Harness is connected to the Flasher Control Module 6-Prong Connector.
- 4. Connect the 2-Prong Connector to the Amber Lamps and the 3-Prong Connector to the Red Lamps.
- 5. Lay out the 7-Pin Harness along the 3-PT Hitch or Drawbar with the 4-Prong Connector towards the Seeder. 3-PT Hitch, route the 4-Prong Connector Cord through the Frame Loop to the Module. Drawbar, route the 7-Pin Harness along the Drawbar, through the Hose Support up to the Tractor. Connect 7-Pin Harness 4-Prong Connector to the Flasher Control Module.
- 6. Bundle and secure excess Cords to the Module Bracket with Tie Wraps. Along the Seeder Frame, secure Harness Cords with Tie Wraps to the frame end plate slots, Slotted Tabs and Hydraulic Hoses. Bundle and secure 7-Pin Harness to the Drawbar Hydraulic Hoses or 3-PT Hitch Frame Slots allowing enough Harness length to reach the Tractor Socket.

NOTE

If equipped with optional Electrical Clutch, install, route and secure Electric Clutch Harness with the Warning Lamp Harness.

IMPORTANT

All wires must be firmly attached to Machine Frame members or Hydraulic Hoses so they do not sag or become torn loose by field debris.

- 7. The SMV Decal is pre-installed onto the Seeder.
- 8. If not installed, attach the Connector Holder to the Drawbar Hose Support or 3-PT Hitch. **See Figure 2-20.**

For Drawbar: 1/4-20 x 7/8 Bolts, Flat Washers, and Locknuts

For 3-PT Hitch: 1/4-20 x 1 Bolts, Flat Washers, and Locknuts.

NOTE

The 7-Pin Plug on the other end of the 7-Pin Harness connects to the Tractor Socket when in use. When not in use, it can be stored in the Connector Holder on the Drawbar Hose Holder or 3-PT Hitch. Allow enough harness length to reach Tractor Socket and roll or fold up excess and secure to Drawbar Hydraulic Hoses or 3-PT Hitch.

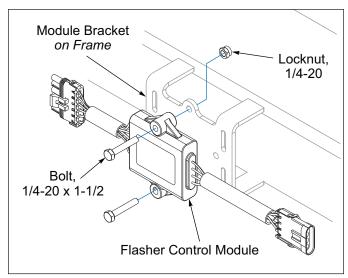


Figure 2-19: Flasher Control Module and Bracket (After 08/2025)

2-12 9K713-2509

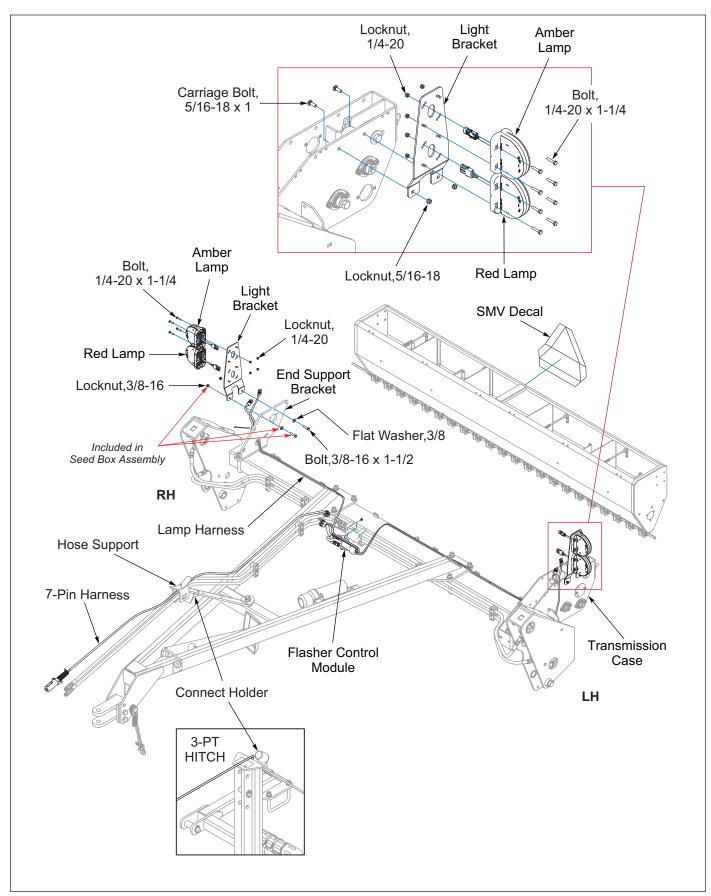


Figure 2-20: Warning Lamps Installation, 8FT and 10FT (After 08/2025)

Warning Lamp Installation, 10FT and 12FT (Aft. 08/2025)

10FT and 12FT Seeder comes with Lamp Harness, Light Brackets, Flasher Control Module, Light Bar with Red Lamps, and SMV installed on Frame.

After 08/2025, the Flasher Control Module Bracket is welded to the frame. **See Figure 2-21.**

NOTE

12FT Drawbar model is shown, 12FT 3-PT, 10FT Drawbar, and 10FT 3-PT models similar.

1. Attach an Amber Lamp to each of the outside Light Brackets with 1/4-20 x 1-1/4 Bolts and Locknuts.

IMPORTANT

Cords are marked Yellow Tape for Left and Green Tape for Right.

- 2. Ensure the Lamp Harness is connected to the Flasher Control Module 6-Prong Connector.
- Connect the 2-Prong Connector to the Amber Lamps and verify the 3-Prong Connector is connected to the Red Lamps.
- 4. Lay out the 7-Pin Harness along the 3-PT Hitch or Drawbar with the 4-Prong Connector towards Seeder. 3-PT Hitch, route the 4-Prong Connector Cord through the Frame Loop to the Module. Drawbar, route the 7-Pin Harness along the Drawbar, through the Hose Support up to the Tractor. Connect 7-Pin Harness 4-Prong Connector to the Flasher Control Module.
- 5. Bundle and secure excess Cords to the Module Bracket with Tie Wraps. Along the Seeder Frame, secure Harness Cords with Tie Wraps to the frame end plate slots, Slotted Tabs and Hydraulic Hoses. Bundle and secure 7-Pin Harness to the Drawbar Hydraulic Hoses or 3-PT Hitch Frame Slots allowing enough Harness length to reach the Tractor Socket.

NOTE

If equipped with optional Electrical Clutch, install, route and secure Electric Clutch Harness with the Warning Lamp Harness.

IMPORTANT

All wires must be firmly attached to Machine Frame members or Hydraulic Hoses so they do not sag or become torn loose by field debris.

- 6. If not installed, secure the SMV sign to the SMV Welded Bracket located on the center of the Light Bar with 1/4-20 Bolts, Flat Washers, and Locknuts.
- 7. If not installed, attach the Connector Holder to the Drawbar Hose Support or 3-PT Hitch. **See** Figure 2-22.

For Drawbar: 1/4-20 x 7/8 Bolts, Flat Washers, and Locknuts.

For 3-PT Hitch: 1/4-20 x 1 Bolts, Flat Washers, and Locknuts.

NOTE

The 7-Pin Plug on the other end of the 7-Pin Harness connects to the Tractor Socket when in use. When not in use, it can be stored in the Connector Holder on the Drawbar Hose Holder or 3-PT Hitch. Allow enough harness length to reach Tractor Socket and roll or fold up excess and secure to Drawbar Hydraulic Hoses or 3-PT Hitch.

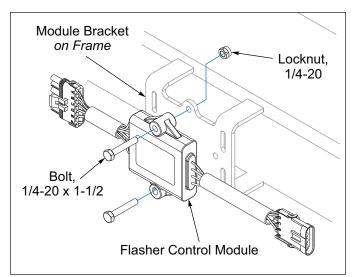


Figure 2-21: Flasher Control Module and Bracket (After 08/2025)

2-14 9K713-2509

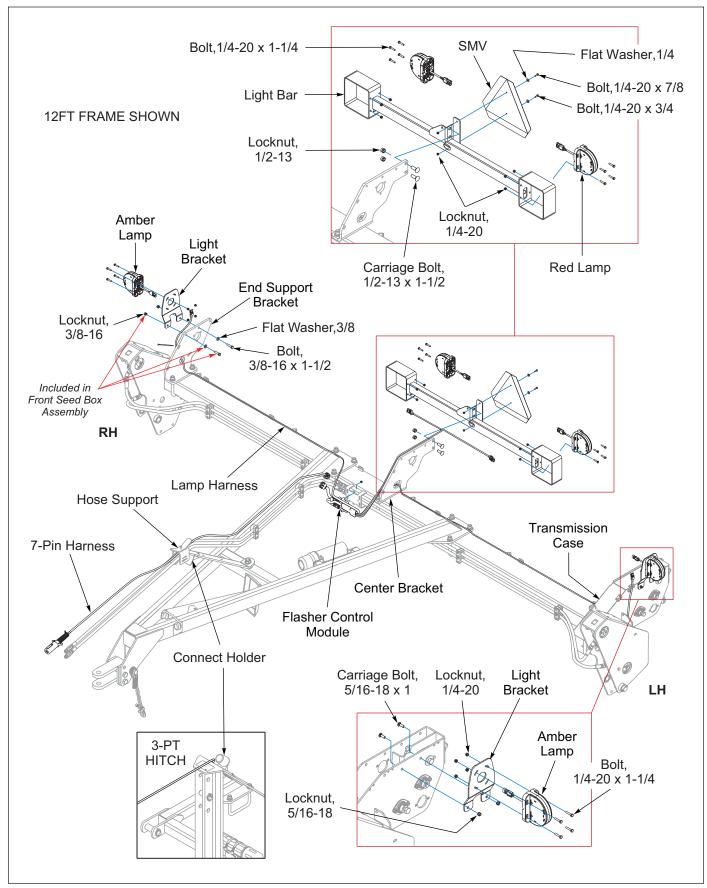


Figure 2-22: Warning Lamp Installation, 10FT and 12FT (After 08/2025)

Warning Lamp Installation, 8FT and 10FT (Bef. 08/2025)

NOTE

8FT 3-PT Model is shown, 8FT Drawbar, 10FT 3-PT and 10FT Drawbar models similar.

- 1. Attach longer Light Bracket to the Transmission housing located on the left side of the Seeder, with 3/8-16 x 1-1/2 Bolts, Lock Washers and Nuts.
- 2. Attach Amber Lamp to the upper portion of the longer Light Bracket with 1/4-20 x 1-1/4 Bolts and Locknuts.
- 3. Attach a Red Lamp below the Amber Lamp with 1/4-20 x 1-1/4 Bolts and Locknuts. Ensure Red Lamp lenses faces rearward. **See Figure 2-24.**
- On the right side of the Seeder attach the shorter Light Bracket to the Angle Bracket with 1/2-13 x 1-1/4 Bolts, Lock Washers and Nuts.
- 5. Attach Amber Lamp to the upper portion of the Light Bracket with 1/4-20 x 1-1/4 Bolts and Locknuts.
- 6. Attach a Red Lamp below the Amber Lamp with 1/4-20 x 1-1/4 Bolts and Locknuts. Ensure Red Lamp lenses faces rearward.
- 7. Attach the Flasher Control Module to the Module Bracket with 1/4-20 x 1-1/2 Bolts and Locknuts. **See Figure 2-23.**

IMPORTANT

Cords are marked Yellow Tape for Left and Green Tape for Right.

- 8. Lay out the Lamp Harness along the Seeder Frame, Cords with Yellow Tape Left and Cords with Green Tape Right. Connect the Harness to the Flasher Control Module 6-Prong Connector.
- Route the left and right cords along the front of the Frame Tube up to the outer Light Brackets. Connect the 2-Prong Connector to the Amber Lamps and the 3-Prong Connector to the Red Lamps.
- 10. Lay out the 7-Pin Harness along the 3-PT Hitch or Drawbar with the 4-Prong Connector towards the Seeder. 3-PT Hitch, route the 4-Prong Connector Cord through the Frame Loop to the Module. Drawbar, route the 7-Pin Harness along the Drawbar, through the Hose Support up to the Tractor. Connect 7-Pin Harness 4-Prong Connector to the Flasher Control Module.
- 11. Bundle and secure excess Cords to the Module Bracket with Tie Wraps. Along the Seeder Frame, secure Harness Cords with Tie Wraps to the frame end plate slots, Slotted Tabs and Hydraulic Hoses. Bundle and secure 7-Pin Harness to the Drawbar Hydraulic Hoses or 3-PT Hitch Frame Slots allowing enough Harness length to reach the Tractor Socket.

NOTE

If equipped with optional Electrical Clutch, install, route and secure Electric Clutch Harness with the Warning Lamp Harness.

IMPORTANT

All wires must be firmly attached to Machine Frame members or Hydraulic Hoses so they do not sag or become torn loose by field debris.

- 12. Attach the SMV sign to the SMV Mount located on the center on the Front Frame with 5/16-18 x 1 Bolts, Flat Washers, and Locknuts.
- 13. Attach the Connector Holder to the Drawbar Hose Holder or 3-PT Hitch with 1/4-20 x 1 Bolts, Flat Washers, and Locknuts.

NOTE

The 7-Pin Plug on the other end of the 7-Pin Harness connects to the Tractor Socket when in use. When not in use, it can be stored in the Connector Holder on the Drawbar Hose Holder or 3-PT Hitch. Allow enough harness length to reach Tractor Socket and roll or fold up excess and secure to Drawbar Hydraulic Hoses or 3-PT Hitch.

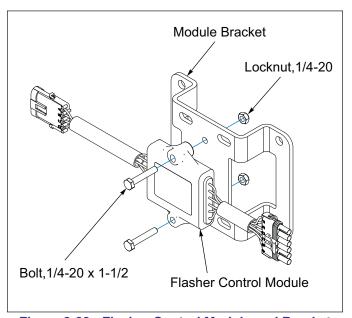


Figure 2-23: Flasher Control Module and Bracket (Before 08/2025)

2-16 9K713-2509

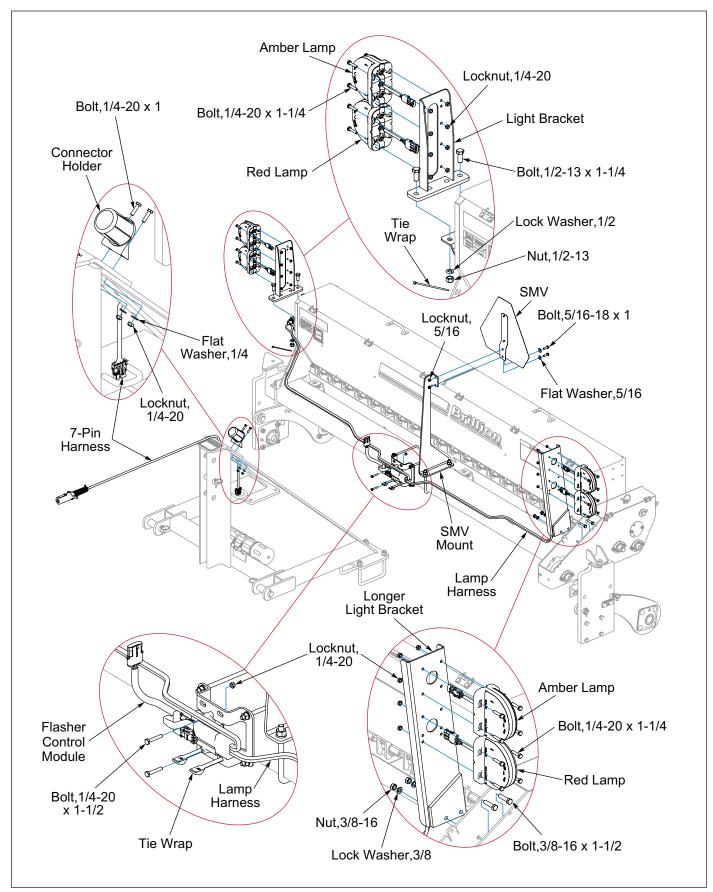


Figure 2-24: Warning Lamps Installation, 8FT and 10FT (Before 08/2025)

Warning Lamp Installation, 12FT (Bef. 08/2025)

NOTE

12FT Drawbar model is shown, 3-PT models similar.

- Place a Red Lamp at each end of the Light Bar and insert the Red Lamp Cord into the Light Bar cutout. Secure Red Lamp to Light Bar with 1/4-20 x 1-1/4 Bolts and Locknuts. See Figure 2-26.
- 2. Attach longer Light Bracket to the Transmission located on the left side of the Seeder, with 3/8-16 x 1-1/2 Bolts. Lock Washers and Nuts.
- 3. Attach Amber Lamp to the outside of the Light Bracket with 1/4-20 x 1-1/4 Bolts and Locknuts.
- 4. On the right side of the Seeder, attach the shorter Light Bracket to the Angle Bracket with 1/2-13 x 1-1/4 Bolts, Lock Washers and Nuts.
- 5. Attach an Amber Lamp to the upper portion of the Light Bracket with 1/4-20 x 1-1/4 Bolts and Locknuts.
- 6. Attach the Flasher Control Module to the Module Bracket with 1/4-20 x 1-1/2 Bolts and Locknuts. **See Figure 2-25.**

IMPORTANT

Cords are marked Yellow Tape for Left and Green Tape for Right.

- 7. Lay out the Lamp Harness along the Seeder Frame Tube, Cords with Yellow Tape Left and Cords with Green Tape Right. Connect the Harness to the Flasher Control Module 6-Prong Connector.
- 8. Route the left and right cords along the front of the Frame Tube. Route the 3-Prong Connector Cords into the Light Bar vertical tube openings up to the Red Lamps and connect. Continue routing the 2-Prong Connector Cord along the front of the frame, up the outer Light Bracket to the Amber Lamps and connect.
- Lay out the 7-Pin Harness along the 3-PT Hitch or Drawbar with the 4-Prong Connector towards Seeder.
 3-PT Hitch, route the 4-Prong Connector Cord through the Frame Loop to the Module. Drawbar, route the 7-Pin Harness along the Drawbar, through the Hose Support up to the Tractor. Connect 7-Pin Harness 4-Prong Connector to the Flasher Control Module.
- 10. Bundle and secure excess Cords to the Module Bracket with Tie Wraps. Along the Seeder Frame, secure Harness Cords with Tie Wraps to the frame end plate slots, Slotted Tabs and Hydraulic Hoses. Bundle and secure 7-Pin Harness to the Drawbar Hydraulic Hoses or 3-PT Hitch Frame Slots allowing enough Harness length to reach the Tractor Socket.

NOTE

If equipped with optional Electrical Clutch, install, route and secure Electric Clutch Harness with the Warning Lamp Harness.

IMPORTANT

All wires must be firmly attached to Machine Frame members or Hydraulic Hoses so they do not sag or become torn loose by field debris.

- 11. Attach the SMV sign to the SMV Mount located on the center of the Light Bar with 5/16-18 x 1 Bolts, Flat Washers, and Locknuts.
- 12. Attach the Connector Holder to the Drawbar Hose Holder or 3-PT Hitch with 1/4-20 x 1 Bolts, Flat Washers, and Locknuts.

NOTE

The 7-Pin Plug on the other end of the 7-Pin Harness connects to the Tractor Socket when in use. When not in use, it can be stored in the Connector Holder on the Drawbar Hose Holder or 3-PT Hitch. Allow enough harness length to reach Tractor Socket and roll or fold up excess and secure to Drawbar Hydraulic Hoses or 3-PT Hitch.

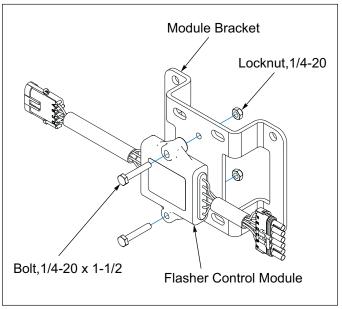


Figure 2-25: Flasher Control Module and Bracket (Before 08/2025)

2-18 9K713-2509

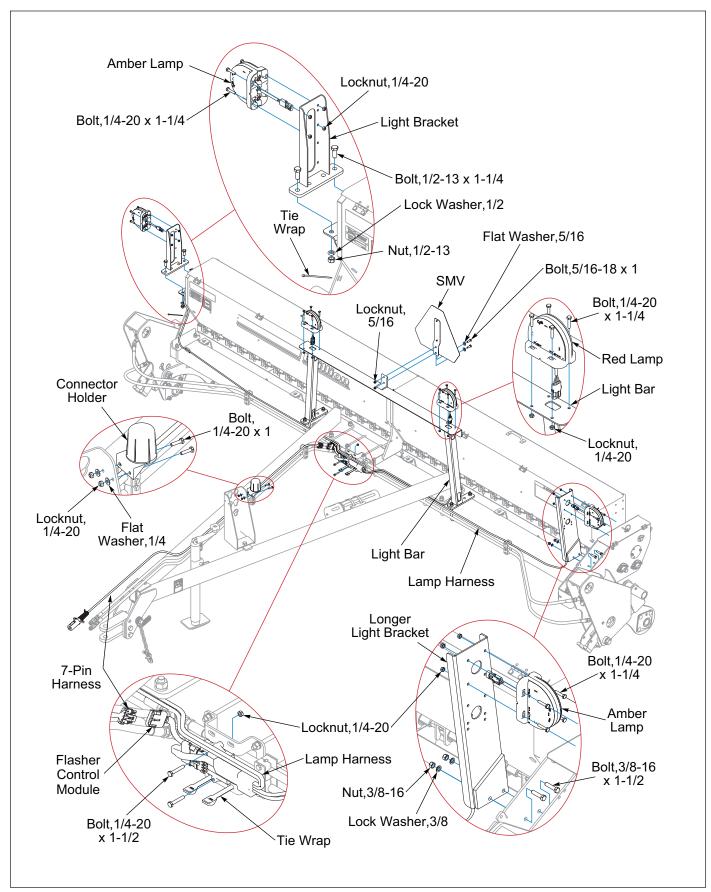


Figure 2-26: Warning Lamp Installation, 12FT (Before 08/2025)

TABLE OF CONTENTS

ASSEMBLY

Table provided for general NOTES:			
NOTES:			

2-20 9K713-2509

Electric Clutch Kit - Optional

IMPORTANT

At no time use high pressure water or air to clean the Electric Clutch as damage could occur.

1. Verify that the Electric Clutch has 1/8" clearance between the Clutch Housing and Rubber Bumper Stop. Improper clearance may prevent the Clutch from engaging or disengaging. **See Figure 2-27.**

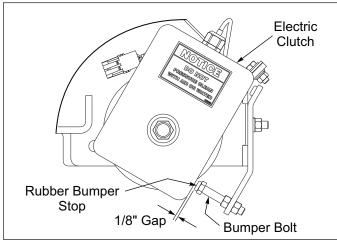


Figure 2-27: Clutch Clearance

2. Connect Clutch Harness or Seeder Harness 2-Pin Connector to Clutch Lead and route along Frame and Drawbar/3-PT Hitch. Secure to Frame and Drawbar/3-PT Hitch or to Hydraulic Hoses and Warning Lamp Harness with tie wraps. See Figure 2-28.

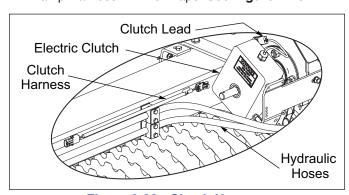


Figure 2-28: Clutch Harness

- Install Clutch Switch Box or Monitor on Tractor in a convenient location with Hook and Loop Tape or Brackets included or another type of mount (not included).
- Clutch Switch Box: Connect Clutch Harness to Clutch Switch Box Cord. Connect Clutch Switch Box Cord with Ring Terminals to tractor power source.
 See Figure 2-29. Ring Terminals can be removed and replaced with a different power source connector.

Brillion Elite Mini Monitor: Connect the Elite Mini Tractor Harness 14-Pin Connector to Brillion Elite

- Mini Monitor, 3-Pin Power Plug to 12 Volt Tractor Convenience Outlet and 6-Pin Connector to the 240" Extension Harness. 4-Pin Connector is not used at this time. Connect 240" Extension Harness to Seeder Harness. Secure Harnesses with tie wraps.
- 5. Check Electric Clutch Operation. The Electric Clutch will disengage when power is applied. (Clutch will make a clicking sound). Set Seeder on the ground and drive a short distance while toggling the Seeder Clutch to "ON/SEED" and "OFF/NO SEED". The Seed Shaft will stop rotating when Monitor or Toggle Switch is set to "OFF/NO SEED".
- 6. Set Monitor or Toggle Switch to "**ON/SEED**" position when Seeder is not used to shut off power to prevent possible overheating of Clutch Coil.

Electric Clutch Attributes:

 The Electric Clutch is controlled by a Touch Screen Monitor or a Toggle Switch Box mounted to the Tractor.

Brillion Elite Mini Monitor: Touch Screen Monitor provides the user the ability to turn the Seeder Clutch "ON" or "OFF".

Clutch Switch Box: Toggle Switch on the Switch Box, turns the Seeder Clutch to "SEED" or "NO SEED".

Console w/Clutch Control: Toggle Switch on the Console, turns the Seeder Clutch to "SEED" or "NO SEED".

- The Electric Clutch is disengaged when power (12 Volts) is applied. If there is a power failure or electrical problem, the Seeder will continue to operate, so the machine must be raised to stop seeding.
- Seed Shafts will not rotate when the machine is backed up.
- The Clutch Switch Box contains a 5 Amp Time-Delay Fuse.
- The Electric Clutch must be disengaged (power applied) when Seed Shafts are turned manually for Calibration.

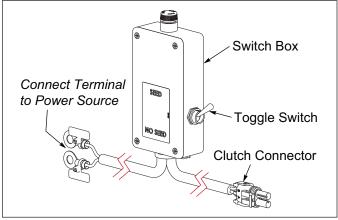


Figure 2-29: Switch Box Assembly

Brillion Elite Mini Monitor - Optional

Assembly instruction for models **equipped** with Clutch. Unit MUST have a Clutch to be compatible with Brillion Elite Mini Monitor.

The Brillion Elite Mini Monitor System by Loup utilizes a MUX communication line. Sensors must be learned into the Monitor. Location of each pre-learned Smart Shaft Sensor or Bin Level Sensor is important for proper Monitor display. Each Sensor utilizes 3 wires (+, -, MuxBus) to connect to the system. The Sensors do not require specific Harness connection point. Each Sensor is identified in the Monitor by its own signal.



High Power Magnet is use. See "High Power Magnet" on Page 1-2.

IMPORTANT

All Harnesses must be firmly attached to Machine Frame members so they do not sag or become torn loose by field debris.

Refer to Brillion Elite Mini Monitor Electrical Schematic. **See Figure 2-33.**

- Lay out the Seeder Harnesses on the front of the Seeder ensuring that the Electric Clutch 2-Pin Connector is on the left side. The Seeder Harness 24" Branch connects to the LH Bin Level Sensor.
- 2. Remove Seeder Clutch. Install Actuator Assembly onto the Quill Shaft outer diameter, securing with Actuator Assembly Set Screw. Reinstall Clutch. See Figure 2-34. Install Pick-up Switch Bracket to the Transmission Input Shaft Bearing Flangette Hardware. Assemble Smart Shaft Sensor onto the Pick-Up Switch Bracket with sensor provided hardware and #8-32 Flange Locknuts. Adjust the Smart Shaft Sensor so that it is 1/8" Max away from the Actuator Assembly. See Figure 2-30. Connect Ground Speed Smart Shaft Sensor to the Center Seeder Harness.
- 3. Front RH side Seed Box between the 1st and 2nd Seed Meters, place 1-1/4 x 1/4 x 1/16 Magnet on the Seed Shaft. Secure with Magnet Collar. **See**Figure 2-35. Remove the 2nd and 3rd Seed Meter front 1/4-20 x 5/8 Round Head Machine Screws that mounts the Seed Meter to the Seed Box and replace them with 1/4-20 x 3/4 Round Head Machine Screws. Install the Sensor Mount on the 1/4-20 x 3/4 Machine Screws. Secure with Flat Washers, Lock Washers and Nuts. Install a Smart Shaft Sensor to the Sensor Mount with sensor provided hardware and #8-32 Flange Locknuts. Adjust the Smart Shaft Sensor so that it is 1/8" Max away from the Magnet Collar on the

Seed Shaft. **See Figure 2-32.** Connect the Smart Seed Shaft Sensor to the Seeder Harness.

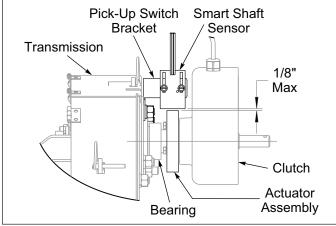


Figure 2-30: Ground Speed Sensor Detail

- 4. Unused Seeder Harness RH 3-Pin Connector needs to be sealed with a 3-Pin Shroud and Cavity Plugs to protect the Harness from the environment.
- 5. The Seeder RH and LH ends only, remove the .803 Knockouts in the Seed Box. *Do Not remove the Knockouts in the Seed Boxes at the center of the Seeder.*
- 6. On the inside at either end of the Seed Box, install a Bin Level Sensor Bracket with the Seed Box Mounting 3/8-16 Hardware. **See Figure 2-36.** Determine the desired level for the alarm to be indicated on the Brillion Elite Mini Monitor and assemble the Bin Level Sensors to Bin Level Sensor Brackets with sensor provided hardware and #8-32 Flange Locknuts. If more adjustment is needed, the Bin Level Sensor Brackets can also be raised or lowered to the desired seed level. Install Cord Grips from the inside of the Seed Box out and secure with supplied Locknut on the outside of the Seed Box. To get the Sensor Connector outside the Seed Box, feed the terminals through the Cord Grip. Install the terminals into the 3-Pin Shroud labeled "A", "B" and "C" as follows "A" White, "B" Black, "C" Green. See Figure 2-31. Inside the Seed Box, provide enough cord slack to the Bin Level Sensor Cord to allow for future adjustments of the Sensor. Secure the Bin Level Cord by tightening the Cord Grip Compression Nut. Connect both Bin Level Sensors to the Seeder Harness.

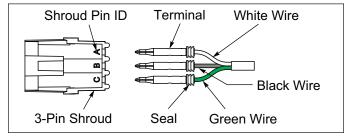


Figure 2-31: Bin Level Sensor Wire Detail

2-22 9K713-2509

- 7. Connect the 240" Extension Harness to the Seeder Harness. Route the 240" Extension Harness along the Seeder Frame and down the Drawbar/3-PT Hitch to the Tractor.
- 8. Install Brillion Elite Mini Monitor on Tractor. See "Brillion Elite Mini Monitor Tractor Installation - Optional" on Page 2-26.
- 9. If not already installed, install Smart Clutch Relay into Elite Mini Tractor Harness 3-Pin Connectors.
- Connect the Elite Mini Tractor Harness 14-Pin Connector to Brillion Elite Mini Monitor, 3-Pin Power Plug to 12 Volt Tractor Convenience Outlet and 6-Pin Connector to the 240" Extension Harness. 4-Pin Connector is not used at this time.
- 11. Bundle and secure all Harnesses along the Seeder Frame and Drawbar/3-PT Hitch with Tie Wraps.
- 12. Program Bin Level Sensors and Smart Shaft Sensors if not already pre-programmed. **See** "Brillion Elite Mini Monitor" on Page 4-1.

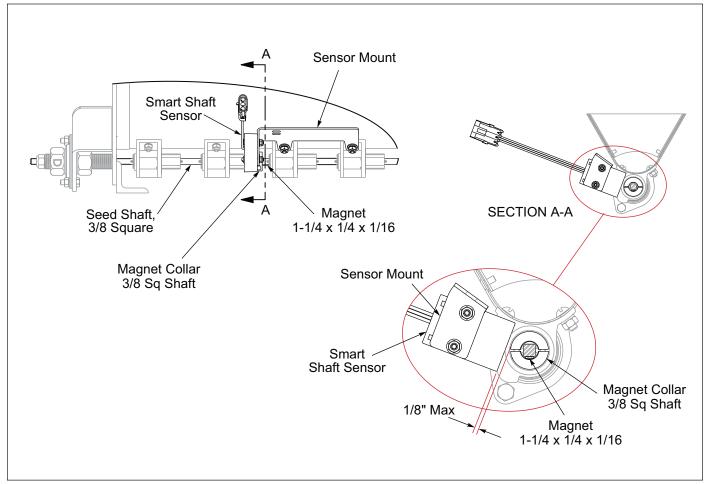


Figure 2-32: Seed Box Seed Shaft Detail

Brillion Elite Mini Monitor Electrical Schematic

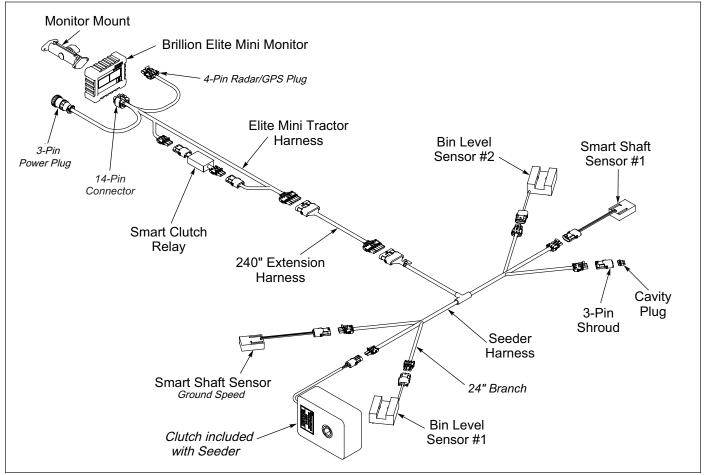


Figure 2-33: Brillion Elite Mini Monitor Electrical Schematic

Brillion Elite Mini Monitor - Ground Speed Sensor

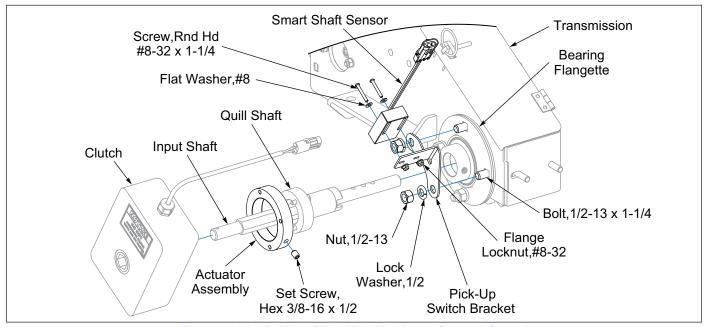


Figure 2-34: Brillion Elite Mini Monitor - Ground Speed

2-24 9K713-2509

Brillion Elite Mini Monitor - Front Seed Box Seed Shaft Sensor

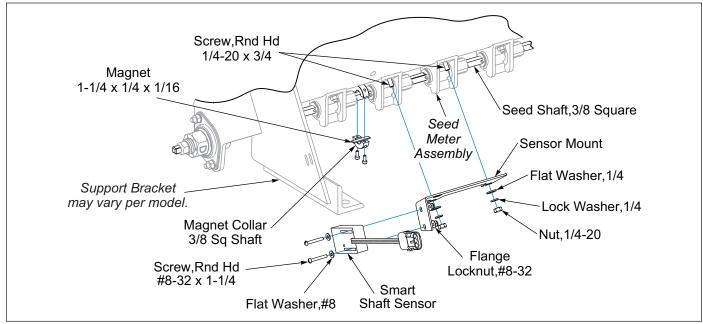


Figure 2-35: Brillion Elite Mini Monitor - Front Seed Box Seed Shaft Sensor

Brillion Elite Mini Monitor - Bin Level Sensor

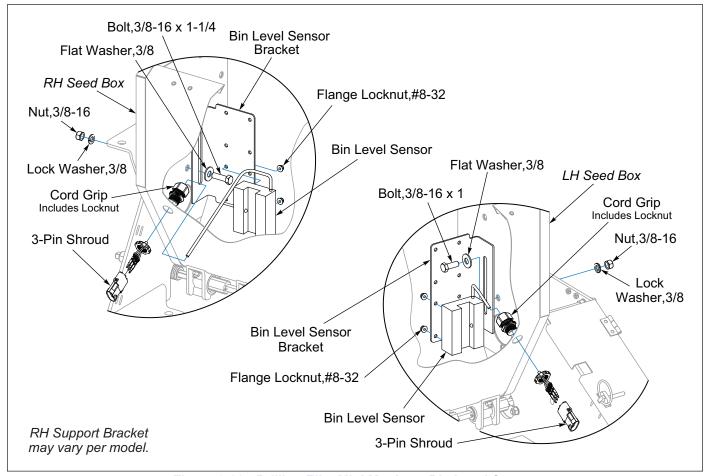


Figure 2-36: Brillion Elite Mini Monitor - Bin Level Sensor

Brillion Elite Mini Monitor Tractor Installation - Optional

- Mount Angle Bracket onto Tractor where convenient for the operator. See Figure 2-37.
- 2. Attach Straight Bracket to Angle Bracket with 1/2-13 x 1-1/2 Bolt and Flange Locknut.
- 3. Attach the Brillion Elite Mini Monitor to the Monitor Mount with Metric Machine Screws, provided with Monitor.
- 4. Attach the Monitor Mount to the Straight Bracket with #10-24 x 1 Machine Screws, Flat Washers, Lock Washers, and Nuts, provided with Monitor Mount.
- With the Brillion Elite Mini Tractor Harness, plug the 14-Pin Connector into the Monitor, the 3-Pin Power Connector into the Tractor Convenience Outlet and the 6-Pin Connector into the 240" Extension Harness.
- 6. Check clutch operation: Clutch will engage when power is applied. (Clutch will make a clicking sound). See "Brillion Elite Mini Monitor" on page 4-1.

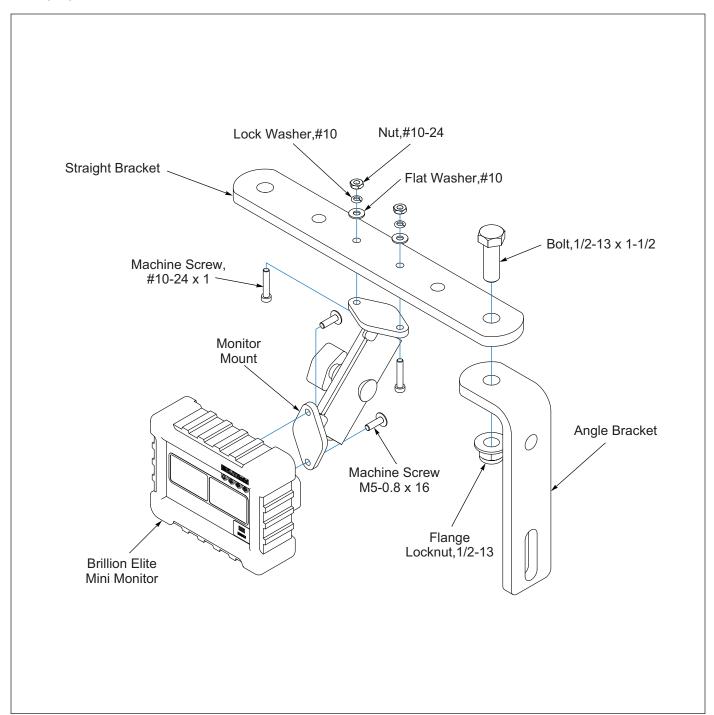


Figure 2-37: Brillion Elite Mini Monitor Tractor Installation - Optional

2-26 9K713-2509

Table provided for general use. NOTES:

Acre Meter Kit - Optional

Not Used with Brillion Elite Mini Monitor

P/N 5K745 - Transmission w/o Clutches P/N 5K275 - Transmission w/ Clutches

NOTE

The Acre Meter Kit consists of three main parts, the Acre Meter, the Pick-Up Switch and the Magnet Wheel Assembly. The Acre Meter Assembly is mounted on the left side of the Front Seed Box. Acre Meter models may vary.

IMPORTANT

Alignment of the Pick-Up Switch and the Magnet Wheel Assembly is critical. Improper alignment will cause the Acre Meter to record acres erratically or not at all.

- 1. Use the Acre Meter Bracket as a guide and drill two 13/32" holes into the left Seed Box.
- 2. Attach the Acre Meter Bracket to the Seed Box with 3/8-16 x 1 Bolts, Flat Washers, Lock Washers and Nuts. **See Figure 2-38.**

- 3. **Transmission w/o Clutch:** Attach the Pick-Up Switch Bracket to the front of the Transmission with 3/16 x 1-1/4 Bolts. Lock Washers and Nuts.
 - **Transmission w/ Clutch Optional:** Attach the Pick-Up Switch Mount to the Clutch Bracket with #10-24 x 3/4 Screws, Lock Washers and Nuts. **See Figure 2-40.**
- 4. Attach the Pick-Up Switch to the top of the Pick-Up Switch Bracket/Mount with two #8-32 x 1-1/4 Machine Screws, Flat Washers, Lock Washers and Nuts. Do not tighten Screws at this time.
- Press the Magnet Wheel Assembly onto the Transmission Shaft until it is vertically centered with the Pick-Up Switch.
- 6. Adjust the Pick-Up Switch and Pick-Up Switch Bracket so the centerline of the Magnet Wheel Assembly and Pick-Up Switch are horizontally and vertically aligned with maximum 1/8" between the Magnet Wheel Assembly and Pick-Up Switch. Tighten all Screws. See Figures 2-39 and 2-40.

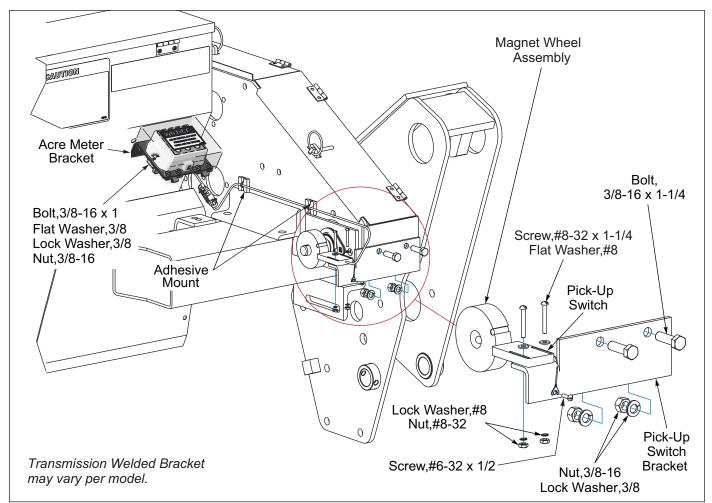


Figure 2-38: Electronic Acre Meter

2-28 9K713-2509

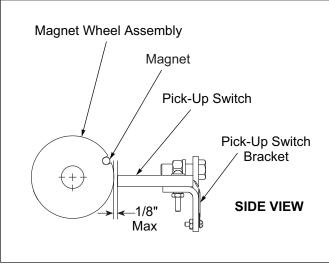


Figure 2-39: Pick-Up Switch Detail

- 7. Attach the Pick-Up Switch ground wire to the small hole in the Pick-Up Switch Mount with a #6-32 x 1/2 Screw, removing paint under the wire connector to assure a good electrical ground connection.
- 8. Connect the Extension Harness into the Acre Meter Cord. (After 06/01/2025, connect the Extension Harness to Channel 1 of the Acre Meter.)
- Route the cord from the Acre Meter down the front of the Seed Box to the Pick-Up Switch and connect the mating plugs.
- Securely fasten the cords to the Seed Box and Transmission with the Adhesive Mounting Plates and tie wraps to prevent the Cords from becoming entangled or rubbing moving parts.
- 11. Program the Acre Meter. See "Electronic Acre Meter Kit Optional" on Page 3-14.

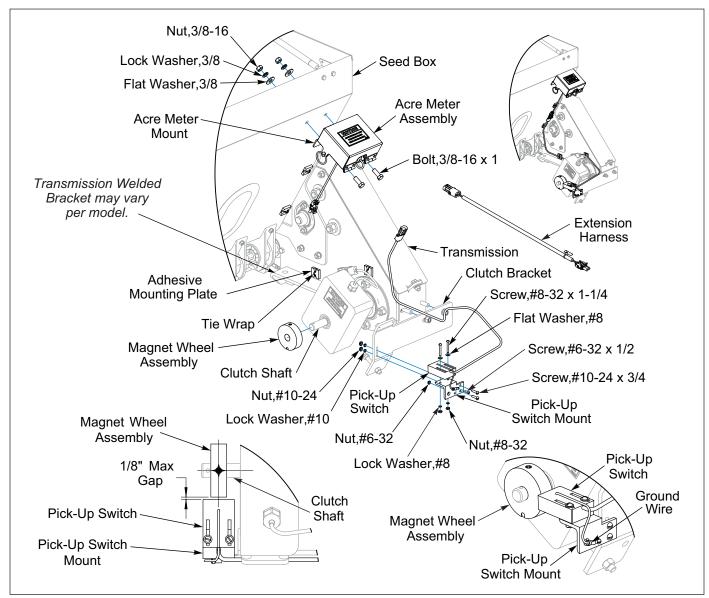


Figure 2-40: Electronic Acre Meter w/Clutch

Console w/Clutch Control Installation - Optional

Mount Console with Clutch Control on Tractor. **See Figure 2-44.**

- Route Console Harness with 9-Pin Connector to the Seeder Harness.
- 2. Attach 3-Pin Power Plug to tractor.
- 3. Secure Console Harness with tie wraps.
- 4. Route Seeder Harness along front frame of seeder. Ensure Connector labeled "Electric Clutch Power" is on the left side.
- 5. On left side connect plug labeled "Electric Clutch Power" to the Electric Clutch lead. If you do not have an Electric Clutch seal the plug end using a 2-Pin Shroud and Cavity Plug to protect it from the environment. **See Figure 2-41.**
- Connect plug labeled "Left Front Seed Shaft Sensor" to the left front Seed Shaft Sensor. Seal the plug end using a 3-Pin Tower and Cavity Plugs to protect it from the environment.
- 7. Repeat for the right side.
- 8. Secure all Harnesses and Wires with cable tie and tie wraps.

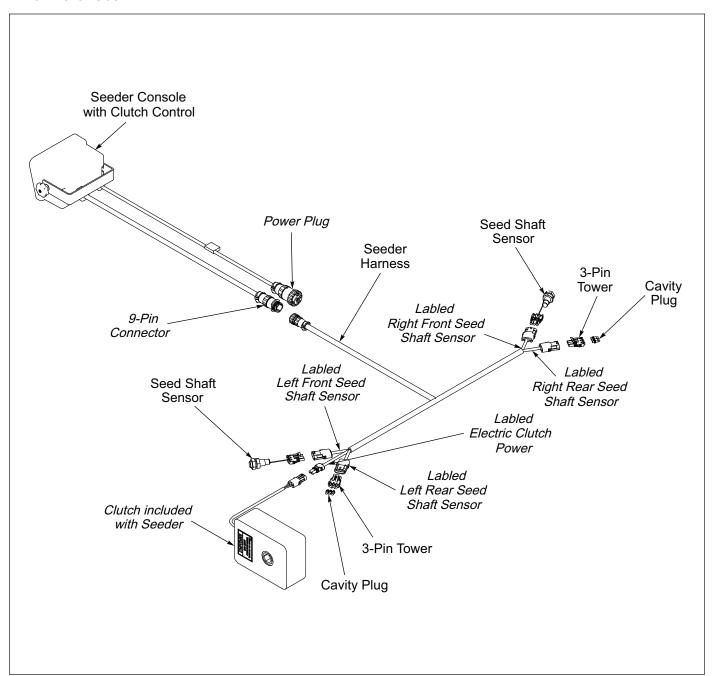


Figure 2-41: Console w/Clutch Control Electrical Schematic

2-30 9K713-2509

Console w/Clutch Control Seed Shaft Sensor - Optional

- Remove the two 10 x 24 x 3/4 self tapping screws from the Magnet Wheel Assembly. Position the rounded half of the Magnet Wheel Assembly on the seed shaft. Ensure it fits squarely onto shaft. Mount magnet half to the rounded half. ensure it fits squarely onto shaft.
- 2. Fasten the two halves together using two #10-24 x 3/4 Self Tapping Screws. *Do not over tighten*.
- 3. Identify the seed cups on either side of the Magnet Wheel Assembly and remove the 1/4-20 hardware.
- 4. Insert Sensor into Shaft Sensor Bracket slot.
- 5. Insert a 1/4-20 x 3/4 Machine Screw into each seed cup. Align the Shaft Sensor Bracket with the two 1/4-20 x 3/4 Screws. Secure with existing Lock Washers and Nuts.
- 6. Slide/Position Seed Shaft Sensor so it is 1/8" from the magnet. **See Figure 2-42.** Tighten both Retaining Locknuts.

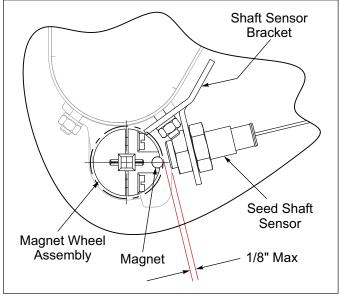


Figure 2-42: Console w/Clutch Control - Detail

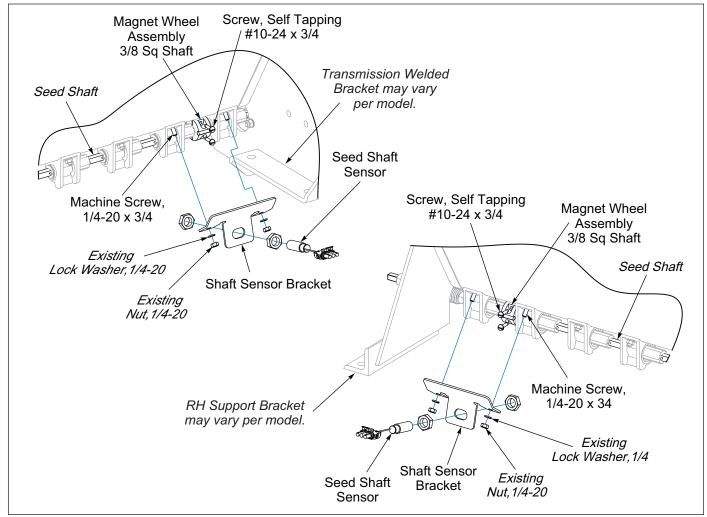


Figure 2-43: Console w/Clutch Control - Seed Box Shaft Sensor

Console w/Clutch Control Tractor Installation - Optional

- 1. Mount Angle Bracket onto Tractor where convenient for the operator. **See Figure 2-44.**
- 2. Attach Straight Bracket to Angle Bracket with 1/2-13 x 1-1/2 Bolt and Flange Locknut.
- 3. Attach the Console to the Straight Bracket with 1/4-20 x 1 Bolt, Flat Washers and Locknut.
- 4. Plug Console 3-Pin Power Cord into the Tractor Convenience Outlet and 9-Pin Cord into the Seeder Harness.
- 5. Check clutch operation: Clutch will disengage when power is applied. (Clutch will make a clicking sound). Set seeder on the ground and drive a short distance while turning switch "SEED" and "NO SEED". The seed shaft will stop rotating when switch is turned to "NO SEED". See "Console w/Clutch Control Optional" on page 3-8.

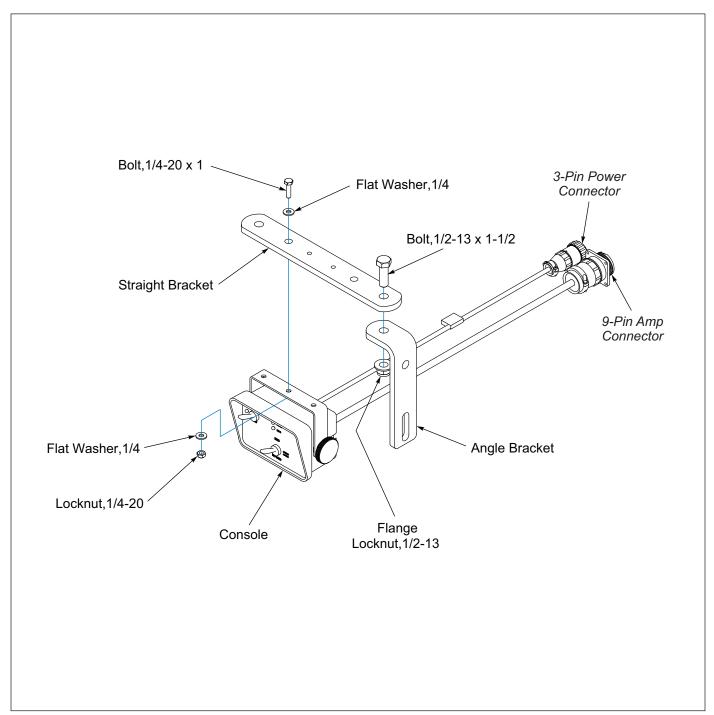


Figure 2-44: Console w/Clutch Control Tractor Installation - Optional

2-32 9K713-2509

Table provided for general use. NOTES:

Scraper Kit, Tube Mounted - Optional

IMPORTANT

Cannot be used with Coil Tine Track Remover Kit.

NOTE

If Seeder has been used, check Front Roller Assembly Wheels that they are tight to one another before installing Scraper Kit. See "Front and Rear Roller Adjustment" on Page 4-5.

- 1. Lower implement onto level ground.
- Position and assemble the Brackets with the 4-Hole Plate approximately as dimensioned on the front of the Seeder Frame Tube. See Figures 2-50 and 2-51. Secure with 1/2-13 x 4-1/2 x 7-1/2 U-Bolts and Flange Locknuts.

NOTE

Scraper Brackets should be positioned per application. Use Figures 2-50 and 2-51 only as a reference.

- 12FT Machines with Drawbar Braces:
 Mount the Brackets with the 4-Hole Plate to the Drawbar Brace Plates with the Drawbar Brace Hardware. See Figure 2-46.
- · 3rd Bracket:

10FT and 12FT Models require a 3rd Bracket that is to be installed on the Seeder Frame Tube left of center in a place that clears the Drawbar or 3-PT Hitch. See Figure 2-47.

NOTE

S-Tine Tire Track Remover Kit can be used with Scraper Kit. Do Not mount the outer Brackets with the 4-Hole Plate to the front of the Seeder Frame Tube. Attach the outer Scraper Bracket Angle to the Tire Track Remover Kit S-Tine Bracket Tube with a 1/2-13 x 4-9/16 x 3-1/4 U-Bolt and Flange Locknuts. See Figure 2-48.

3. Attach the Scraper Brackets to the Bracket Tube with a 1/2-13 x 4-9/16 x 3-1/4 U-Bolt and Flange Locknuts. **Do Not** tighten at this time. **See Figure 2-45.**

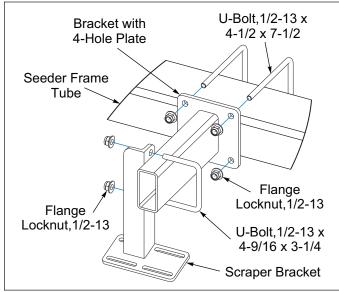


Figure 2-45: Scraper Brackets

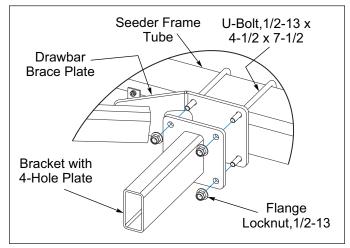


Figure 2-46: 12FT Drawbar with Braces

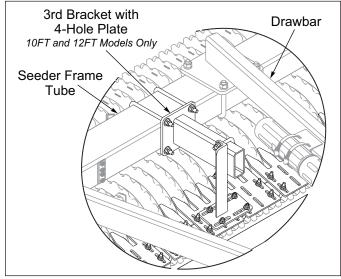


Figure 2-47: 3rd Bracket Placement - 10FT & 12FT

2-34 9K713-2509

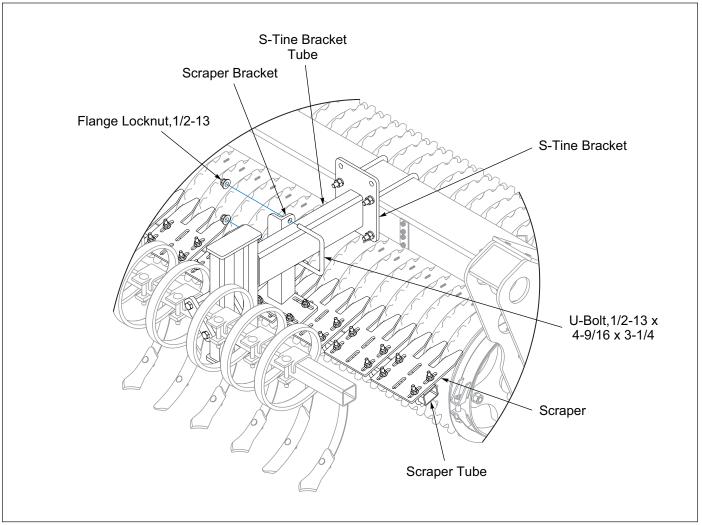


Figure 2-48: Tube Mounted Scrapers with S-Tine Tire Track Remover

- 4. Center Scraper Tube with the Seeder Front Roller.
- Center the Scrapers between the Roller Wheels and attach them to the top of the Scraper Tube in the outer slots with 3/8-16 U-Bolts and Flange Locknuts. Attach the Single Scrapers to the end of the Scraper Tube as needed.
- Align the Scraper Brackets Slotted Plate to the appropriate Scrapers and attach with the Scraper 3/8-16 Hardware. See Figure 2-49. It may be necessary to use the center pair and an outer pair of slots in the Scraper to attach the Scraper Bracket to the Scraper and Tube Assembly. See Figures 2-50 and 2-51.
- Move the Scraper Bracket on the Bracket with 4-hole Plate Tube until the Scrapers are close enough to the Roller Wheels to be functional but without interference, about 3/16" to 1/4" gap between the Scraper and Roller Wheel.
- 8. Tighten all 1/2-13 Hardware. Adjustment may be required after use.

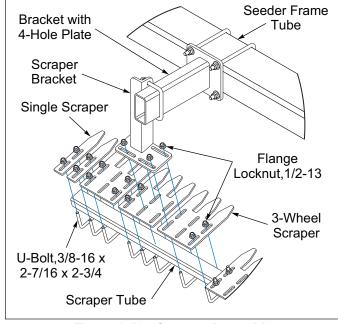


Figure 2-49: Scraper Assembly

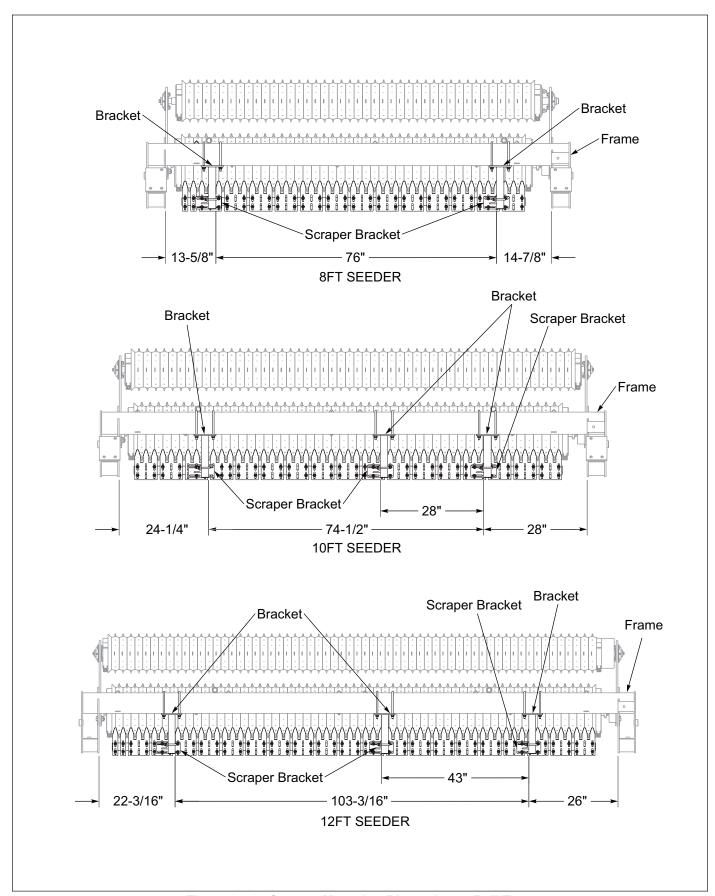


Figure 2-50: Scraper Mounting Dimensions - Pull-Type

2-36 9K713-2509

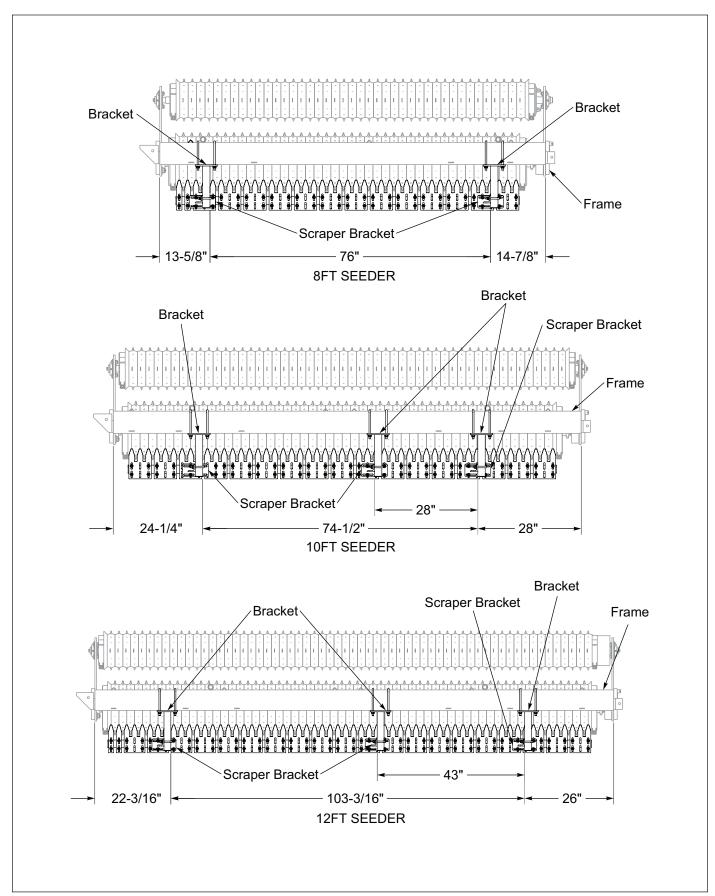


Figure 2-51: Scraper Mounting Dimensions - 3PT Hitch

S-Tine Tire Track Remover Kit - Optional

IMPORTANT

S-Tines should not be operated any deeper than necessary to remove Tractor Tire Tracks. Wet soil will stick to the Front Roller Wheels. As the S-Tine draft load is increased the S-Tines may deflect back and make contact with the Front Roller and break.

NOTE

S-Tine Tire Track Remover Kit includes six S-Tines. Additional S-Tines can be purchased and installed or fewer S-Tines can be used.

S-Tine Brackets and S-Tines should be positioned per application. Use **Figure 2-54** only as a reference.

- Center and position the S-Tine Brackets in relationship with the center of the Drawbar or 3-PT Hitch to the front of the Seeder Frame Tube. See Figure 2-54. Secure S-Tine Brackets to the Seeder Frame Tube with 1/2-13 x 7-1/2 x 4-1/2 U-Bolts, Lock Washers and Nuts. See Figure 2-53.
- 2. Center the Tooth Tube between the S-Tine Brackets and attach with Straps, 1/2-13 x 6 Bolts, Lock Washers and Nuts.
- 3. Attach the S-Tines onto the Tooth Tube in the desired position to cover the Tractor Tire Tracks with Clamps, 7/16-14 x 3-1/2 Carriage Bolts and Locknuts.
- 4. Assemble the Points to the S-Tines. The suggested pattern is to assemble the Reversible Point onto the center S-Tine and a Duck Foot Point on the S-Tine on either side of the center S-Tine with 3/8-16 x 1-3/4 Plow Bolt and Flange Locknut. See Figure 2-52.

NOTE

Scraper Kit can be used with the S-Tine Tire Track Remover. Attach the outer Scraper Bracket Angle to the S-Tine Bracket Tube. Outer Scraper Kit Brackets with the 4-Hole Plate are not used. See Figure 2-48. It may be necessary to adjust the Scraper Brackets on the Scraper Assembly for proper positioning of the Scrapers to the Front Roller Wheels.

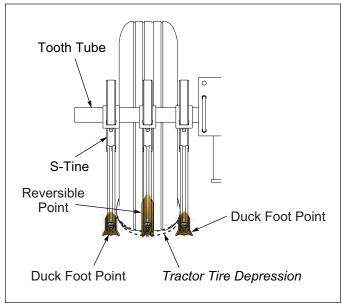


Figure 2-52: S-Tine Point Position

2-38 9K713-2509

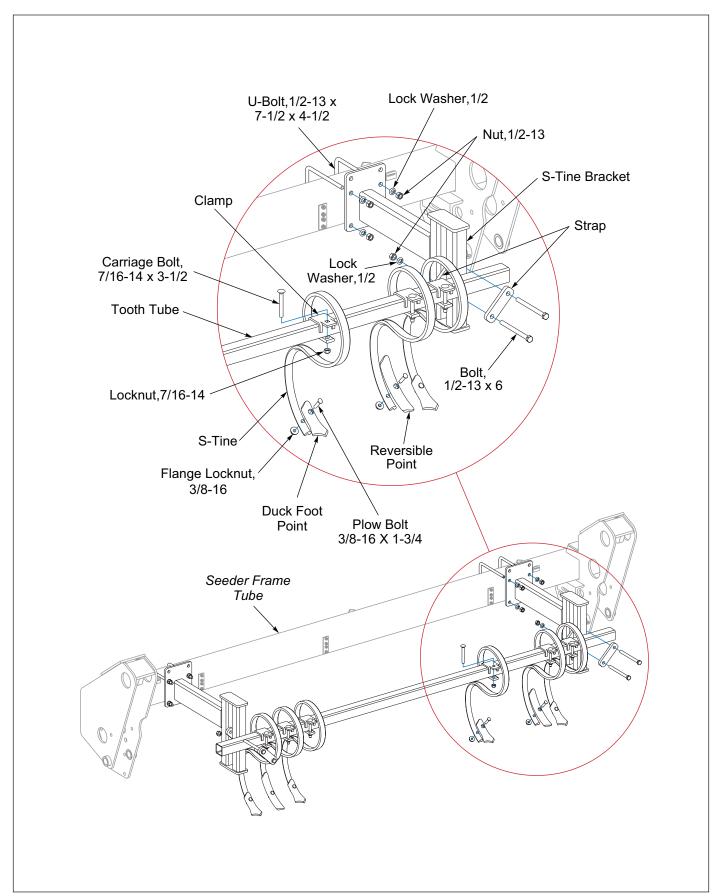


Figure 2-53: S-Tine Track Remover Kit - Optional

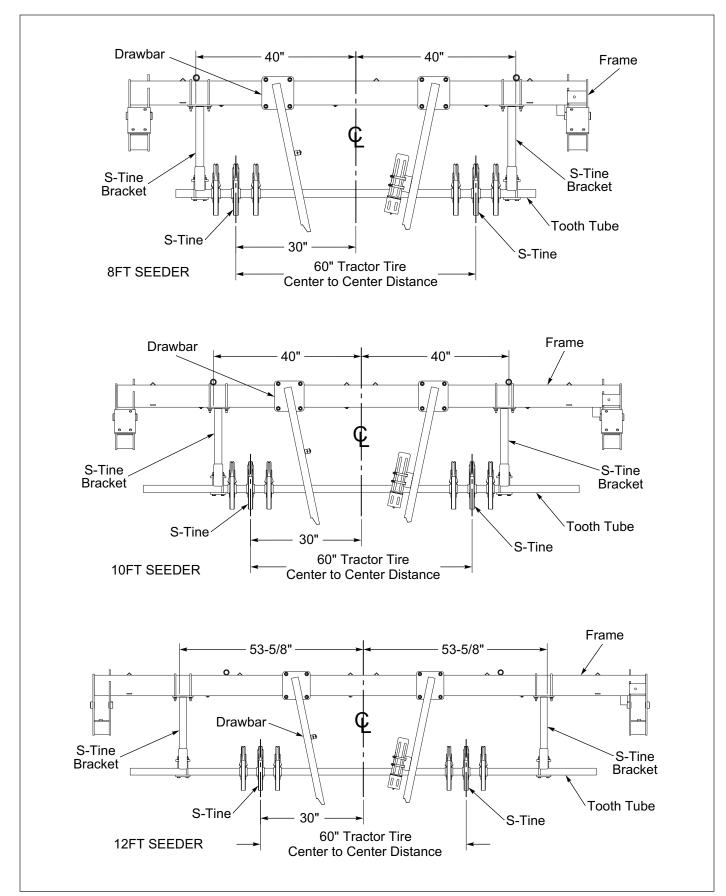


Figure 2-54: S-Tine Mounting Dimensions

2-40 9K713-2509

NOTES:			
			—
			—

Coil Tine Track Remover - Optional

IMPORTANT

Cannot be used with the Scraper Kit.

- Slide the Coil Tines onto the Round Bar so that the straight leg is frontward. See Figure 2-55.
- Mount an Arm Weldment and a Coil Tine to the Round Bar second hole from the right end and the third hole from the left end with 3/8-16 x 3 Bolts, Flat Washers, Lock Washers, and Nuts.
- 3. Mount the Coil Tines to the Round Bar with 3/8-16 x 2-1/2 Bolts, Flat Washers, Lock Washers, and Nuts.
- Position the Brackets on the Seeder Frame Tube and attach with 1/2-13 U-Bolts, Lock Washers, and Nuts.
 Do not tighten at this time.
- Attach the Adjusting Angles to Brackets with Lock Screws. Secure the Adjusting Angles vertically to the Brackets with a 1/2 x 1-1/4 Clevis Pin and Hairpin Cotter.
- 6. Attach the Arm Weldment to the Adjusting Angles with 1/2-13 x 1-3/4 Bolts and Locknuts. Tighten the Locknuts to allow free side to side swinging.
- Center each Coil Tine Track Remover Assemble behind the Tractor Tires. Tighten the Bracket U-Bolts on the Seeder Frame Tube.
- 8. On each Coil Tine Track Remover Assembly, attach a Chain End Link to an Adjusting Angle with 3/8 x 1-1/4 Bolt, Flat Washer, Lock Washer, and Nut. Drape the chain across to the adjacent Adjusting Angle and place the Chain in the Adjusting Angle Slot ensure that the chain is supported off the soil surface.

The vertical position can be changed by removing the Clevis Pins and Lock Screws and moving the Adjusting Angles up or down.

To inactivate the Coil Tines, remove the 1/2 x 1-1/4 Clevis Pins and loosen the Lock Screws. Swing the Coil Tine Bar Assembly upward and sideways. Hold Coil Tine Bar Assembly in place by wrapping the Chain under the Round Bar and placing the Chain into the Adjusting Angle Slot. Re-tighten the Lock Screws. Insert Clevis Pin into Adjusting Angle for storage.

2-42 9K713-2509

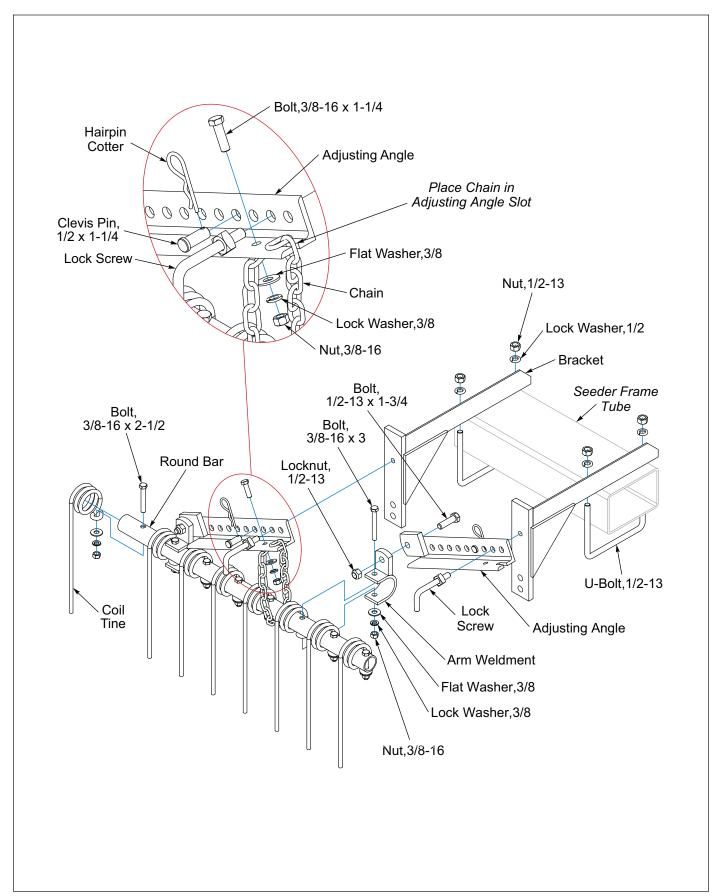


Figure 2-55: Coil Tine Setup

TABLE OF CONTENTS

ASSEMBLY

Table provided for general use. NOTES:	
NOTES.	

2-44 9K713-2509

Operation

DANGER

Never allow anyone to ride on the seeder at any time. Allowing a person to ride on the machine can inflict serious personal injury or death to that person.

WARNING

All hydraulically elevated equipment must have cylinder lockouts installed or be lowered to the ground, when servicing or when equipment is idle. Failure to take preventive measures against accidental lowering can result in serious personal injury.

DANGER

Always lock the tractor drawbar in the center position when transporting the unit. Failure to do so can result in serious injury or death and cause damage to the equipment.

DANGER

When transporting the unit, place cylinder lockouts in the transport lock position after fully extending the cylinders. Insert the lockout pins to secure the cylinder lockouts. Failure to lockout the cylinders can cause the unit to settle during transport, which can result in serious injury or death and cause damage to the equipment.

! CAUTION

When transporting farm implements on public roads, it is the responsibility of the operator to abide by state and local laws concerning wide loads, speed, safety emblems and safety lighting equipment. Drive at safe speeds, particularly when rounding corners, crossing rough ground or driving on hillsides, to prevent tipping the tractor.

Tractor Preparation

The Sure Stand Seeder is available as a Pull Type or 3-PT mounted version.

- A Pull Type seeder is equipped to be pulled by a tractor with a drawbar, no clevis.
- A 3-PT mounted seeder is compatible with CAT 2
 Free Link, CAT 2 Quick Coupler and CAT 3 Narrow
 Quick Coupler.

Tractor Preparation for Attaching 3-PT Seeder

- Brillion 8, 10, and 12 Foot 3-PT Seeders are designed to be pulled with Category 2 Free Link and Category 2 or 3N Quick Hitch Coupler. See Figure 3-1. Be sure Tractor's Hitch Capacity is not exceeded by the Laden Mass of the Seeder. Refer to Tractor Operator's Manual.
- Be sure Tractor is properly ballasted. A minimum 25% of Tractor and Equipment Laden Mass must be on Tractor Front Wheels in transport position to maintain stability. Calculate the Loaded Seeder Mass. See "Specifications" on page 6-1. (Seeder weight plus the seed box capacity with desired seed.) Refer to Tractor Operator's Manual.
- Check the Tractor tire inflation levels to ensure that they are properly inflated for the additional Laden Seeder Mass. Refer to the Tractor Operator's Manual. Be sure not to over ballast and exceed Tractor Tire Capacity.
- Set Tractor 3-PT Lower Links to allow lateral (torsional) float. Refer to Tractor Operator's Manual. If left rigid, your Brillion Seeder may not follow ground contours resulting in poor germination.
- 5. Set Lift Rod length long enough to ensure Seeder can float downward in the case of a furrow or waterway. Lower Links should be the same height, leveling your Brillion Seeder side to side. Fine adjustments may need to be made after hookup is completed. Refer to the Tractor Operator's Manual.
- 6. Attach Seeder to the Tractor's 3-PT Free Link or Quick Coupler using the appropriate size pins and bushings. Be sure to use the hardware provided and is in good working order. **See Figure 3-1.**
- 7. **Refer to the Tractor Operator's Manual** for Quick Hitch Operation.

DANGER

Do not allow any bystanders to stand between the tractor and the machine while backing up to the machine.

- 8. Connect 7-Pin Connector to Tractor Outlet, routing cable by avoiding pinch points.
 - Make sure the tractor has a good clean receptacle, free of dirt and corrosion.
 - Make sure the 7-Pin Connector is inserted ALL the way in. With tighter fitting pins, operator may think the Connector is all the way in, but really isn't.
 - Make sure the tractor receptacle cover latches over the keyway on the 7-Pin Connector to hold the Connector in place.
 - If an operator plugs in the 7-Pin Connector, but the lights do not seem to work right, check the above items to make sure there is a good connection with the 7-Pin Connector.
- If equipped with a Clutch, install Clutch Switch Box or Brillion Elite Mini Monitor to tractor.

Clutch Switch Box: Connect Clutch Switch Box Cord with Ring Terminals to tractor power source. Ring Terminals can be removed and replaced with a different power source connector. Connect 2-Pin Connector to Clutch Harness.

Brillion Elite Mini Monitor: Connect the Elite Mini Tractor Harness to 14-Pin Connector to Brillion Mini Monitor, 3-Pin Plug to the 12 Volt Tractor Convenience Outlet and 6-Pin Connector to 240" Extension Harness. Elite Mini Tractor Harness 4-Pin Connector is not used this time.

- Raise seeder. Remove parking pin. See Figure 3-3.
 Adjust or lock tractor sway stabilizers if equipped, centering the Seeder with the Tractor. Refer to the Tractor Operator's Manual.
- Lower Seeder, if necessary level Seeder side to side (laterally) by adjusting Lift Rod length. Level Seeder front to back by adjusting the Tractor Upper Link length as required. Refer to the Tractor Operator's Manual.

3-2 9K713-2509

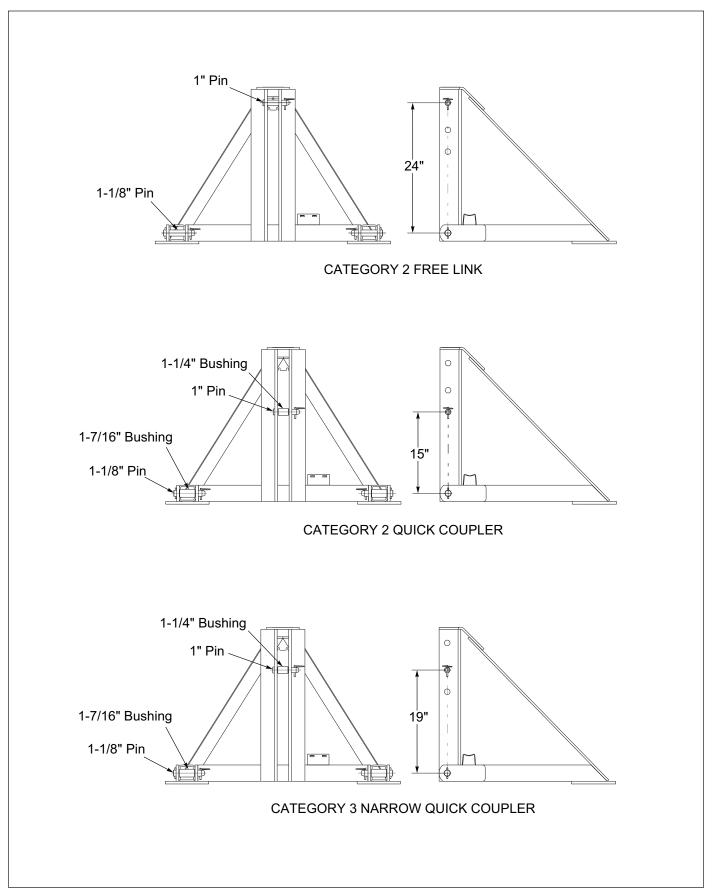


Figure 3-1: 3-Point Hitch

Attaching/Detaching 3-PT Hitch Seeder

! WARNING

To prevent the machine from tipping backward on the frame, disengage parking pin only when the seeder is fully attached to the tractor. Be sure to observe the following sequences.

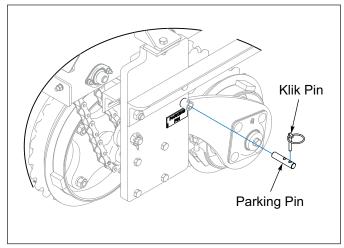


Figure 3-2: Parking Pin

Hooking Up the Seeder:

- 1. Attach Seeder to the Tractor.
- 2. Raise Seeder. Remove the Klik Pin, pull the Parking Pin into the outer position, replace the Klik Pin. **See Figures 3-2 and 3-3.**

Unhooking the Seeder:

- 1. With Seeder raised, remove the Klik Pin, push in the Parking Pin, replace the Klik Pin. **See Figures 3-2** and **3-4**.
- 2. Lower the Seeder and disconnect the Tractor from Seeder.

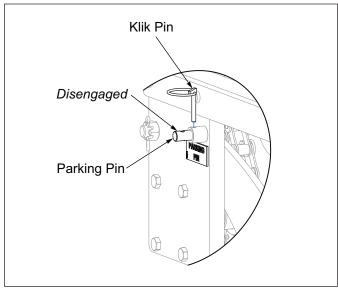


Figure 3-3: Parking Pin Disengaged

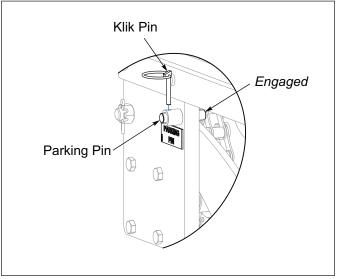


Figure 3-4: Parking Pin Engaged

3-4 9K713-2509

Tractor Preparation for Attaching Pull Type Seeder

DANGER

Do not allow any bystanders to stand between the tractor and the machine while backing up to the machine.

- Align the Tractor Drawbar with the machine. Raise or lower the Drawbar, as needed, using the Jack. Attach the unit with proper size Hitch Pin and Safety Clip.
- 2. Always move the Jack to the transport position before setting the machine in motion.
- 3. Clean all Hydraulic Couplings and attach to the Tractor.
- Attach Safety Chain to tractor allowing plenty of movement for turning both directions. The Safety Chain should latch securely to prevent it from coming loose. See Figure 3-5.

IMPORTANT

If the Clevis Pin is not installed, the Transport Lock may bounce up and cause significant damage to the Cylinder and Hydraulic Fittings.

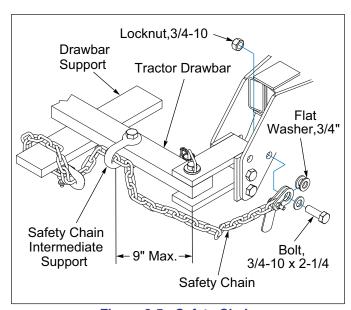


Figure 3-5: Safety Chain

 If Transport Locks are not engaged, fully extend the Hydraulic Lift Cylinders and rotate Transport Locks in the engaged position over the Cylinder Rods. Secure with the Clevis Pins and Hairpin Cotters. See Figure 3-6.

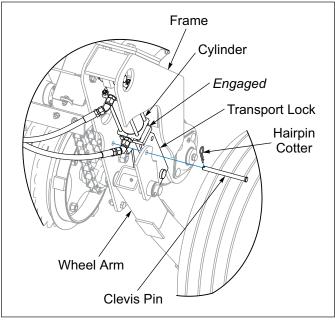


Figure 3-6: Transport Lock Engaged

- 6. Connect the 7-Pin Connector to Tractor Outlet, routing cable by avoiding pinch points.
 - Make sure the Tractor has a good clean Receptacle, free of dirt and corrosion.
 - Make sure the 7-Pin Connector is inserted ALL the way in. With tighter fitting pins, operator may think the Connector is all the way in, but really isn't.
 - Make sure the Tractor Receptacle Cover latches over the keyway on the 7-Pin Connector to hold the Connector in place.
 - If an operator plugs in the 7-Pin Connector, but the lights do not seem to work right, check the above items to make sure there is a good connection with the 7-Pin Connector.
- 7. If equipped with a Clutch, install Clutch Switch Box or Brillion Elite Mini Monitor to tractor.

Clutch Switch Box: Connect Clutch Switch Box Cord with Ring Terminals to tractor power source. Ring Terminals can be removed and replaced with a different power source connector. Connect 2-Pin Connector to Clutch Harness.

Brillion Elite Mini Monitor: Connect the Elite Mini Tractor Harness to 14-Pin Connector to Brillion Mini Monitor, 3-Pin Plug to the 12 Volt Tractor Convenience Outlet and 6-Pin Connector to 240" Extension Harness. Elite Mini Tractor Harness 4-Pin Connector is not used this time.

Attaching/Detaching Pull Type Seeder

Attaching the Seeder for Field Operations:

Seeder parked lowered

- 1. Attach Seeder to the Tractor.
- Raise the Seeder fully to extend the Hydraulic Lift Cylinders and rotate the Transport Locks in the engaged position over the Cylinder Rod. Secure with the Clevis Pins and Hairpin Cotters. See Figure 3-5.
- 3. Raise and rotate Drawbar Jack to stored position before setting the machine in motion.
- 4. Transport the Seeder to the area to be seeded.
- Disengage each Transport Lock so that the Transport Lock rests on the Wheel Arm. Insert the Clevis Pin in front of the Transport Lock. See Figure 3-7.

Seeder parked raised

- 1. Attach Seeder to the Tractor.
- 2. Raise and rotate Drawbar Jack to stored position before setting the machine in motion.
- If not already done, raise Seeder fully to extend the Hydraulic Lift Cylinders and rotate the Transport Locks in the engaged position over the Cylinder Rod. Secure with the Clevis Pins and Hairpin Cotters. See Figure 3-5.
- 4. Transport the Seeder to the area to be seeded.
- Disengage each Transport Lock so that the Transport Lock rests on the Wheel Arm. Insert the Clevis Pin in front of the Transport Lock. See Figure 3-7.

Detaching the Seeder:

Parking Seeder lowered

- Raise the Seeder fully to extend the Hydraulic Lift Cylinders and rotate the Transport Locks to the stored position. Secure with the Clevis Pins and Hairpin Cotters. See Figure 3-7.
- 2. Lower Seeder, relieve pressure from Hydraulic Hoses.
- 3. Rotate and Lower Drawbar Jack.
- 4. Disconnect the Tractor from Seeder.

Parking Seeder raised

- Raise the Seeder fully to extend the Hydraulic Lift Cylinders and rotate the Transport Locks to the engaged position. Secure with the Clevis Pins and Hairpin Cotters. See Figure 3-5.
- 2. Relieve pressure from Hydraulic Hoses.
- 3. Rotate and lower Drawbar Jack.
- 4. Disconnect the Tractor from Seeder.

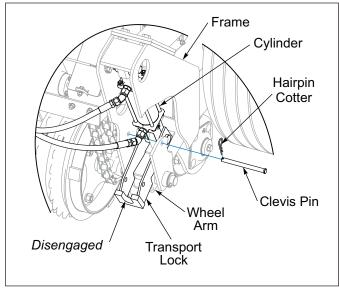


Figure 3-7: Transport Lock Disengaged

General Operation

- The minimum horsepower requirements are typically 6-8 horsepower per foot. This will vary widely due to speed, moisture, and types of soils. Local dealers can help in making recommendations for your areas. For 3-PT Hitch Models size tractor by 3-PT Hitch Capacity.
- 2. Operating speed is typically 4-6 mph. Excessive speed can result in undesirable germination, seeder bouncing, or other unpredictable results. Reduce speed in rocky conditions to prevent wheel breakage.

3-6 9K713-2509

Hydraulic Lift System

The Drawbar Seeder is equipped with a Hydraulic Lift System to raise and lower the unit in the field.

! WARNING

Escaping hydraulic fluid can cause serious personal injury. Relieve system pressure before repairing, adjusting, or disconnecting. Wear proper hand and eye protection when searching for leaks. Use cardboard instead of hands (See Figure 3-8.) Keep all components (cylinders, hoses, fittings, etc.) in good repair.

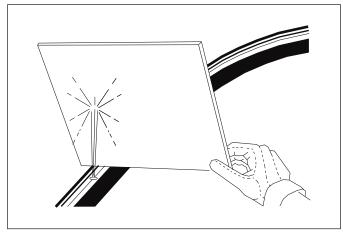


Figure 3-8: Hydraulic Leak Detection

If the Hydraulic System is not filled with oil it should be purged of air before transporting and field operations.

- 1. Carefully hitch the Seeder to the Tractor and connect the Hydraulic Lift Hoses.
- 2. Check to make sure the Tractor Hydraulic Reservoir is full of the manufacturer's recommended oil.
- 3. If the Transport Locks are engaged, raise the Seeder and disengage the Transport Locks. **See Figure 3-7.**
- 4. Slowly raise the machine until both Lift Cylinders are fully extended. Lower and raise the Seeder to verify that both Cylinders are working throughout the stroke. Fully extend the Lift Cylinders and continue to hold the lever until both Cylinder Rods movement stops. Raise/Lower machine 5 times to purge air from the system.
- 5. Do not loosen any Hoses or Fittings.
- 6. Recheck Tractor Reservoir to make sure it is within operating limits.
- 7. Raise the Seeder and install Transport Locks. **See** Figure 3-5.

Lift Circuit approximate oil requirement: .4 gallons.

Transmission Electric Clutch - Optional

IMPORTANT

At no time use high pressure water or air to clean the Electric Clutch as damage could occur.

Clutch characteristics are as follows:

 The Electric Clutch is controlled by a Touch Screen Monitor or a Toggle Switch on the Switch Box mounted to the Tractor.

Brillion Elite Mini Monitor: Touch Screen Monitor provides the user the ability to turn the Seeder Clutch "ON" or "OFF".

Clutch Switch Box: Toggle Switch on the Switch Box, turns the Seeder Clutch to "SEED" or "NO SEED".

Console w/Clutch Control: Toggle Switch on the Console, turns the Seeder Clutch to "SEED" or "NO SEED".

- The Electric Clutch is disengaged when power (12 Volts) is applied. If there is a power failure or electrical problem, the Seeder will continue to operate, so the machine must be raised to stop seeding.
- Seed Shafts will not rotate when the machine is backed up.
- The Clutch Switch Box contains a 5 Amp Time-Delay Fuse.
- The Electric Clutch must be disengaged (power applied) when Seed Shafts are turned manually for Calibration.
- Check Electric Clutch Operation. The Electric Clutch will disengage when power is applied. (Clutch will make a clicking sound). Set Seeder on the ground and drive a short distance while toggling the Seeder Clutch to "ON/SEED" and "OFF/NO SEED". The Seed Shaft will stop rotating when Monitor or Toggle Switch is set to "OFF/NO SEED".
- Set Monitor or Toggle Switch to "ON/SEED" position when Seeder is not used to shut off power to prevent possible overheating of Clutch Coil.

Brillion Elite Mini Monitor - Optional

Brillion Elite Mini Monitor provides information to the operator and acts as an interface for clutch control. The display shows seed shaft rotation, low bin levels, acres seeded, and clutch engagement. The touch screen allows the operator to engage all or individual clutches.

IMPORTANT

The Brillion Elite Mini Monitor System by Loup utilizes a MUX communication line. Sensors must be learned into the Monitor. Location of each pre-learned Smart Shaft Sensor or Bin Level Sensor is important for proper Monitor display. Each Sensor utilizes 3 wires (+, -, MuxBus) to connect to the system. The Sensors do not require specific Harness connection points. Each Sensor is identified in the Monitor by its own signal.

! WARNING

High Power Magnet in use. "High Power Magnet" on Page 1-2

See "Brillion Elite Mini Monitor" Chapter for more information and a detailed guide to the use of your monitor.

- Bin Level Sensors are installed on adjustable brackets in the outer ends of the seed box. When the sensor is submerged in seed, no alarm will sound. As the seed level falls below the sensor eye, an alarm will be indicated on the Brillion Elite Mini Monitor. Raise or lower the Bin Level Sensor Bracket inside the Seed Box to the desired seed level.
- On the RH side of the Seeder is a Smart Shaft Sensor that is installed on a Sensor Mount that is attached to the mounting hardware of two seed cups. The Smart Shaft Sensor is activated by a High Powered Magnet that is placed on the Seed Shaft and is kept in place with a Collar. As the seed shaft rotates the Smart Shaft Sensor detects the magnet. When no signal is detected for pre-defined seconds, an alarm will be indicated on the Brillion Elite Mini Monitor.

NOTE

If Shaft Sensor stall alarm occurs, be aware that the affected seeder has not been planting for the pre-defined time.

- Brillion Elite Mini Monitor provides users the ability to toggle the seeder clutch on or off.
- Brillion Elite Mini Monitor will monitor field and total acres.

- Brillion Elite Mini Monitor is operated on a 12-Volt DC negative ground system. The monitor should be connected using the existing convenience plug connection.
- The Elite Mini Tractor Harness attaches to the Brillion Elite Mini Monitor and connects to the Seeder 240" Extension Harness. See Figure 2-33. The 6-Pin Connection may be plugged/unplugged at the front of the Seeder Hitch when hooking/unhooking the Seeder. This allows the monitor to stay in the tractor if so desired.
- A 4-Pin radar connection is provided as an optional connection for the speed sensor. The speed signal may be determined by either the tractor radar or the speed sensor located on the Seeder.

For service or setup questions contact Loup Electronics Inc. "Service And Technical Support" on Page 4-7.

Console w/Clutch Control - Optional

(Used on models before the Brillion Elite Mini Monitor)

Basic Operation:

During normal operation the console LED for the seed shaft will not be illuminated. The Shaft Sensor will be activated by a magnet wheel installed on the Seed Shaft being monitored. The Shaft Sensors are standard Loup Shaft Sensors, set to 20 second delay timing. When no signal is detected for 20 seconds by the sensor, the corresponding LED in the Console will illuminate and the audible alarm will sound indicating a fault. The alarm will become silent after 30 seconds and will not sound again until the Seed Shaft returns to a fully functional condition.

NOTE

If shaft sensor stall alarm occurs, be aware that the affected seed box has not been planting for 20 seconds.

The Clutch Master toggle switch allows you to go from "SEED" to "NO SEED" operations. See Figure 3-9.



Figure 3-9: Console w/Clutch Control

3-8 9K713-2509

Seed Box Seed Rate Adjustment

/! WARNING

- To prevent damage to seed meters, do not apply excessive force to adjusting nuts. Failure to do so may result in the seed being pinched between the cut-off and washer inside the seed cup.
- Do not close the meters more than 1/8" when there is seed in the meters without rotating the seed shaft to prevent damage to the rotating washers and retainer rings in the seed meters.
- Do not attempt to open the meters more than 1". (Feed rolls could become disengaged from washer in the seed cup.)

NOTE

To avoid Seed Meter damage, if there is seed in the Meters, decrease rate in small increments. Decrease rate no more than one nut revolution and rotate Seed Shaft to purge seed from Meters. Continue adjustment as needed.

NOTE

Before filling with seed be sure Seed Shaft turns freely and Seed Meters are free of any foreign matter.

Wrenches for adjustment are stored on a Pin at the back of the Transmission. **See Figure 3-10.**

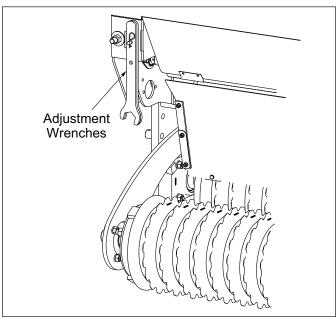


Figure 3-10: Adjustment Wrenches

IMPORTANT

If equipped, the Clutch must be disengaged when Seed Shafts are turned manually for Calibration.

Seed Rate Charts specific to Seeder Model are located inside the Seed Box Cover and in this manual. **See Tables 3-1, 3-3 and 3-4**. It should be used as a reference only, based upon your Seeder Model.

Because of seed variation, a more accurate rate can be determined by performing "Calibration for Unlisted Seeds" on Page 3-11.

On the right side, the Seed Rate for the Seed Meters can be set by adjusting the Seed Rate Adjusting Nut and Adjusting Screw. **See Figure 3-11.**

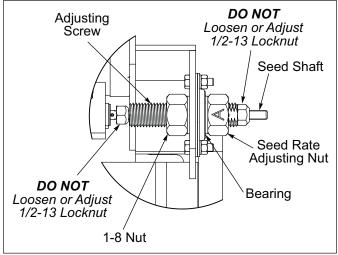


Figure 3-11: Seed Box Seed Rate Adjustment

IMPORTANT

Do Not Loosen or Adjust the 1/2-13 Locknut. See Figure 3-11.

- To increase the rate of seeding, loosen the 1-8 Nut and Seed Rate Adjusting Nut with supplied wrenches. Back the 1-8 Nut away from the Bearing. Set the Seed Rate Adjusting Nut appropriate letter with the Adjusting Screw corresponding number for the desired Seed Rate. Tighten the 1-8 Nut up to the Bearing.
- To decrease the rate of seeding, loosen 1-8 Nut and Seed Rate Adjusting Nut with supplied wrenches.
 Set the Seed Adjusting Nut appropriate letter with the Adjusting Screw corresponding number for the desired Seed Rate. Tighten the 1-8 Nut up to the Bearing.

Seed Meters discharge to the front of the machine to aid the operator in determining proper operation. In addition, reflective amber decals are placed on the seed shaft to indicate rotation.

	POUNDS PER ACRE				POUNDS PER 1000 SQ FT											
Indicator Settings	1A	2A	3A	4A	5A	6A	7A	8A	1A	2A	ЗА	4A	5A	6A	7A	8A
Alfalfa (Uncoated)	5	11	17	26	32	38	46	54	.11	.26	.40	.59	.73	.88	1.06	1.25
Bahia	3	8	14	19	26	32	38	43	.08	.18	.33	.44	.59	.73	.88	.99
Bermuda (Hulled)	3	10	17	27	35	42	48	56	.08	.22	.40	.63	.81	.95	1.1	1.28
Birdsfoot Trefoil (Broadleaf)	5	13	19	27	42	51	61	72	.11	.30	.44	.63	.95	1.17	1.39	1.65
Bluegrass (Kentucky)	2	6	11	16	21	26	30	35	.04	.14	.26	.37	.48	.59	.70	.81
Bluegrass (Park Kentucky)	2	5	10	14	19	22	26	29	.04	.11	.22	.33	.44	.52	.59	.66
Bluegrass (Sherman Big)	2	3	5	8	10	11	13	16	.04	.08	.11	.18	.22	.26	.30	.37
Canola	5	10	16	21	27	33	40	46	.11	.22	.37	.48	.63	.77	.92	1.06
Centipede	5	10	13	17	24	27	32	35	.11	.22	.30	.40	.55	.63	.73	.81
Chickory (Forage)	2	5	8	12	15	18	22	26	.04	.11	.18	.27	.34	.42	.5	.59
Clover (Alsike,Ladino,Sweet,Red)	5	11	19	26	33	42	48	54	.11	.26	.44	.59	.77	.95	1.10	1.25
Clover (Alyce,Calif,Bur,Crimson,Hubam)	3	10	16	24	33	40	48	61	.08	.22	.37	.55	.77	.92	1.1	1.39
Creasted Wheat	2	3	5	6	8	10	11	13	.04	.08	.11	.14	.18	.22	.26	.3
Crown Vetch	5	13	21	30	40	50	59	67	.11	.3	.48	.7	.92	1.14	1.36	1.54
Flax	3	10	16	21	27	32	37	43	.08	.22	.37	.48	.63	.73	.84	.99
Harding Grass	3	8	13	17	22	27	32	37	.08	.18	.3	.4	.52	.63	.73	.84
Highland Bent	3	6	9	12	15	17	20	23	.07	.14	.21	.27	.33	.4	.46	.52
Klein Grass	3	11	19	27	35	45	54	62	.08	.26	.44	.63	.81	1.03	1.25	1.43
Lespedeza (Korean Unhulled)	3	8	14	21	27	33	42	48	.08	.18	.33	.48	.63	.77	.95	1.1
Lespedeza (Korean Hulled)	5	11	19	27	33	42	50	56	.11	.26	.44	.63	.77	.95	1.14	1.28
Lespedeza (Sericea Unhulled)	2	6	11	16	21	26	30	33	.04	.14	.26	.37	.48	.59	.7	.77
Lespedeza (Sericea Hulled)	5	13	21	30	38	48	58	66	.11	.3	.48	.7	.88	1.1	1.32	1.5
Love Grass (Weeping)	3	11	19	27	35	43	53	62	.08	.26	.44	.63	.81	.99	1.21	1.43
Love Grass (Sand)	3	10	16	22	30	38	45	54	.08	.22	.37	.52	.7	.88	1.03	1.25
Millet	3	11	19	27	35	43	53	61	.08	.26	.44	.63	.81	.99	1.21	1.39
Northrup King Mixture	2	4	5	7	8	10	12	14	.04	.08	.12	.16	.19	.23	.27	.31
Red Top	2	5	8	11	13	14	16	19	.04	.11	.18	.26	.3	.33	.37	.44
Reed Canary Grass	2	5	8	11	14	17	21	26	.04	.11	.18	.26	.33	.4	.48	.59
Scott's Family Grass	1	3	4	6	7	8	10	11	.03	.06	.1	.13	.16	.19	.22	.25
Switch Grass (Cleaned and Hulled)	-	5	8	11	14	19	22	27	-	.11	.18	.26	.33	.44	.52	.63
Tillage Radish	5*	12	19	27	34	42	49	57	.11*	.28	.43	.61	.78	.96	1.13	1.31
Timothy	3	8	14	22	29	35	43	51	.08	.18	.33	.52	.66	.81	.99	1.17
Turnip (Purple Top)	3	9	15	22	28	35	41	48	.07	.22	.35	.51	.65	.81	.95	1.09

Table 3-1: Seed Rate Chart

NOT RECOMMENDED: LENTILS, SORGHUM, SUDAN GRASS

NOTE

Brillion assumes no liability pertaining to seeding rates achieved with this seeder. Rates listed are general in nature and should be used as starting points only. Seed varieties and blends listed represent those calibrated through in-house test meters. Variations in actual rates may be realized due to differences in seed lots. For accurate rates with seeds being used, follow the calibration instructions listed on the seed chart inside the box cover or refer to the Operator's Manual. *The information listed in the above seed charts is subject to change without notice.*

3-10 9K713-2509

^{*} WILL CRACK SOME SEEDS AT THESE SETTINGS

Transmission Drive Bolt

For Machines without Clutches

NOTE

#550 Chain connects Front Roller #550 Chain 7 Tooth Sprocket with Transmission #550 Chain 12 Tooth Sprocket.

Transmission Drive Bolt (1/4-20 x 2-1/2) from the #550 Chain 12 Tooth Sprocket, must be removed for Calibration and can also be removed if it is desired to use the Seeder as a Pulverizer, Rollers only. (The Acre Meter will not register when the Bolt is removed). **See Figure 3-12.**

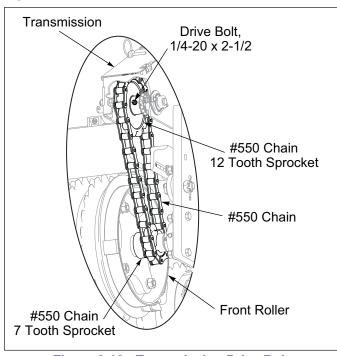


Figure 3-12: Transmission Drive Bolt

Calibration for Unlisted Seeds

IMPORTANT

If equipped, the Clutch must be disengaged when Seed Shafts are turned manually for Calibration. Electrical Power is required to disengage the Clutch.

Brillion assumes no liability pertaining to Seeding Rates achieved with this Seeder. Rates listed are general in nature and should be used as starting points only. Seed varieties and blends listed represent those calibrated through in-house test meters.

Variations in actual rates may be realized due to differences in Seed Lots. For accurate rates with seeds being used, follow the Calibration Instructions listed on the Seed Chart inside the Seed Box Cover or refer to this manual.

NOTE

The information listed in the Seed Charts is subject to change without notice.

IMPORTANT

Rates are for the 13 Tooth Driver. Double these values for the 26 Tooth Driver. See Figure 3-14.

Front Seed Box may be Calibrated for Unlisted Seed as follows.

1. Transmission w/o Clutch

Remove Transmission Drive Bolt (1/4-20 x 2-1/2) from the #550 Chain 12 Tooth Driven Sprocket. **See Figure 3-12.**

Transmission w/Clutch - Optional

Disengage Electrical Clutch. Electrical Power is required to disengage the Clutch.

- 2. Raise Seeder and install Transport Locks. **See** Figure 3-5.
- Place a Canvas or Tarp under the Machine to catch Seed.
- 4. Turn 15/16 Hex on Transmission Shaft Clockwise (CW). **See Figure 3-13.**

8FT Seeder: Use 50 turns if you follow Step 5. Reference, the Seed Shaft rotates 250 Revolutions per Acre Seeded with 13 Tooth Driver.

10FT Seeder: Use 40 turns if you follow Step 5. Reference, the Seed Shaft rotates 200 Revolutions per Acre Seeded with 13 Tooth Driver.

12FT Seeder: Use 33 turns if you follow Step 5. Reference, the Seed Shaft rotates 167 Revolutions per Acre Seeded with 13 Tooth Driver.

Weigh Seed (lbs) and Multiply by 5 (10 for 26 Tooth Driver) for approximate Planting Rate in Pounds per Acre.

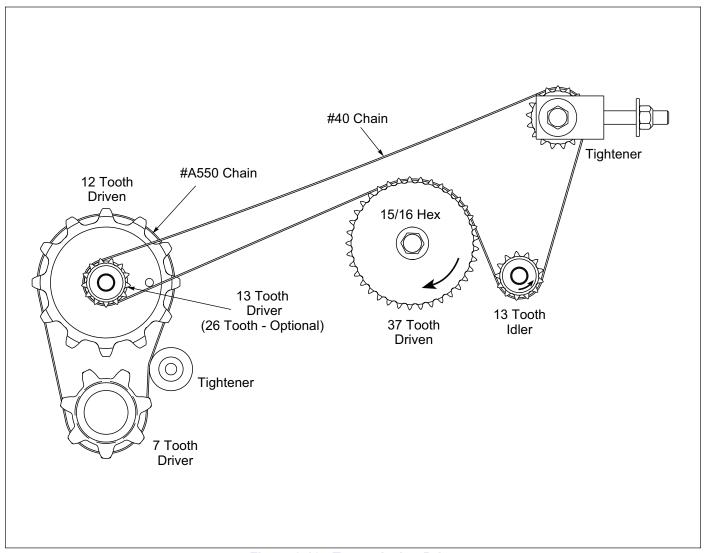


Figure 3-13: Transmission Drive

3-12 9K713-2509

Speed-Up Kit - Optional

Seed rates can be doubled by using a 26 Tooth Sprocket and following the procedure below: **See Figure 3-14.**

- 1. Loosen and remove #550 and #40 Drive Chains.
- 2. Remove 1/4-20 x 2 1/2 Bolt, Lock Washer and Nut from #550 chain 12 Tooth Sprocket Hub on Front Transmission Shaft.
- 3. Remove the 1/4 x 1-1/2 Roll Pin from 13 Tooth Sprocket Hub on the Front Transmission Shaft.
- 4. Remove the Locking Collar from the left side of the Front Transmission Shaft.

- 5. Move the shaft far enough to the right to remove the 13 Tooth Sprocket.
- 6. Install the new 26 Tooth Sprocket.
- 7. Replace all items (except #40 Chain) in reverse order.
- 8. Add extra links to #40 Chain.
- 9. Adjust chain tension. See Figure 5-7.

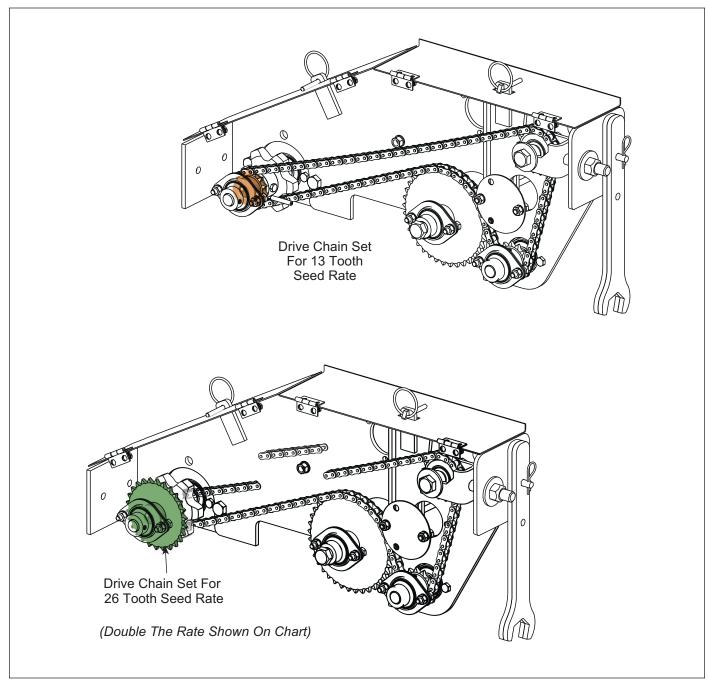


Figure 3-14: Speed-Up Kit Setup

Electronic Acre Meter Kit - Optional

IMPORTANT

Acre Meter is dust and splash resistant, under no circumstances should this unit be submerged in any conductive, corrosive, or flammable liquid. At no time use high pressure water or air to clean it, as this can damage the unit.

Loup Acre Meter (After 06/01/2025)

Settings

The battery operated acre counter operates in one of two modes. In sleep mode, the display is blank, and the counter is accumulating acres. Sleep mode will be entered if a button is not pressed for 20 seconds. In entry mode, the display is on, and the operator can enter values. To get into entry mode, press the */FUNC button. If you continue to press the */FUNC button, the acre counter will cycle through the functions that it can perform. The screen above will display which of the 6 pages is selected.

The available functions are: Field Acres, Total Acres, Pulses per 400 ft, Width/Section, Password, US/EU Units and Background Color. **See Figure 3-15.**

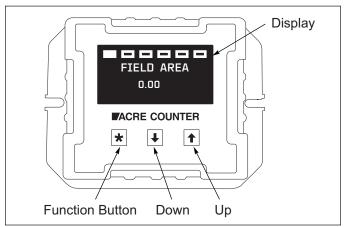


Figure 3-15: Acre Meter - 4 Channel (After 06/2025)

Field Acres

Press the */FUNC button until the FIELD AREA screen is selected. The digits indicate the acres covered since the field acre counter was cleared.

To clear the field acre count, press the **UP** and **DOWN** buttons simultaneously for two seconds. If a password has been entered, you will not be able to clear the total acre count. Field acres will count in tenths of an acre up to 9999.9 acres. It will then count in whole acres to 99,999.

Total Acres

Press the */FUNC button until FIELD AREA is displayed. The digits indicate the acres covered since the total acre counter was cleared.

To clear the total acre count, press and hold the **UP** and **DOWN** buttons for two seconds. If a password has been entered, you will not be able to clear the total acre count. Total acres will count from .1 to 9,999.9 acres. It will then count in whole acres to 99.999.

Pulses Per 400 Feet

Press the */FUNC button until the PULSES screen is displayed. The number in the display indicates how many pulses are generated for every 400 feet driven. There are two methods to enter the pulses per 400 feet:

If you know the number, select it using the **UP** and **DOWN** buttons. When you press the */FUNC button, the Acre Counter will accept the number in the display as the new pulses per 400 feet. **See Table 3-2.**

If you do not know the pulses per 400 feet, press and hold the **UP** and **DOWN** buttons, the LCD will display pulses calibration and 0. The acre counter is now counting shaft rotations. Enter the cab and drive 400 feet. Press the */FUNC button to wake up the acre counter. The **PULSES** screen will again blink. The number displayed is the pulses per 400 feet. Press the */FUNC button to accept the setting. The **PULSES** screen will stop blinking and remain on.

If a password is set, you will not be able to adjust the pulses.

Width/Sect

The Acre Meter is capable of monitoring up to 4 sections at a time and will allow the operator to turn off different sections and still maintain an accurate acre count. Section 1 (S1) should be used in monitoring the total width of the seeder at all times, this will be the most common configuration. If S2, S3, and/or S4 are to be used, an extra Pick-Up Switch, Magnet Wheel and extension are needed for each section.

Press the */FUNC button until the WIDTH/SECT screen is displayed. The number displayed is the length of your implement in inches. To adjust the width, press the UP and DOWN buttons. If a password has been entered, you will not be able to adjust the width. The length can be adjusted from .1 to 999 inches.

Examples: A 30' seeder using 1 section = 360 for S1 A 30' seeder using 3 sections = 120 for S1, S2, and S3. Three Acre Meter Pick-Up Switches, Magnet Wheels and extensions will be needed.

3-14 9K713-2509

Password

The password function allows you to protect the total acre count, pulses per 400 feet, and width settings with a password. This stops anyone from accidentally changing those settings. When the acre counter is shipped, the password is disabled. You can modify the pulses per 400 feet and implement width at any time.

Press the */FUNC button until the PASSWORD screen is displayed. The digits will display Password ENTER, Password OFF, or Password SET.

If the display shows "OFF": The password is disabled. The total acre count, pulses/400 ft, width, and password settings can be adjusted using the UP and DOWN buttons. The password can also be changed using the UP and DOWN buttons. Press the */FUNC to set.

If the display shows "ENTER": You must enter your password using the UP and DOWN buttons. When your password is displayed, press the */FUNC button to test the password. If the password is correct, you will be able to change the acre counter settings. The password will be viewable until the acre counter powers down. When the acre counter is powered up again, you will have to re-enter the password to change settings.

If the password is not correct, you will not be able to change the acre counter settings. When the **PASSWORD** function is selected again, **ENTER** will appear in the display.

Changing The Password

You must first enter the current password then press */FUNC. Then press the */FUNC button to come back to the Password display. You can now select a new password using the UP and DOWN buttons. Press the */FUNC button until the word SET appears in the display. Release the */FUNC button. The number in the display is your new pass code. Make sure you record this number. Press and hold the */FUNC button until the word SET appears in the display.

If the password is forgotten, it can be disabled by removing the batteries. The password is intended for rental units. It is recommended that a seal be affixed to the rear plate of the acre counter to determine if the settings have been tampered with.

Metric Units Area Accumulation

The meter can be set to accumulate are in US or Metric Units by pressing **UP** or **DOWN** buttons to make the selection, then press */FUNC.

Battery Replacement

The battery operated acre counter uses 3 AA batteries. A low battery message will show on screen before going into sleep mode if the voltage is low and the batteries need to be replaced. Remove the acre counter from the implement and undo the 4 screws on the back of the case. Replace the batteries with 3 high quality AA alkaline batteries. **See Figure 3-16.**

See "Acre Meter Troubleshooting" on Page 4-12.

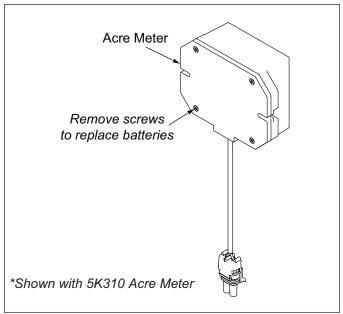


Figure 3-16: Battery Replacement

Loup Acre Meter (05/15/2012 TO 06/01/2025)

Settings

The battery operated Acre Meter operates in one of two modes.

- In sleep mode, the display is blank and the counter is accumulating acres. Sleep mode will be entered if a button is not pressed for 20 seconds.
- In entry mode, the display is on, and the operator can enter values. To get into entry mode, press the */FUNC button. If you continue to press the */FUNC button, the acre counter will cycle through the functions that it can perform. The LEDs above the display indicate which function is selected.

The available functions are: Field Acres, Total Acres, Pulses per 400 feet, Width, Password and Low Battery. **See Figure 3-17.**

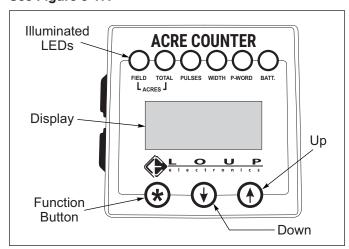


Figure 3-17: Acre Meter (05/2012 TO 06/2025)

Field Acres

Press the */FUNC button until the FIELD LED is lit. The digits indicate the acres covered since the field acre counter was cleared.

To clear the field acre count, press the **UP** and **DOWN** buttons simultaneously for two seconds. If a password has been entered, you will not be able to clear the total acre count. Field acres will count in tenths of an acre up to 9999.9 acres.

Total Acres

Press the */FUNC button until the TOTAL LED is lit. The digits indicate the acres covered since the total acre counter was cleared.

To clear the total acre count, press and hold the **UP** and **DOWN** buttons for two seconds. If a password has been entered, you will not be able to clear the total acre count. Total acres will count from 1 to 99999 acres.

Pulses Per 400 Feet

Press the */FUNC button until the PULSES LED is lit. The number in the display indicates how many pulses are generated for every 400 feet driven. There are two methods to enter the pulses per 400 feet:

- If you know the number, select it using the UP and DOWN buttons. When you press the */FUNC button, the Acre Counter will accept the number in the display as the new pulses per 400 feet. See Table 3-3.
- 2. If you do not know the pulses per 400 feet, press and hold the **UP** and **DOWN** buttons until the "0" appears in the display. The **PULSES** LED will blink. The acre counter is now counting shaft rotations. Enter the cab, lower seeder, engage clutch if equipped, and drive 400 feet. Press the */FUNC button to wake up the acre counter. The **PULSES** LED will light. The number displayed is the pulses per 400 feet. Press the */FUNC button to accept the setting.

If a password is set, you will not be able to adjust the pulses.

Width

Press the ***/FUNC** button until the **WIDTH** LED is lit. The number displayed is the length of your machine in feet.

To adjust the width, press the **UP** and **DOWN** buttons. If a password has been entered, you will not be able to adjust the width.

The width can be adjusted from .1 to 99.9 feet, in tenths of a foot.

Password

The password function allows you to protect the total acre count, pulses per 400 feet, and width settings with a password. This stops anyone from accidentally changing those settings. When the acre counter is shipped, the password is disabled. You can modify the pulses per 400 feet and machine width at any time.

Press the */FUNC button until the PASS LED is lit. The digits will display the word Ent or dIS.

If the display shows "dIS". The password is disabled. The total acre count, pulses/400 feet, width, and password settings can be adjusted using the UP and DOWN buttons. The password can also be changed using the UP and DOWN buttons.

If the display shows "Ent": You must enter your password using the UP and DOWN buttons. When your password is displayed, press the */FUNC button to test the password. If the password is correct, you will be able to change the acre counter settings. The password will be viewable until the acre counter enters sleep mode. When the acre counter is in entry mode again, you will have to re-enter the password to change settings.

3-16 9K713-2509

If the password is not correct, you will not be able to change the acre counter settings. When the **PASS** function is selected again, **Ent** will appear in the display.

Changing the Password

Select a new password using the **UP** and **DOWN** buttons. Press the */FUNC button until the word **SEt** appears in the display. Release the */FUNC button. The number in the display is your new pass code. Make sure you record this number. Press and hold the */FUNC button until the word **dIS** appears in the display.

If the password is forgotten, it can be disabled by removing the batteries. The password is intended for rental units. It is recommended that a seal be affixed to the rear plate of the acre counter to determine if the settings have been tampered with.

Battery Replacement

The battery operated acre counter uses 3 AA batteries. The **BATT** LED will light when the batteries require replacement. Remove the acre counter from the machine and undo the 4 screws on the back of the case. **See Figure 3-18.** This will separate the housing from the rear plate. Replace the batteries with 3 high quality AA alkaline batteries.

See "Acre Meter Troubleshooting" on Page 5-9.

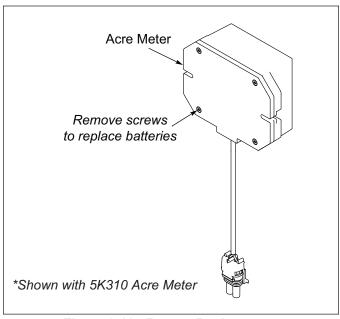


Figure 3-18: Battery Replacement

Loup Acre Meter (Before 05/15/2012)

Settings

- When the meter is set to "count" mode in pulses screen, meter will register only magnetic wheel revolutions.
- The meter must be in sleep mode (blank screen) to calculate acres or to count pulses.
- The count screen must have a value other than zero (0000) to scroll to other modes or screens.
- To reset the FIELD ACRES screen to zero (0000), press the UP and DOWN buttons simultaneously.

To Program Meter

- Press the Function (FUNC) button to scroll to pulses screen.
- Enter the number of pulses using the up or down buttons for the model listed in the chart. See Table 3-4.
- 3. Press the **FUNC** to set the pulses. (If screen goes blank before you press **FUNC**, repeat Steps 1 and 2).
- 4. Press the **FUNC** to scroll to the width screen.
- Enter the width of seeder using the UP or DOWN buttons for the model listed in the chart. See Table 3-4.
- 6. Press the **FUNC** to set the width. (If screen goes blank before you press **FUNC**, repeat Steps 4 and 5).
- 7. Press the **FUNC** to scroll through the screens to check that the correct pulses and width have been entered.

To Enter Password

- 1. Press the **FUNC** to scroll to password screen.
- Pick a numeric password and enter it by using the UP or DOWN buttons, until your password is displayed.
- Press the FUNC to set password; screen will show (set). Record number - it is required if you decide to disable password.
- 4. Let screen go blank password is now entered.
- 5. Press the **FUNC** to scroll to the password screen it will show **Ent**. If the screen does not show **Ent**, repeat Steps 2, 3 and 4.

To Disable Password

- 1. Press the **FUNC** to scroll to the password screen it will show **Ent**.
- 2. Use **UP** or **DOWN** button to enter password (number).
- 3. Press the **FUNC** to scroll around to pass screen again. Number entered in Step 2 will appear.
- Press UP or DOWN button to enter 0.
- 5. Press the **FUNC**; (**dis**) will appear. Password is now disabled.

Acre Meter Settings

4 CHANNEL ACRE METER									
	MO	DEL		Pulses per 400 FT	Width (Inches)				
SSPT604				22	60 in.				
SSP4	SSB4	SS4		44	48 in.				
SSP5	SSB5	SS5		44	60 in.				
SSP6	SSB6	SS6		44	72 in.				
SSP8	SSBP8	SS8	SSB8	58	96 in.				
SSP10	SSBP10	SS10	SSB10	58	120 in.				
SSP12	SSBP12	SS12	SSB12	58	144 in.				
SSP16	SS16	4610-16		45	192 in.				
SSP108	SS108			58	96 in.				
SSP110	SS110			58	120 in.				
SSP112	SS112			58	144 in.				
SSP208/2081	SS208/2081	FIELD	AREA	58	96 in.				
SSP210/2101	SS210/2101	0.0		58	120 in.				
SSP212/2121	SS212/2121		COUNTER	58	144 in.				
SSP308/3081	SS308/3081			29	96 in.				
SSP310/3101	SS310/3101			29	120 in.				
SSP312/3121	SS312/3121		ACRE METER	29	144 in.				
SLP8	SL8		D BEFORE	314	96 in.				
SLP10	SL10	ADJUSTING	SETTINGS	314	120 in.				
SLP12	SL12			314	144 in.				
SLP204/2041	SLPB204/2041			128	48 in.				
SLP206/2061	SLPB206/2061			128	72 in.				
SLP304/3041	SLPB304/3041			64	48 in.				
SLP306/3061	SLPB306/3061			64	72 in.				
LSP5	LS5			128	60 in.				
LSP6	LS6			128	72 in.				
LSS6	200			128	72 in.				
SLP208/2081	SLPB208/2081	SL208/2081	SLB208/2081	116	96 in.				
SLP210/2101	SLPB210/2101	SL210/2101	SLB210/2101	116	120 in.				
SLP212/2121	SLPB212/2121	SL212/2121	SLB212/2121	116	144 in.				
SLP308/3081	SLPB308/3081	SL308/3081	SLB308/3081	58	96 in.				
SLP310/3101	SLPB310/3101	SL310/3101	SLB310/3101	58	120 in.				
SLP312/3121	SLPB312/3121	SL312/3121	SLB312/3121	58	144 in.				
BOS4F1	BOS4S1	BOSB4F1	BOSB4S1	45	48 in.				
BOS6F1	BOS6S1	BOSB6F1	BOSB6S1	45	72 in.				
BPS6	BPSB6			51	72 in.				
BPS8	5. 020			50	96 in.				
GLP643	SSLP643			69	60 in.				
4620-24	332, 370			45	288 in.				
4630-36				per Seeder	432 in.				
X20-26	XL28-36	XXL38-46		90	per Model				
WFP23-37	WFP38-52	701200-40		90	per Model				
FPSB-6	FPS6			89	72 in.				

Table 3-2: Acre Meter Settings (After 06/01/2025)

3-18 9K713-2509

SINGLE CHANNEL ACRE METER									
	MOI	DEL		Pulses per 400 FT	Width (Feet)				
SSPT604				22	5.0				
SSP4	SSB4	SS4		44	4.0				
SSP5	SSB5	SS5		44	5.0				
SSP6	SSB6	SS6		44	6.0				
SSP8	SSBP8	SS8	SSB8	58	8.0				
SSP10	SSBP10	SS10	SSB10	58	10.0				
SSP12	SSBP12	SS12	SSB12	58	12.0				
SSP16	SS16	4610-16		45	16.0				
SSP108	SS108			58	8.0				
SSP110	SS110			58	10.0				
SSP112	SS112	ACREO	OUNTER	58	12.0				
SSP208/2081	SS208/2081		OOO O	58	8.0				
SSP210/2101	SS210/2101	FIELD TOTAL PULSES LACRES J	B WIDTH P-WORD BATT.	58	10.0				
SSP212/2121	SS212/2121			58	12.0				
SSP308/3081	SS308/3081	() :	D U P	29	8.0				
SSP310/3101	SS310/3101	₩ —	Ð-Ð-	29	10.0				
SSP312/3121	SS312/3121	SINGLE CHANN	EL ACRE METER	29	12.0				
SLP8	SL8	VERIFY THE	ACRE METER	314	8.0				
SLP10	SL10		D BEFORE G SETTINGS	314	10.0				
SLP12	SL12	7,50001111		314	12.0				
SLP204/2041	SLPB204/2041			128	4.0				
SLP206/2061	SLPB206/2061			128	6.0				
SLP304/3041	SLPB304/3041			64	4.0				
SLP306/3061	SLPB306/3061			64	6.0				
LSP5	LS5			128	5.0				
LSP6	LS6			128	6.0				
LSS6				128	6.0				
SLP208/2081	SLPB208/2081	SL208/2081	SLB208/2081	116	8.0				
SLP210/2101	SLPB210/2101	SL210/2101	SLB210/2101	116	10.0				
SLP212/2121	SLPB212/2121	SL212/2121	SLB212/2121	116	12.0				
SLP308/3081	SLPB308/3081	SL308/3081	SLB308/3081	58	8.0				
SLP310/3101	SLPB310/3101	SL310/3101	SLB310/3101	58	10.0				
SLP312/3121	SLPB312/3121	SL312/3121	SLB312/3121	58	12.0				
BOS4F1	BOS4S1	BOSB4F1	BOSB4S1	45	4.0				
BOS6F1	BOS6S1	BOSB6F1	BOSB6S1	45	6.0				
BPS6	BPSB6			51	6.0				
BPS8				50	8.0				
GLP643	SSLP643			69	5.0				
4620-24				45	24.0				
4630-36				per Seeder	36.0				
X20-26	XL28-36	XXL38-46		90	per Model				
WFP23-37	WFP38-52			90	per Model				
FPSB-6	FPS6			89	6.0				

Table 3-3: Acre Meter Settings (05/15/2012 TO 06/01/2025)

SINGLE CHANNEL ACRE METER									
	MOI	Pulses	Width (Feet)						
SSPT604				293	5				
SSP4		SS4		578	4				
SSP5		SS5		578	5				
SSP6		SS6		578	6				
SSP8		SS8		764	8				
SSP10		SS10		764	10				
SSP12		SS12		764	12				
SSP108		SS108		760	8				
SSP110		SS110		760	10				
SSP112		SS112		760	12				
SSP208	SSP2081	SS208	SS2081	764	8				
SSP210	SSP2101	SS210	SS2101	764	10				
SSP212	SSP2121	SS212	SS2121	764	12				
SSP308		SS308		382	8				
SSP310		SS310		382	10				
SSP312		SS312		382	12				
SLP8		SL8		4147	8				
SLP10		SL10		4147	10				
SLP12		SL12		4147	12				
SLP204	SLP2041			1690	4				
SLP206	SLP2061			1690	6				
SLP304	SLP3041			845	4				
SLP306	SLP3061			845	6				
LSP5				1690	5				
LSP6				1690	6				
LSS6				1690	6				
SLP208	SLP2081	SL208	SL2081	1528	8				
SLP210	SLP2101	SL210	SL2101	1528	10				
SLP212	SLP2121	SL212	SL2121	1528	12				
SLP308	SLP3081	SL308	SL3081	764	8				
SLP310	SLP3101	SL310	SL3101	764	10				
SLP312	SLP3121	SL312	SL3121	764	12				
BOS4F1	BOS4S1	BOSB4F1	BOSB4S1	600	4				
BOS6F1	BOS6S1	BOSB6F1	BOSB6S1	600	6				
BPS6	BPSB6			679	6				
GLP643	SSLP643			917	5				

Table 3-4: Acre Meter Settings (Before 05/15/2012)

3-20 9K713-2509

Transporting the Seeder

- 1. Check and follow all federal, state, and local requirements before transporting the Seeder.
- The Seeder should be transported only by tractor required for field operation. The machine weight should not exceed more than 1.5 times the tractor weight. Maximum transport speed for the Seeder is 20 mph.

! CAUTION

Excessive speed may result in loss of control of the tractor and machine, reduced braking ability, or failure of the machine tire or structure. Do not exceed the machines maximum specified ground speed regardless of the capability of the maximum tractor speed.

- When towing equipment in combination, the maximum equipment ground speed shall be limited to the lowest specified ground speed of any of the towed machines.
 - Maximum transport speed shall be the lesser of travel speed specified in the operator's manual, speed identification symbol, information sign of towed equipment, or limit of road conditions.
- 4. Slow down when driving on rough roads. Reduce speed when turning, or on curves and slopes to avoid tipping. Equipment altered other than the place of manufacture may reduce the maximum transport speed. Additional weight, added tanks, harrowing attachments, etc. may reduce machine load carrying capabilities.
- 5. A Safety Chain is provided with the implement to insure safe transport. **See "Safety Chain" on page 1-4.**
 - The Safety Chain should have a tensile strength equal to or greater than the gross weight of the implement. The chain is attached to the lower hitch clevis hole with two flat washers between the clamp plates to assure a tight connection. Always use a 1" diameter Grade 8 bolt for this connection.
 - Attach the Safety Chain to the tractor drawbar.
 Provide only enough slack in the chain for turning.
 Do not use an intermediate chain support as the attaching point for the chain on the tractor. Do not pull the implement by the Safety Chain.
 - Regularly inspect the Safety Chain for worn, stretched, or broken links and ends. Replace the Safety Chain if it is damaged or deformed in any way.

- 6. Before transporting:
 - Know the height and width of the implement being transported. Markers, tanks, attachments, etc. can increase the height and width of the implement.

DANGER

Stay away from power lines when transporting, extending implement. Electrocution can occur without direct contact.

- Check to see that the tractor hitch capacity is rated to carry the weight of the Seeder Hitch. Refer to Tractor Operator's Manual.
- Use provided pins that properly fits the Lift Arms or Quick Hitch and Implement Hitch.
- Clean all Hydraulic Couplings and attach to tractor remotes.
- Connect Basic Clutch Switch Box or Brillion Elite Mini Monitor System to tractor.
- Connect the Safety Warning Lights 7-Pin Plug into tractor 7-Pin outlet, routing cord by avoiding pinch points.
- Fully raise the Seeder Hydraulic Lift or 3-PT Hitch.
- Make sure Transport Locks are installed and secured with Clevis Pins and Hairpin Cotters. See "Transport Lock Engaged" on page 3-5.

! WARNING

Failure to use transport lock during transport may result in permanent equipment damage, serious injury, or death.

- Check all tires for proper inflation, and that wheel bolts or lug nuts are properly torque.
- Verify that all warnings lights, SMV sign, reflectors, and safety decals are clearly visible and functioning properly.
- Transport during daylight hours whenever possible. Always use flashing warning lights, except where such use is prohibited by law. Make sure lights, reflectors and SMV emblem are clearly visible and operating. Remove any obstructions such as dirt, mud, stalks or residue that restricts view before transporting. See Figure 3-19.



Figure 3-19: SMV Sign

TABLE OF CONTENTS

OPERATION

1	a	ble	е	pro	ovid	ed	tor	ge	ner	al	use)

NOTES:	

3-22 9K713-2509

Brillion Elite Mini Monitor

Overview

The Brillion Elite Mini Monitor is a full featured display designed to provide accurate information to the operator for Ground Speed and Acres Planted, Seeder Unit Clutch Control, Seed Shaft Rotation, and Bin Level. This Chapter will familiarize you with operation and technical information. All aspects and features are detailed but may not be applicable to your system configuration.

 Ground Speed (Implement mounted Ground Speed Sensor, Radar, GPS Speed or Simulated Speed)

- Field Acres and Total Acres
- Clutch Control
- (Up to 6) Six Seed Shaft Rotation Sensors
- (Up to 6) Six Hopper Level Sensors
- Clutch Master On/Off Switch



High Power Magnet in use. See "High Power Magnet" on 1-2.

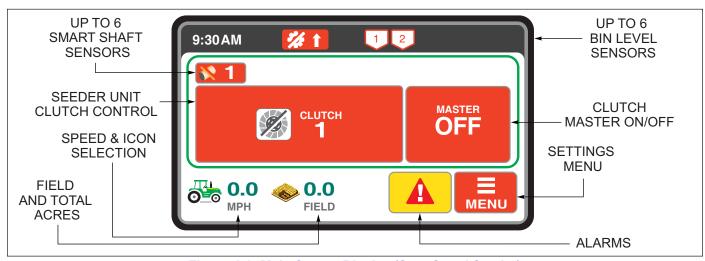


Figure 4-1: Main Screen Display (Sure Stand Seeder)

Main Screen Layout

Speed & Icon Selection

Implement Speed will display in lower left corner of the display. To change the tractor color, tap the



tractor icon in the lower left corner to prompt a menu. From the pop-up, select the color.

Field & Total Acres

NOTE



Acres seeded accumulate only for the seeder sections that have the clutch engaged "ON/Green".

Touch Field or Total Acres to toggle between them.

Clear Field Acres: Touch and hold field numbers for 3 seconds. Field Acres Reset Screen will pop-up. Select "Yes Confirm"

Clear Total Acres: Touch and hold total numbers for 3 seconds. Total Acres Reset Screen will pop-up, select "Reset Total Acres". Warning Screen will pop-up, select

"Yes Confirm". Password Screen will pop-up. Enter 4-digit password.

Alarms

When an alarm is sounded a popup message will display the active alarm. You may choose to either clear that single alarm or clear all alarms to clear the popup and silence the display.



A flashing yellow button will display next to the Menu Button to signify alarm(s) that are currently active. Select the yellow alarm button to go to the Alarms Screen which will outline all current alarms active on the console. The flashing indicator will not disappear until all alarms have been resolved.

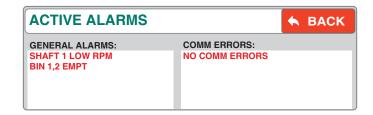 




Figure 4-2: Settings Menu Display (Sure Stand Seeder)

Settings Menu-Speed Settings




Located by selecting "Menu" and "Speed Settings", these settings control the type of speed input being used as well as calibrating the speed displayed on the main screen.

Speed Source

Change "Speed Source" by pressing the Current "Source" Button. Choose between Shaft Sensor, Radar, GPS Receiver, and Simulated Speed. Screen displays the new Source and options.

CURRENT "SOURCE" BUTTON

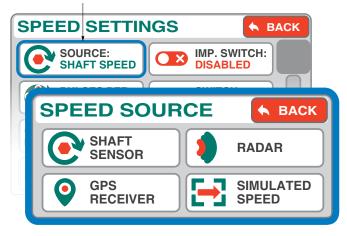

Source: Shaft Sensor Speed

Uses the Smart Shaft Sensor located on the Seeder Clutch Shaft to obtain ground speed.



Source: Radar Speed

 
Uses a tractor equipped with radar to obtain your source of ground speed.

 


 
GPS

•

Source: GPS Receiver Speed Uses a GPS receiver for your

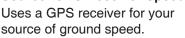

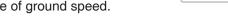

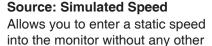



RECEIVER

speed source. For use in more unique conditions such as a GPS/Radar failure, or other troubleshooting.

4-2 9K713-2509

Speed Source Displays

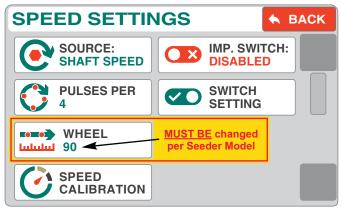


Figure 4-3: Source: Shaft Sensor Speed Display

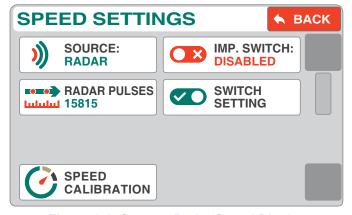


Figure 4-4: Source: Radar Speed Display

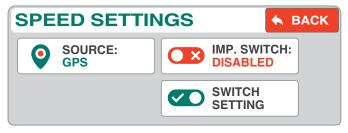


Figure 4-5: Source: GPS Receiver Display

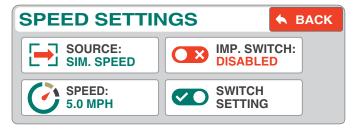


Figure 4-6: Source: Simulated Speed Display

Speed Source Icon Features

Pulses Per Revolution

Pulses Per Revolution are the number of magnets the implement mounted speed sensor sees in one



revolution of the shaft being monitored. For Brillion Seeders this number is 4.

To change, enter a new number into the keypad and select "Exit & Save".

Wheel Pulses Per 400FT

This is the ground speed calibration number for a implement mounted speed sensor. See "Speed Calibration" for calibration instructions.



The Default Number **MUST BE CHANGED** per specific seeder model. **See Figure 4-7.** To change, enter a new number into the keypad and select "**Exit & Save**". Increasing this number will cause the monitor to show a slower MPH, decreasing it causes the MPH to increase.

MODEL	PULSES PER 400FT
SS108/SSP108	232
SS110/SSP110	232
SS112/SSP112	232

Figure 4-7: Pulse Number for Specific Seeder Model

Radar Pulses Per 400FT

This is the ground speed calibration number for a radar speed sensor. See "Speed Calibration" for calibration instructions.



Speed (Simulated Speed)

Enter the static speed of your choice. The monitor will continually display this speed at all times until otherwise specified.




Speed Calibration

All new systems require a ground speed calibration to ensure accurate area totals and accurate



ground speed readings. To complete the calibration, measure a course 400 long preferably on level ground with a start and finish point. The seeder must be in the down position throughout this procedure.

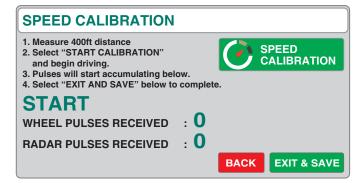

NOTE

During the calibration the monitor is looking for the number of pulses produced from the seeder mounted sensor or in the case of radar, the number of radar pulses.

1. Select the "Start Calibration" button to begin.



- 2. As you drive the 400ft. distance, pulses for both Wheel Pulses and/or Radar Pulses will begin accumulating on-screen.
- 3. When you've reached the end of the 400ft. distance, select "EXIT & SAVE" to complete the calibration procedure. Depending on which "Speed Source" is selected, the monitor will store this value into either the "Wheel Pulses Per 400" or "Radar Pulses Per 400" area.

Implement Switch

The implement switch is used to tell the monitor if a Lift Sensor is being used to determine when the



machine is raised or lowered. The Lift Sensor is used when shaft rotation cannot be used or a variable rate drive such as common on air seeders, is being used. The "Imp. Switch" button toggles between "Disabled" or "Enabled". Set to "Disabled" for Brillion Sure Stand


Seeder.

When the Monitor learns a "Lift Switch Sensor" toggle the "Implement Switch" button to "Enabled".



Implement Switch Setup

Implement Switch Setup tells the monitor if the Implement Switch Lift Sensor is associated with the Implement Lift being raised or lowered.

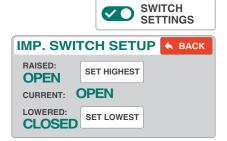

The Implement

Switch Setup toggles between "Open" or "Closed".

Select icon "Set Highest" or "Set Lowest" to "Open" the Implement Switch, the other will automatically "Close".

Settings Menu-Clutch Setting



The Sure Stand Seeder has a Clutch that is controlled by the Brillion Elite Mini Monitor. The Clutch must be set.



- Set "Total Clutches" to 1 by pressing icon "-" or "+"
- Set each "Clutch Details" as follows: to toggle between each Clutch Detail press icon **NEXT** or PREV.
 - Clutch engage at: 0 Volts (Toggles between 0 and 12 Volts)
 - Section Width: 8.0 Feet, 10 Feet, or 12 Feet Set to Model Width
- Select "BACK" to get to the Setting Menu.

9K713-2509 4-4

Settings Menu - Install Setup



Select "Install Setup" icon to Learn New System, Add A Sensor, or Remove A Sensor to your machine.



Learn New System

Select "Learn New System" if your monitor did not come pre-programmed or you wish to relearn all sensors.



- Start by unplugging all sensors on the implement and then selecting "Learn New System". A popup will warn you that all current sensors will be overwritten. Select "Yes, Learn New System".
- Refer to Brillion Elite Mini Monitor Electrical Schematic for Sensor Locations. See Figure 2-34.
 The monitor will prompt "Plug In Sensor" (all sensors have a 3-Pin Connector with white, black and green wires) in the following order. The sensor being prompted will automatically be learned upon connecting the 3-Pin Connector.
 - "Plug In Sensor Speed" Ground Speed Smart Shaft Sensor is installed on the Seeder Clutch Shaft
 - "Plug In Sensor Clutch Box" Clutch Smart Relay installed in the Elite Mini Tractor Harness
 - "Plug In Sensor Shaft 1-6" Up to six Seed Shaft Smart Shaft Sensors can be installed.
 - "Plug In Sensor Bin 1-6" Up to six Bin Level Sensors can be installed.
- 3. It is likely your system will not be configured for the maximum possible sensors or even certain types of sensors the Loup Elite is capable of.

Use the "**Skip this Sensor**" button to advance ahead one sensor at a time.



Use the "Skip this Type of Sensor" to advance to the next category of sensors.




 When you've reached the end of the list of sensors, you will be prompted with "Manual Learn Complete". Push "Ok" to finish.

Remove A Sensor

Select this option to remove a sensor from your existing system.



1. Select the type of sensor you wish to remove.

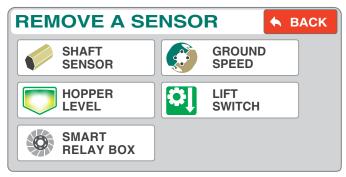

- 2. Use the **Left and Right Arrows** to navigate to the sensor number you wish to remove.
- Select the "Remove A Sensor" button to complete the removal.




Add A Sensor

Select this option to add a new sensor to your existing system.



1. Select the type of sensor you wish to add.

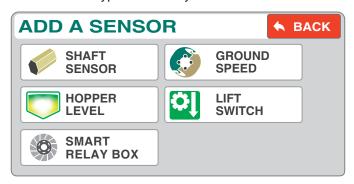

- 2. Use the Left and Right arrow buttons to navigate to the sensor number you wish to add.
- Select the "Add A Sensor" button to complete the sensor addition.



Settings Menu - Shaft Settings




Seed Shaft Settings

The Seeder can have up to six Smart Shaft Sensors that indicate shaft rotation. Each Smart Shaft Sensor must be set.

Pulse per Rev: 1Alarm Time: 20 Sec.

Toggle between each "Shaft" by pressing icon "<" or ">". Select "Back" to get to the Settings Menu.


The 20 second Alarm Time is the estimated time it takes to turn around after each pass in the field without sounding the Alarm. This can be adjusted by the operator if more or less time is required before the Alarm Sounds.

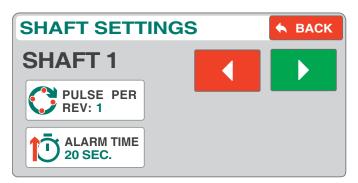

Settings Menu - Diagnostics




The Diagnostics screen can help in identifying issues with sensors, harnessing or other items. Status reports for Battery Voltage, Sensors Learned, MUX Communication speed and GPS Communication speed are displayed. Contact Loup Electronics if you need technical support.

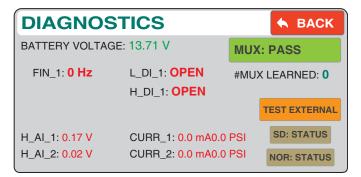

Settings Menu - GPS Settings



"GPS Settings" defines any Baudrate, Speed Corrections or the current GPS Status.

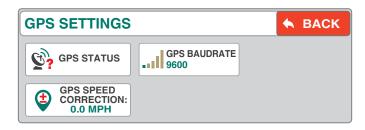

GPS Status

The GPS Status screen gives a diagnostics report of the current Latitude, Longitude, Number of




Satellites connected and the Type/Quality of the GPS Fix. If the GPS Icon on the top of screen is Yellow or Red, check this status page to help identify GPS signal issues.

GPS Baudrate

Sets the baudrate at which the console communicates with the GPS receiver you are using. Available speeds are 4800, 9600, 19200, 38400, and 115200.



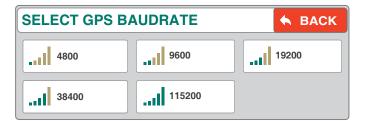

GPS Speed Correction


If your GPS is displaying an incorrect speed reading, use this screen to add the desired correction in MPH.



4-6 9K713-2509

Settings Menu - Display Settings



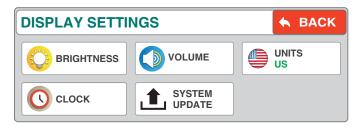

Brightness

Use the Plus or Minus keys to increase or decrease the brightness of the screen or the keypad backlight.





Volume

Use the Plus or Minus keys to increase or decrease the volume to the desired level. An audible alarm will sound with each increment.





Units

Toggles between US (feet) or Metric (meters) units.



Clock (Date & Time)

To set the time, simply select the related buttons for Month, Day, Year, Hour and Minute and enter




the appropriate value into each field. Lastly toggle the time between AM or PM and push "Save" to complete.



System Update

The system update screen is used to update to newer versions of software or reset to factory default settings.



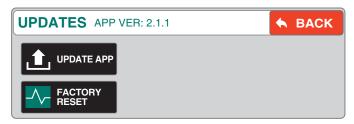

Update App

The **Update App** button is used to perform a system update to newer version of software. To update follow the following steps:



- On a Micro SD Card, create a folder titled "EliteUpdate" on the root level of the MicroSD Card. Within this folder place the update file from Loup Electronics, this should appear as a .srec file format.
- 2. Insert Micro SD Card into the Elite console and select the "**Update App**" button. From the popup window select the version you wish to update, newest soft ware versions will appear at the top of the window.
- 3. Allow the application to load into the console and when finished, cycle power to the console. The update will finish installation upon startup.
- 4. Ensure the newest software is updated by selecting the "MENU" button and checking the "APP VER" number in the upper right corner.

Factory Reset

Selecting this will reset all settings back to Factory Default. All existing implements and sensors will be



removed from memory and need to be reinstalled if choosing to reset the console.

Service And Technical Support

Contact: Loup Electronics Inc. Address: 2960 N. 38th Street

Lincoln, NE 68504

Phone: 877-489-LOUP(5687)

402-464-7131

Fax: 402-464-7104

E-mail: info@loupelectronics.com

AFTER HOURS/WEEKEND SUPPORT 402-318-6415 OR 402-853-6249

TABLE OF CONTENTS

BRILLION ELITE MINI MONITOR

Table provided for general use. NOTES:

4-8 9K713-2509

Maintenance

General Torque Specifications

LANDOLL FASTENER TORQUE SPECIFICATIONS (Rev. 23/04)

This chart provides general torque specifications for Standard Nuts and Caps Screws (as received condition) that are not called out on processes or drawings.

This **DOES NOT** apply if special lubrication such as graphite moly-disulfide or other extreme pressure lubricants are used.

Add 33% to the listed torque specification if the fastener is dry (solvent cleaned).

Cap screw grades are indicated by markings on the head, these vary among manufacturers.

Thick Nuts must be used on grade 8 cap screws.

SAE TORQUE SPECIFICATIONS (FOOT-POUNDS)

[] Indicates specifications for Prevailing Torque Nuts.

UNC Size	Grade 2	Grade 5	Grade 8
1/4 - 20	4 [5]	6 [7]	9 [11]
5/16 - 18	8 [10]	13 [16]	18 [22]
3/8 - 16	15 [19]	23 [29]	35 [43]
7/16 - 14	24 [30]	35 [43]	55 [62]
1/2 - 13	35 [43]	55 [62]	80 [100]
9/16 - 12	55 [62]	80 [100]	110 [137]
5/8 - 11	75 [94]	110 [137]	170 [212]
3/4 - 10	130 [162]	200 [250]	280 [350]
7/8 - 9	125 [156]	320 [400]	460 [575]
1 - 8	190 [237]	408 [506]	680 [850]
1-1/8 - 7	270 [337]	600 [750]	960 [1200]
1-1/4 - 7	380 [475]	840 [1050]	1426 [1782]
1-3/8 - 6	490 [612]	1100 [1375]	1780 [2225]
1-1/2 - 6	650 [812]	1460 [1825]	2360 [2950]

See back side for SAE UNF and Metric torques.

Form No. F-257-0322

SAE TORQUE SPECIFICATIONS (FOOT POUNDS)

[] Indicates specifications for Prevailing Torque Nuts.

1	[]8 4						
UNF Size	Grade 2	Grade 5	Grade 8				
1/4 - 28	5 [6]	7 [9]	10 [12]				
5/16 - 24	9 [11]	14 [17]	20 [25]				
3/8 - 24	17 [21]	25 [31]	35 [44]				
7/16 - 20	27 [34]	40 [50]	60 [75]				
1/2 - 20	40 [50]	65 [81]	90 [122]				
9/16 - 18	60 [75]	90 [112]	130 [162]				
5/8 - 18	85 [106]	130 [162]	180 [225]				
3/4 - 16	150 [188]	220 [275]	320 [400]				
7/8 - 14	140 [175]	360 [450]	500 [625]				
1 - 14	210 [263]	540 [675]	760 [950]				
1-1/8 - 12	300 [375]	660 [825]	1080 [1350]				
1-1/4 - 12	420 [525]	920 [1150]	1500 [1875]				
1-3/8 - 12	560 [700]	1260 [1575]	2010 [2512]				
1-1/2 - 12	730 [912]	1640 [2050]	2660 [3325]				

METRIC TORQUE SPECIFICATIONS

This chart provides torque specification for phosphate coated, Rockwell "C" 38-45 Metric Coarse Thread Class 10.9 Fasteners, Class 10.0 Nuts and Harden Flat Washers.

[] Indicates specifications for Prevailing Torque Nuts.

'		0 1		
MM Size	Newton - Meters	Foot-Pounds		
6	10 [14]	7 [10]		
7	16 [22]	12 [16]		
8	23 [32]	17 [24]		
10	46 [60]	34 [47]		
12	80 [101]	60 [75]		
14	125 [155]	90 [115]		
16	200 [240]	150 [180]		
18	275 [330]	205 [245]		
20	385 [450]	290 [335]		
24	670 [775]	500 [625]		
27	980 [1105]	730 [825]		
30	1330 [1470]	990 [1090]		
33	1790 [1950]	1730 [1870]		
36	2325 [2515]	1730 [1870]		
39	3010 [3210]	2240 [2380]		

See front side for SAE UNC and notes.

Figure 5-1: General Torque Specifications

Hydraulic Fitting Torque Specifications

LANDOLL

HYDRAULIC FITTING TORQUE SPECIFICATIONS (REV. 23/04) AEROQUIP BRAND FITTINGS 37° IIC; ORS & ORB

This chart provides torque specifications for Plated Carbon Steel and Stainless Steel Fittings (as received condition) that are not called out on processes or drawings.

This **DOES NOT** apply if special lubrication such as graphite moly-disulfide or other extreme pressure lubricants are used.

Minus 65% from the listed torque specification for Brass Fittings.

TORQUE SPECIFICATIONS (FOOT-POUNDS)

[] Indicates specifications for Prevailing Torque Nuts.

DASH Size	37 Degree JIC	O-Ring (ORS)	O-Ring Boss (ORB)
-4	11-12	10-12	14-16
-5	15-16		18-20
-6	18-20	18-20	24-26
-8	38-42	32-35	50-60
-10	57-62	46-50	72-80
-12	79-87	65-70	125-135
-14			160-180
-16	108-113	92-100	200-220
-20	127-133	125-140	240-280
-24	158-167	150-165	270-360
-32	245-258		

FORM NO. F-263-2304 (1 of 3)

LANDOLL

HYDRAULIC FITTING TORQUE SPECIFICATIONS (REV. 23/04) GATES BRAND FITTINGS 37° IIC; ORS & ORB

This chart provides torque specifications for Plated Carbon Steel and Stainless Steel Fittings (as received condition) that are not called out on processes or drawings.

This **DOES NOT** apply if special lubrication such as graphite moly-disulfide or other extreme pressure lubricants are used.

Minus 65% from the listed torque specification for Brass Fittings.

TORQUE SPECIFICATIONS (FOOT-POUNDS)

[] Indicates specifications for Prevailing Torque Nuts.

DASH Size	37 Degree JIC	O-Ring (ORS)	O-Ring Boss (ORB)
-4	10-11	10-12	14-16
-5	13-15		
-6	17-19	18-20	24-26
-8	34-38	32-40	37-44
-10	50-56	46-56	50-60
-12	70-78	65-80	75-83
-14		65-80	
-16	94-104	92-105	111-125
-20	124-138	125-140	133-152
-24	156-173	150-180	156-184
-32	219-243		

FORM NO. F-263-2304 (2 of 3)

LANDOLL

HYDRAULIC FITTING TORQUE SPECIFICATIONS (REV. 23/04) PARKER BRAND FITTINGS 37° IIC; ORS & ORB

This chart provides torque specifications for Plated Carbon Steel and Stainless Steel Fittings (as received condition) that are not called out on processes or drawings.

This **DOES NOT** apply if special lubrication such as graphite moly-disulfide or other extreme pressure lubricants are used.

Minus 65% from the listed torque specification for Brass Fittings.

TORQUE SPECIFICATIONS (FOOT-POUNDS)

[] Indicates specifications for Prevailing Torque Nuts.

DASH Size	37 Degree JIC	O-Ring (ORS)	O-Ring Boss (ORB)
-4	11-13	15-17	13-15
-5	14-16		21-23
-6	20-22	34-36	25-29
-8	43-47	58-62	40-44
-10	55-65	100-110	58-62
-12	80-90	134-146	75-85
-14			
-16	115-125	202-218	109-121
-20	160-180	248-272	213-237
-24	185-215	303-327	238-262
-32	250-290		310-340

FORM NO. F-263-2304 (3 of 3)

Figure 5-2: Hydraulic Fitting Torque Specifications

5-2 9K713-2509

Fasteners

Before operating your Brillion machine, check all hardware for tightness. Use the Tightening Torque Table as a guide.

After a few hours of use, check entire machine and tighten any loose nuts or bolts. Daily or periodic checks should be made thereafter.

When replacing bolts, be sure to use fasteners of equal grade.

Tires

Recommended Tire Size: 9.5L-15 - 6 Ply Rating

Tire Inflation Pressure: 44 PSI

When Re-Installing $1/2-20 \times 1$ Wheel Bolts tighten to 50 Ft-Lbs. using the sequence in **Figure 5-3.** Then tighten to full torque of 80-85 Ft-Lbs.

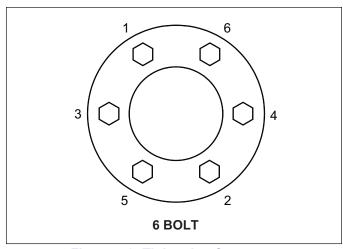


Figure 5-3: Tightening Sequence

Wheel Hub Bearing Maintenance

Wheel Bearing maintenance should be performed at the beginning of every season of use. Check the Wheel Bearings periodically for excessive end play. If needed, adjust or replace them using the following procedure:

- 1. Place the Frame on blocks or stands sufficient to lift the Tire clear of the ground.
- 2. Remove the Tire.
- 3. Remove the Hub Cap, Cotter Pin and Slotted Nut.
- 4. Remove the Hub. Clean and inspect the Bearings and Hub Cavity. Replace any worn or defective parts.
- 5. Repack the Bearings using a high-quality Wheel Bearing Grease.

 Install the inner bearing into the hub and install the grease seal. Use a driver to install the seal, to avoid damaging the outer edge of the seal. Drive the seal squarely into the hub to avoid any seal distortion.

NOTE

The Single Lip Seals should point away from the Hub to keep contaminants out and allow the grease to pass.

- 7. Slide the hub, bearing, and seal onto a clean spindle.
- 8. Install the Outer Bearing Cone and Slotted Nut.
- Tighten the Slotted Nut while rotating the Hub until there is a slight resistance to wheel rotation. Then, back the Slotted Nut off one notch, until the wheel rotates freely without end play.
- 10. Install a new Cotter Pin and re-install the Hub Cap.

Lubrication Maintenance

- Oil Roller Chains periodically.
- Seeder has Greaseable Bearings on the ends of the Front and Rear Rollers and should be greased every 20 hrs. See Figure 5-4.
- Repack wheel bearings annually.
- Pull Type Seeders Wheel Arm pivot point should be greased every 4 hrs.
- Grease Wheel Hubs every 50 hrs.
- When the machine is not used for some time, exposed portions of the Hydraulic Cylinder Rods must be cleaned and covered with a thick coat of grease to prevent corrosion, which will damage the seal.

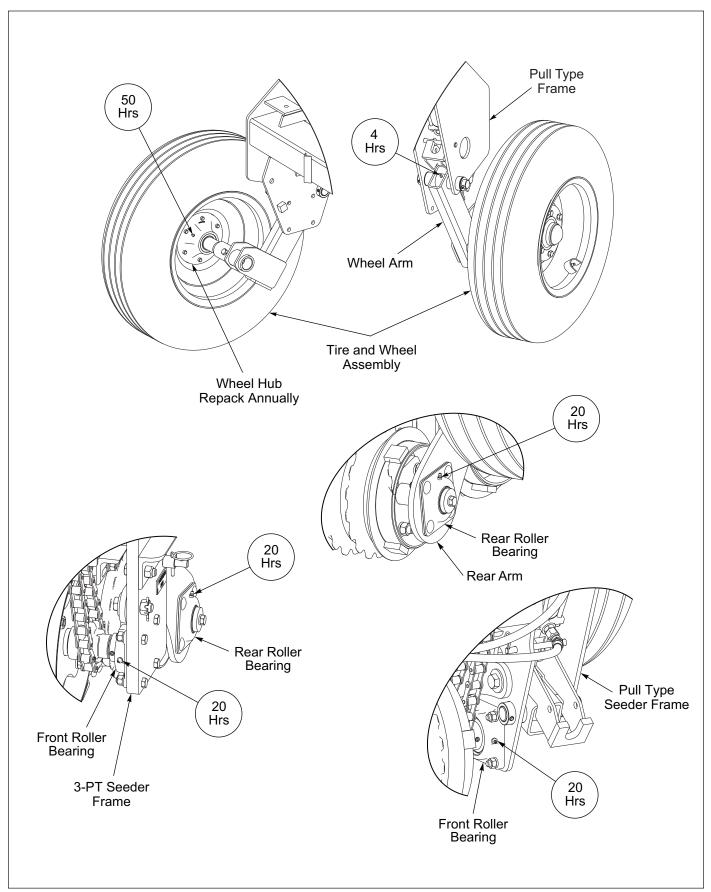


Figure 5-4: Lubrication Intervals

5-4 9K713-2509

Hydraulic Maintenance

IMPORTANT

Lower the Drawbar Seeder to the ground, and relieve hydraulic pressure before attempting to service any hydraulic component.

WARNING

Escaping fluid under pressure can be nearly invisible and have enough force to penetrate the skin causing serious injury. Use a piece of cardboard, rather than hands to search for suspected leaks. Wear protective gloves and safety glasses or goggles when working with Hydraulic System.

- Check the tractor hydraulic fluid level per tractor owner's manual and after any leakage. Check fluid level with the Hydraulic Cylinders in the extracted position.
- If a Hydraulic Cylinder leaks, disassemble the parts to determine the cause of the leak. Any time a Hydraulic Cylinder is opened up, or whenever any seal replacement is necessary, it is advisable to clean all parts and replace all Seals. Seal Kits are available from your Brillion dealer.
- 3. Check all Hydraulic Hoses weekly. Look for binding or cracking. Replace all worn or defective parts immediately.
- 4. Transport Locks are provided to hold the implement in a raised position. Do not attempt to perform any service work under the implement without first installing the Transport Locks. See Figure 3-5. Before servicing any hydraulic component, lower the implement to the ground and relieve all system pressure. If a hydraulic component is disconnected, repaired, or replaced, it will be necessary to purge the system of air before operation. See "Hydraulic Lift System" on Page 3-7.

Front and Rear Roller Adjustment

NOTE

Failure to position the Clamp Band Socket Head Bolt (Clamp Band open section) over the Roller Drum weld seam will cause Clamp Band to loosen and slide.

After an initial run of 5-10 hours, check the Front and Rear Roller Assemblies to ensure that the Wheels are tight to one another and that the Clamp Bands are tight. If not, slide the Roller Wheels tight together and adjust the Roller Clamp Bands per **Roller Adjustment Procedure**.

Tighten the Clamp Band Socket Head Bolt (Clamp Band open section) over Roller Drum weld seam to 75 Ft-Lbs. Thereafter check Front and Rear Roller Assemblies every 50-100 hours.

Roller Adjustment Procedure

- Adjust the Front Roller Wheels first. Loosen Clamp Bands and slide the Roller Wheels snug against each other, centering the entire assembly under the Deflector.
- Position the Clamp Band Socket Head Bolt (Clamp Band open section) over the weld seam on the Roller Drum
- 3. Slide the Clamp Band against the End Wheel on each end of the Roller and tighten the Clamp Band Bolt to 75 Ft-Lbs. **See Figure 5-5.**
- 4. Adjust the Rear Roller Wheels in the same manner as you adjusted the Front Roller Wheels except, start at the center of the Rear Roller and align the peaks of the Rear Roller Wheels with the valleys of the Front Roller Wheels as best as possible. This will provide the best alignment of worn Roller Wheels and maximize seed germination.

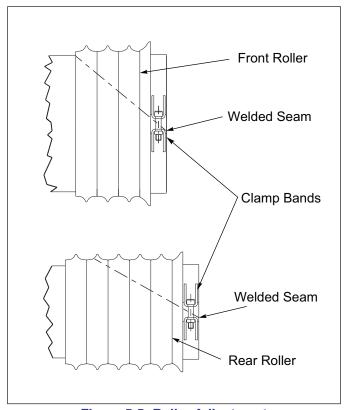


Figure 5-5: Roller Adjustment

Chain Tension

To adjust the Transmission Chain, loosen the 5/8" Idler Sprocket Axle Bolt and then adjust the Clevis Drawbolt Locknut to obtain about 1/8"-1/4" sag. Re-tighten the Idler Sprocket Axle Bolt. Be careful not to over-tighten this chain. **See Figures 5-6 and 5-7.**

Adjust the #550 Chain between the Front Roller and Transmission by adjusting the Nylatron Tension Idler to allow approximately 2" of Total Chain Deflection.

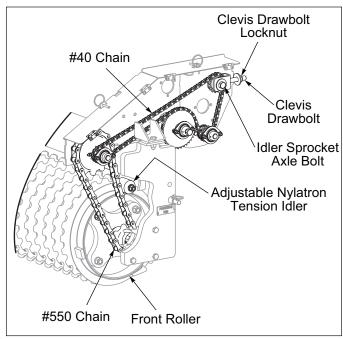


Figure 5-6: Loosen Idler Bolt

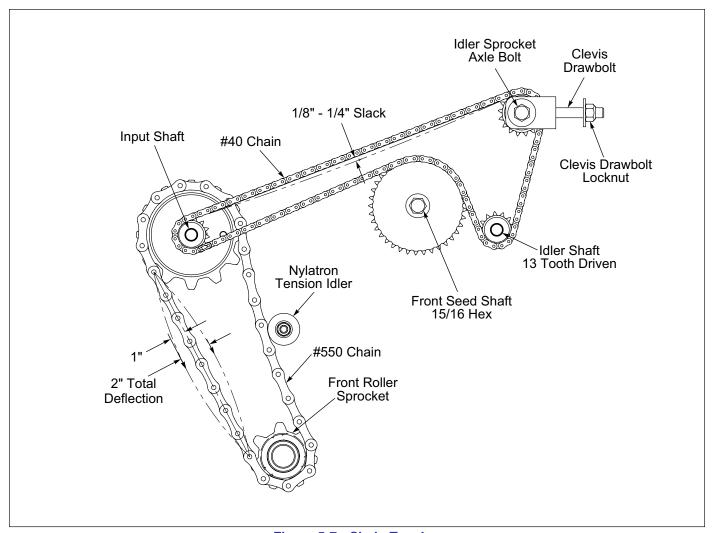


Figure 5-7: Chain Tension

5-6 9K713-2509

Seed Meter Adjustment

IMPORTANT

The Clutch, if equipped must be disengaged when Seed Shafts are turned manually for Calibration.

IMPORTANT

All the Seed Meters MUST BE CLOSED! It may be necessary to individually adjust Seed Meter Cups.

All Seed Meters must be set the same to ensure uniform seeding. To check, set the Seed Rate Adjusting Nut to 0-A. The "A" on the Seed Rate Adjusting Nut is positioned over the "0" (the nut covers half of the "0") and snug against the Bearing. **See Figure 5-8.**

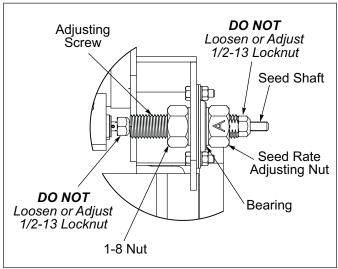


Figure 5-8: Seed Box Seed Rate Adjustment

All Seed Meters should be closed. Seed Meter Feed Shutoff against Seed Meter Cup Star Washer in Seed Meter Cup. **See Figure 5-9.** If not, there are three adjustments to make as needed.

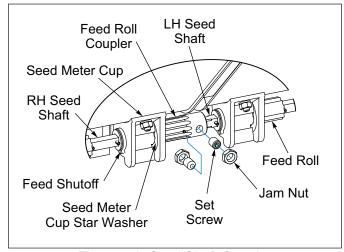


Figure 5-9: Seed Shaft Coupler

IMPORTANT

Ensure the Seed Shaft can turn freely without any binding when the Seed Meters are open or closed after servicing.

- 1/2-13 Locknuts on both ends of the Adjusting Screw are used to adjust all Seed Meters the same amount.
 See Figure 5-8. To adjust Seed Meters to be closed at "0A", loosen 1/2-13 Locknuts and set Adjusting Screw to "0A". Slide Seed Shaft to close all Seed Meters. Tighten 1/2-13 Locknuts against Adjusting Screw.
- 2. Seed Box Feed Roll Coupling which joins the left and right Seed Shafts changes Seed Meters on the left Seed Box in comparison with Seed Meters on the right Seed Box. To adjust Feed Roll Coupling, loosen Jam Nuts and Set Screws on Coupling RH Seed Shaft is treaded into Coupling. Turn RH Seed Shaft threading it in or out as needed to equalize Seed Meters. Re-tighten Set Screws against flat side on Seed Shaft, re-tighten Jam Nuts. See Figure 5-9.
- 3. Individual Seed Meter Cups can be adjusted as required. Adjustments can be made by loosening the 1/4-20 x 5/8 Machine Screws that mount the Seed Meter Cup to the Seed Box. Adjust the affected Seed Meter Cup so the Feed Shutoff is against the Seed Meter Cup Star Washer in the Seed Meter Cup (closed). Be sure the Feed Roll stays engaged in the Seed Meter Cup Star Washer. See Figure 5-10.

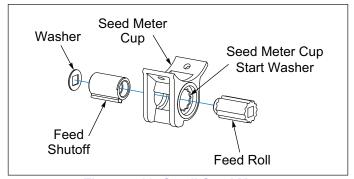


Figure 5-10: Small Seed Meter

Warning Lamps

When plugging in the Lamp 7-Pin Warning Lamp Connector:

- Make sure the Tractor has a good clean Receptacle, free of dirt and corrosion.
- Make sure the 7-Pin Connector is inserted ALL the way in. With tighter fitting pins, operator may think the Connector is all the way in, but it really isn't.
- 3. Make sure the Tractor Receptacle Cover latches over the keyway on the 7-Pin Connector to hold the Connector in place.

If an operator plugs in the 7-Pin Connector, but the lights Do Not seem to work right, check the above items to make sure there is a good connection with the 7-Pin Connector.

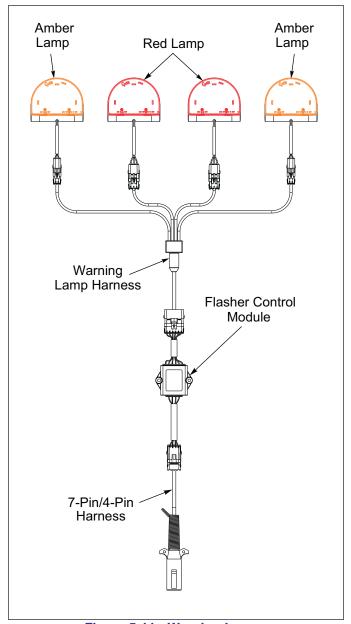


Figure 5-11: Warning Lamps

Scraper Adjustment

- Check the Front Roller Assembly Wheels that they are tight to one another. See "Front and Rear Roller Adjustment" on page 5-5.
- 2. Lower the implement onto level ground.
- Verify that the Scrapers are centered as best as possible between the Roller Wheels and adjust if necessary. See Figure 5-12.

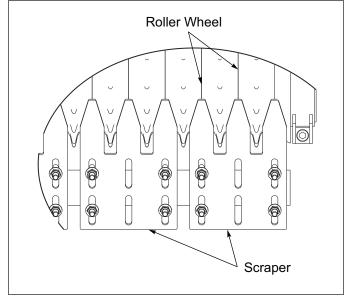


Figure 5-12: Scraper Alignment

 Adjust the Scrapers as needed to achieve a 3/16" to 1/4" gap between the Scrapers and Roller Wheels.
 See Figure 5-13. Scrapers should be close enough to the Roller Wheels to be functional but without interference.

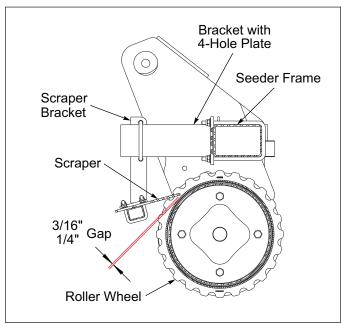


Figure 5-13: Scraper Dimensions

5-8 9K713-2509

Electric Clutch - Optional

IMPORTANT

If your machine is equipped with an Electric Clutch at no time use high pressure water or air to clean it, as this can damage the unit.



Figure 5-14: High Pressure Warning

Acre Meter Troubleshooting

IMPORTANT

Acre Meter is dust and splash resistant, under no circumstances should this unit be submerged in any conductive, corrosive, or flammable liquid. At no time use high pressure water or air to clean it, as this can damage the unit. See Figure 5-14.

NOTE

The ground wire is for static discharge protection and has no effect on the ability of the sensor to function properly under normal conditions.

The battery operated Acre Meter uses 3 AA batteries. A low battery message appears when the batteries require replacement. Remove the Acre Meter from the machine and then the 4 Screws on the back of the case. **See Figure 3-18.** Separate the housing from the rear plate. Replace with 3 quality AA batteries.

Acre Meter does not count pulses during calibration or does not count acres during operation.

- Check the position of the Magnet Wheel Assembly and Pick-Up Switch against the set-up instructions in this manual. See "Acre Meter Kit - Optional" on page 2-28.
- 2. Verify that the magnet in the Magnet Wheel Assembly has not come out.
- 3. Place the Acre Meter display in "Calibrate" mode.

(AFTER 06/01/2025) Press the *FUNC key until the PULSES screen appears, then press and hold the up/down arrow buttons.

(BEFORE 06/01/2025) Press the *FUNC key until the P-WORD indicator is lit and then press the up/down arrow keys until the display shows 0 and the LED is blinking.

- Break the connection between the display and the Pick-Up Switch and short between pins A and B on the display harness connector. You should see the display increment +1 with each contact of the connector terminals.
- 4. If Step 3 works then wave a magnet in front of the Pick-Up Switch face with it re-connected to the display and see if the display increments up. If not, put an ohm meter or continuity tester on the contacts of the Pick-Up Switch harness and place a magnet in front of the Pick-Up Switch face. The Pick-Up Switch should show continuity or near zero ohms resistance.

Acre Meter cannot change the width or pulse count settings or clear the field and total acres.

- Check to see if a password needs to be entered.
 (AFTER 06/01/2025) Press the *FUNC key until the PASSWORD screen is displayed. If OFF is displayed (password disabled) no password is set.
 - (BEFORE 06/01/2025) Press the *FUNC key until the P-WORD indicator LED is lit. If dIS is displayed (password disabled) no password is set.
- If Ent/ENTER is displayed a password must be entered to change the settings or the password must be disabled as instructed in the setup section of this manual.

Storage

- 1. The service life of the Seeder will be extended by proper off-season storage practices. Prior to storing the unit, complete the following procedures:
 - Completely clean the unit, blow all seed out of Seed Meters.
 - Inspect the machine for worn or defective parts.
 Replace as needed.
 - Repaint all areas where the original paint is worn off.
 - Apply a light coating of oil or grease to exposed Cylinder Rods to prevent them from rusting.
 - Lubricate each point of the machine as stated in "Lubrication Maintenance" on page 5-3.
- 2. Store the unit in a shed or under a tarpaulin to protect it from the weather. The ground engaging components and Tires should rest on boards, or some other object, to keep them out of the soil.
- 3-PT Hitch Models: Raise Track Removers, insert Parking Pin and Lower unit. Chock or block Roller Wheels before unhitching from Tractor.
- Pull Type Models: Raise the machine and engage Transport Locks. See Figure 3-6. Lower Drawbar Jack.
 - Relieve Hydraulic Pressure in hoses after Transport Locks are installed.
 - Block Transport Wheels before unhitching from Tractor.

5-10 9K713-2509

Specifications

Product Attributes	SS-108	SSP-108
Approximate Weight	2,420 lbs. (1,097 kg)	2,031 lbs. (921 kg)
Working Width	8 ft. 0 in. (2.4 m)	8 ft. 0 in. (2.4 m)
Transport Width	11 ft. 6 in. (3.5 m)	9 ft. 6 in. (2.89 m)
Transport Height	4 ft. 11 in. (1.49 m)	Tractor Dependent
Road Clearance	10 in. (254 mm)	Tractor Dependent
Overall Height	3 ft. 10 in. (1.16 m)	4 ft. 3 in. (1.29 m)
Overall Length	10 ft. 1 in. (3.03 m)	4 ft. 0 in. (1.21 m)
Seed Box	All Steel Construction w/Cover	All Steel Construction w/Cover
Seed Box Capacity - Meter Box	6 bu.	6 bu.
Seed Meters	"Micro-Meter"	"Micro-Meter"
Seed Meter Drive	Ground Driven	Ground Driven
Seed Meter Spacing	4.25 in. (108 mm)	4.25 in. (108 mm)
Seed Delivery	Broadcast w/ Wind Deflector Tray	Broadcast w/ Wind Deflector Tray
Pulverizer Roller - Front	15.75 in. (400 mm) Gray Cast Iron	15.75 in. (400 mm) Gray Cast Iron
Pulverizer Roller - Rear	11.5 in. (292 mm) Gray Cast Iron	11.5 in. (292 mm) Gray Cast Iron
Pulverizer Axle Bearings	Greaseable	Greaseable
Pulverizer Axle Size - Front	12.75 in. (324 mm)	12.75 in. (324 mm)
Pulverizer Axle Size - Rear	8.625 in. (219 mm)	8.625 in. (219 mm)
Hitch	Pull-Type with Hydraulic Transport	Three-Point Hitch - Cat. II Free Link; Cat. II, IIIN Quick Coupler Hitch
Hydraulic Equipment	Cylinders w/Hoses to Hitch Point	N/A
Tire Size	9.5L x 15-8 Ply Implement Rib	N/A
S-Tine Wheel Track Remover	Optional	Optional
Coil Tine Track Remover	Optional	Optional
Front Roller Scraper Kit	Optional	Optional
Electronic Acre Meter	Optional	Optional
Factory Installed Electric Clutch	Optional	Optional
Seed Shaft Monitor Kit	Optional	Optional
Short Coupled Three-Point Hitch	N/A	Optional
Safety Warning Lights & SMV Emblem	Standard	Standard
Safety Chain Kit	Standard	N/A
Powder Coat Paint, Red	Standard	Standard
Horsepower Requirements	6 to 8 HP (4.5 to 6 kW) per ft.	6 to 8 HP (4.5 to 6 kW) per ft.
Recommended Operating Speed	3 to 6 MPH (5 to 10 km/h)	3 to 6 MPH (5 to 10 km/h)

Specifications subject to change with or without notice.

Table 6-1: Model Specifications, 8FT

Product Attributes	SS-110	SSP-110
Approximate Weight	2,819 lbs. (1,279 kg)	2,429 lbs. (1,102 kg)
Working Width	10 ft. 0 in. (3.0 m)	10 ft. 0 in. (3.0 m)
Transport Width	13 ft. 4 in. (3.96 m)	11 ft. 3 in. (3.43 m)
Transport Height	4 ft. 11 in. (1.49 m)	Tractor Dependent
Road Clearance	10 in. (254 mm)	Tractor Dependent
Overall Height	3 ft. 10 in. (1.16 m)	4 ft. 3 in. (1.29 m)
Overall Length	10 ft. 1 in. (3.03 m)	4 ft. 1 in. (1.24 m)
Seed Box	All Steel Construction w/Cover	All Steel Construction w/Cover
Seed Box Capacity - Meter Box	7.5 bu.	7.5 bu.
Seed Meters	"Micro-Meter"	"Micro-Meter"
Seed Meter Drive	Ground Driven	Ground Driven
Seed Meter Spacing	4.25 in. (108 mm)	4.25 in. (108 mm)
Seed Delivery	Broadcast w/ Wind Deflector Tray	Broadcast w/ Wind Deflector Tray
Pulverizer Roller - Front	15.75 in. (400 mm) Gray Cast Iron	15.75 in. (400 mm) Gray Cast Iron
Pulverizer Roller - Rear	11.5 in. (292 mm) Gray Cast Iron	11.5 in. (292 mm) Gray Cast Iron
Pulverizer Axle Bearings	Greaseable	Greaseable
Pulverizer Axle Size - Front	12.75 in. (324 mm)	12.75 in. (324 mm)
Pulverizer Axle Size - Rear	8.625 in. (219 mm)	8.625 in. (219 mm)
Hitch	Pull-Type w/Hydraulic Transport	Three-Point Hitch - Cat. II Free Link; Cat. II, IIIN Quick Coupler Hitch
Hydraulic Equipment	Cylinders w/Hoses to Hitch Point	N/A
Tire Size	9.5L x 15-8 Ply Implement Rib	N/A
S-Tine Wheel Track Remover	Optional	Optional
Coil Tine Track Remover	Optional	Optional
Front Roller Scraper Kit	Optional	Optional
Electronic Acre Meter	Optional	Optional
Factory Installed Electric Clutch	Optional	Optional
Seed Shaft Monitor Kit	Optional	Optional
Short Coupled Three-Point Hitch	N/A	Optional
Safety Warning Lights & SMV Emblem	Standard	Standard
Safety Chain Kit	Standard	N/A
Powder Coat Paint, Red	Standard	Standard
Horsepower Requirements	6 to 8 HP (4.5 to 6 kW) per ft.	6 to 8 HP (4.5 to 6 kW) per ft.
Recommended Operating Speed	3 to 6 MPH (5 to 10 km/h)	3 to 6 MPH (5 to 10 km/h)

Specifications subject to change with or without notice.

Table 6-2: Model Specifications, 10FT

6-2 9K713-2509

Product Attributes	SS-112	SSP-112
Approximate Weight	3,217 lbs. (1,459 kg)	2,958 lbs. (1,341 kg)
Working Width	12 ft. 0 in. (3.6 m)	12 ft. 0 in. (3.6 m)
Transport Width	15 ft. 5 in. (4.69 m)	13 ft. 6 in. (4.11 m)
Transport Height	4 ft. 11 in. (1.49 m)	Tractor Dependent
Road Clearance	10 in. (254 mm)	Tractor Dependent
Overall Height	3 ft. 10 in. (1.16 m)	4 ft. 3 in. (1.29 m)
Overall Length	10 ft. 1 in. (3.03 m)	4 ft. 0 in. (1.21 m)
Seed Box	All Steel Construction w/Cover	All Steel Construction w/Cover
Seed Box Capacity - Meter Box	9.0 bu.	9.0 bu.
Seed Meters	"Micro-Meter"	"Micro-Meter"
Seed Meter Drive	Ground Driven	Ground Driven
Seed Meter Spacing	4.25 in. (108 mm)	4.25 in. (108 mm)
Seed Delivery	Broadcast w/ Wind Deflector Tray	Broadcast w/ Wind Deflector Tray
Pulverizer Roller - Front	15.75 in. (400 mm) Gray Cast Iron	15.75 in. (400 mm) Gray Cast Iron
Pulverizer Roller - Rear	11.5 in. (292 mm) Gray Cast Iron	11.5 in. (292 mm) Gray Cast Iron
Pulverizer Axle Bearings	Greaseable	Greaseable
Pulverizer Axle Size - Front	12.75 in. (324 mm)	12.75 in. (324 mm)
Pulverizer Axle Size - Rear	8.625 in. (219 mm)	8.625 in. (219 mm)
Hitch	Pull-Type w/Hydraulic Transport	Three-Point Hitch - Cat. II Free Link; Cat. II, IIIN Quick Coupler Hitch
Hydraulic Equipment	Cylinders w/Hoses to Hitch Point	N/A
Tire Size	9.5L x 15-8 Ply Implement Rib	N/A
S-Tine Wheel Track Remover	Optional	Optional
Coil Tine Track Remover	Optional	Optional
Front Roller Scraper Kit	Optional	Optional
Electronic Acre Meter	Optional	Optional
Factory Installed Electric Clutch	Optional	Optional
Seed Shaft Monitor Kit	Optional	Optional
Short Coupled Three-Point Hitch	N/A	Optional
Safety Warning Lights & SMV Emblem	Standard	Standard
Safety Chain Kit	Standard	N/A
Powder Coat Paint, Red	Standard	Standard
Horsepower Requirements	6 to 8 HP (4.5 to 6 kW) per ft.	6 to 8 HP (4.5 to 6 kW) per ft.
Recommended Operating Speed	3 to 6 MPH (5 to 10 km/h)	3 to 6 MPH (5 to 10 km/h)

Specifications subject to change with or without notice.

Table 6-3: Model Specifications, 12FT

Instructions for Ordering Parts

** Repair parts must be ordered through an Authorized Dealer **

DEALER INSTRUCTIONS FOR ORDERING PARTS FROM LANDOLL PARTS DISTRIBUTION CENTER

Phone #: 800-423-4320 or 785-562-5381 Fax #: 888-527-3909

Order online: dealer.landoll.com

DATA PLATE

The Data Plate, which lists the model and serial number of the equipment, is located on the right side of the Sure Stand Seeder.

SERIAL NUMBER NOMENCLATURE

The following information will help decode the Landoll serial number.

ASD2100100 = xxmyysssss

xx	= model series (i.e. "AS" for all AG Seeders)
m	= month of manufacture (ex. "D" means April. The letter I is not used.)
уу	= last digits of the year manufactured (ex. "21" means 2021)
sssss	= Sequential number used to track warranty and service information.



Figure: Data Plate

Manuals for High Capacity Sure Stand Seeder, Models SS108/SS110/SS112 and SSP108/SSP110/SSP112

Manual Number	Manual Type
9K713	Operator's Manual
9K712	Parts Manual

Document Control Revision Log:

Date	Form #	Improvement(s): Description and Comments
07/07/2008	205rev7-7-08	Initial Release
09/2013	205rev0913	Added LED Warning Lights
12/2015	205rev1215	Added Seed Box Dividers, moved Decals
06/2021	9K713-0621	ECN 47093 - Hub & Spindle Asm Update to 6 Bolt
05/2022	9K713-0522	ECN 46900, 47187 - Add Brillion Elite Mini Monitor by Loup ECN 47474 - Add QR Code Decal (47781) Changes to LED Installation *01/23/2023 Changes to "Loup Acre Meter Kit".
06/2023	9K713-2306	Added "Tube Mounted Scraper Kits" *Revision Format "Year/Month" ECN 49503 - Decal Change (Revised 11/2023) Updated ISO logos to ISO 9001:2015 (Revised 04/2024) Updated Torque Chart Formats (Revised 01/2025)
06/2025	9K713-2506	ECN 50859 - 4 Channel Acre Meter Console
09/2025	9K713-2509	ECN 50964, 50978 - 12FT Build (Drawbar, 3-PT, Frame, Carriage Bolts, Lights) ECN 50986, 51014 - 10FT Build (Drawbar, 3-PT, Frame, Carriage Bolts, Lights) ECN 51044, 51067 - 8FT Build (Drawbar, 3-PT, Frame, Carriage Bolts, Lights) ECN 51138 - Transmission Updated Specs (Revised 11/2025)



Equipment from Landoll Company, LLC is built to exacting standards ensured by ISO 9001:2015 registration at all Landoll manufacturing facilities.

Mid-Size Sure Stand Seeder Model SS108/SS110/SS112 SSP108/SSP110/SSP112 Operator's Manual

Re-Order Part Number 9K713

LANDOLL COMPANY, LLC

1900 North Street Marysville, Kansas 66508 (785) 562-5381

800-428-5655 ~ WWW.LANDOLL.COM



Copyright 2025. Landoll Company, LLC

"All rights reserved, including the right to reproduce this material or portions thereof in any form."

